

Eurovac INC.
116 Buttermill Ave, Concord, ON, L4K 3X7
Toll Free Ph. 905-738-9255, Fax: 905-738-4603
Email: info@eurovac.com, Website: <http://www.eurovac.com>

USER AND MAINTENANCE MANUAL

EUROVAC SELF-SUPPORTING FUME ARMS

This manual is designed to inform the user about the proper assembly and use of the device. The user is advised to get fully acquainted with the contents of the manual before installation of the device and to handle the device according to the manual.

CONTENTS

SECTION	Page
I. General information.	3
II. Numbering system	3
III. Purpose.	4
IV. Reservations of the manufacturer.	5
V. Technical data.	5
VI. Construction.	7
VII. Mount and assembly instruction	9
VIII. Use and maintenance instruction and arm adjustment	11
IX. Troubleshooting.	13
X. Safety guidelines.	13
XI. Accessories available.	13
XII. Parts list.	14


I. GENERAL INFORMATION.

This manual contains basic technical data of the self-supporting suction arms type **EUROVAC®** and necessary information about installation, start and use of the devices. Before assembly and use of the device the owner and operator should read this manual carefully in order to fully understand the construction of the device, the principles of its operation, as well as its service and safety features. This will permit safe, efficient operation and assembly of the device. The Manufacturer reserves the right to make design and technological changes, which may improve the device.

The Manufacturer doesn't take any responsibility if the device isn't used according to manual.

II. NUMBERING SYSTEM

The self-supporting suction arms have numbering system as follows:

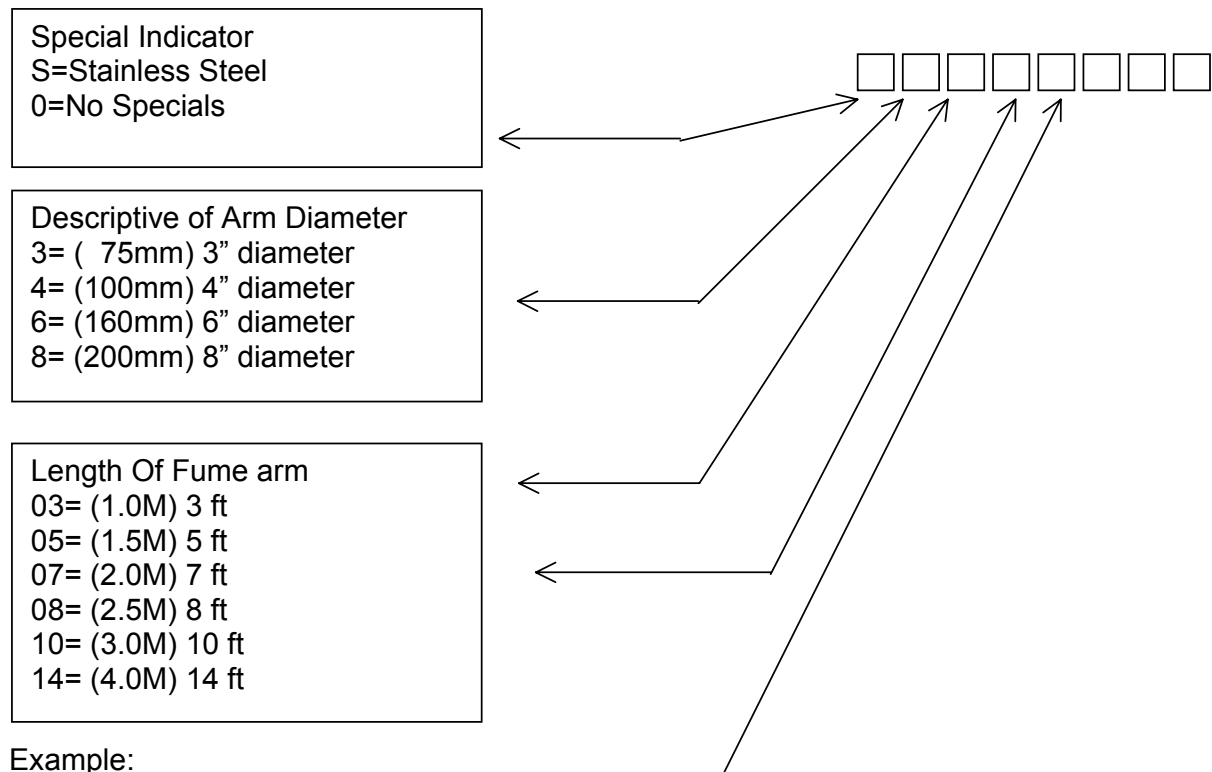

Example:

06141400 – Painted steel self-supporting arm, hanging version, 6" Arm diameter x 14ft long. The next 2 digits signify diameter of the hood. The next digit is for options. The last digit specifies portable mount.

Purpose.

Eurovac self-supporting fume arms are designed to easily locate near the source of fume generation and to easily provide for the extraction of dust and gas emissions in the workplace.

They ensure the most efficient means of protecting the worker from the impurities by removing them before they enter the operators breathing zone. Proper Use of the self-locking joints and the flexible hoses ensures very easy extension of the hood near to the source of the impurities.

Closing of the manual damper allows the operator to divert the air to other units on the same system, which increases efficiency of the complete ventilation ducting.

The Eurovac Self-supporting fume arms can be connected with:

- pivoting extension booms type 5, which enlarge working radius by 3÷19ft (2÷6m)
- different filtering devices or with fans
- energy efficient automatic equipment

Some of the possible areas for use of the Eurovac Arms are:

- welding processes
- gluing, painting, polishing for example
- soldering
- chemicals
- light dusts
- grinding applications

Limitation of use :


- For all non stainless steel versions - corrosive and caustic gases and dust
- For version with light installed in the hood – corrosive, caustic and explosive gases and dust

III. RESERVATIONS OF THE MANUFACTURER.

The Manufacturer reserves the right to make design and technological changes, which may improve the device. Before mounting and use of the arm the owner and operator should read this manual carefully in order to understand fully the construction of the device, the principles of its operation, as well as its service and safety features. This will permit safe, efficient operation and assembly of the device.

The Manufacturer doesn't take any responsibility if the device isn't used according to manual.

IV. TECHNICAL DATA.

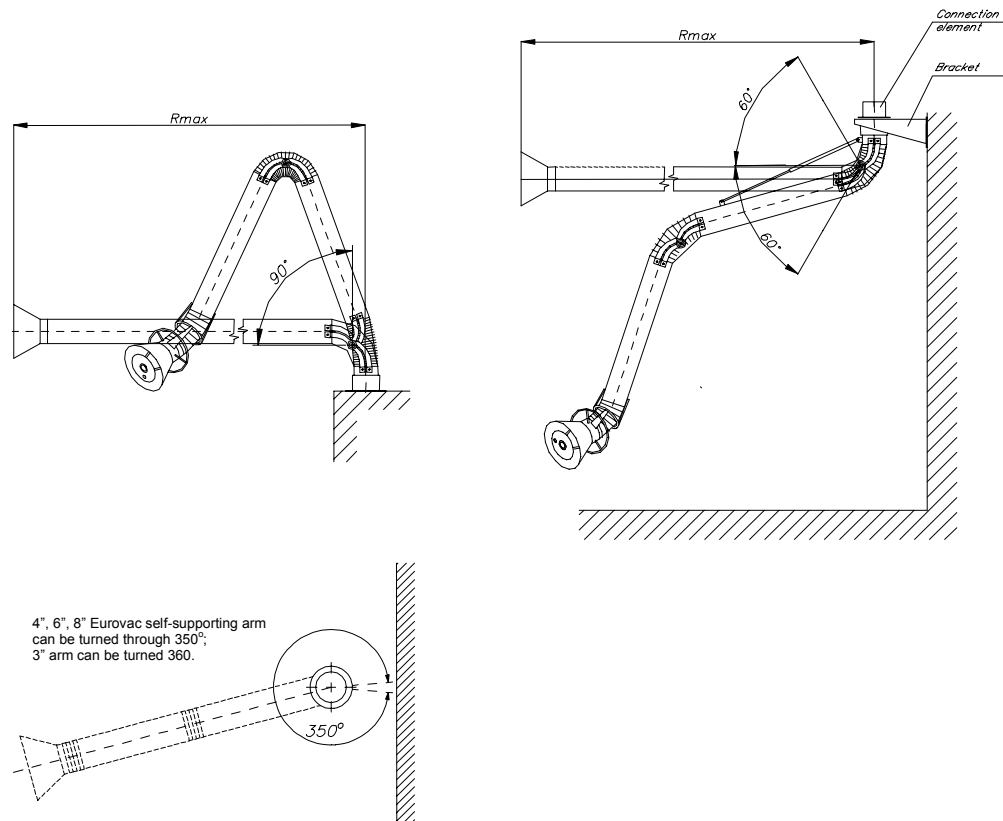

Drawing 1.
Working ranges and reaches of arms.

Eurovac INC.

116 Buttermilk Ave, Concord, ON L4K 3X7
Toll Free Ph. 800-265-3878, Fax: 905-738-4603
Email: info@eurovac.com, Website: http://www.eurovac.com


Table 1. Range of production.

Model		Arm reach R_{max} [feet] / [m]	Arm diameter [inches] / [mm]	Available hood diameter [inches] / [mm]
1	303	3 / 1.0	3 / 76	6 / 160
2	305	5 / 1.5	3 / 76	6 / 160
3	405	5 / 1.5	4 / 100	8 / 200
4	407	7 / 2.0	4 / 100	8 / 200
5	408	8 / 2.5	4 / 100	8 / 200
6	607	7 / 2.0	6 / 160	12 (14) / 315 (350)
7	610	10 / 3.0	6 / 160	12 (14) / 315 (350)
8	614	14 / 4.0	6 / 160	12 (14) / 315 (350)
9	807	7 / 2.0	8 / 200	14 (20) / 350 (500)
10	810	10 / 3.0	8 / 200	14 (20) / 350 (500)
11	814	14 / 4.0	8 / 200	14 (20) / 350 (500)
*** Add prefix "S" to above to order or specify stainless steel arms Add prefix "P" to above to order or specify standing flange mounted arms				

A large variety of hoods can be manufactured to suit a particular requirement.


Different diameters, constructions, material are available.

All hoods are equipped for installation of an optional light kit.

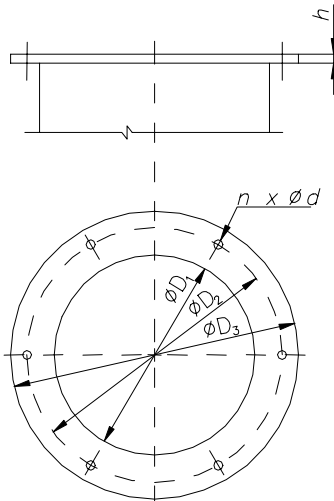Dimensions of mounting flanges EUROVAC fume arms:

Diameter of arms [inches]	n	D [in.]/[mm]	D1 [in.]/[mm]	D2 [in.]/[mm]	D3 [in.]/[mm]	h [in.]/[mm]
3"	4	.26/6.5	2.85/72	4.41/112	4.92/125	.20/5
4"	4	.26/6.5	3.78/94	5.28/134	5.83/148	.20/5
6"	6	.28/7	6.02/153	7.68/195	8.66/220	.26/7
8"	8	.35/9	7.79/198	9.68/246	10.83/275	.35/9

V. CONSTRUCTION.

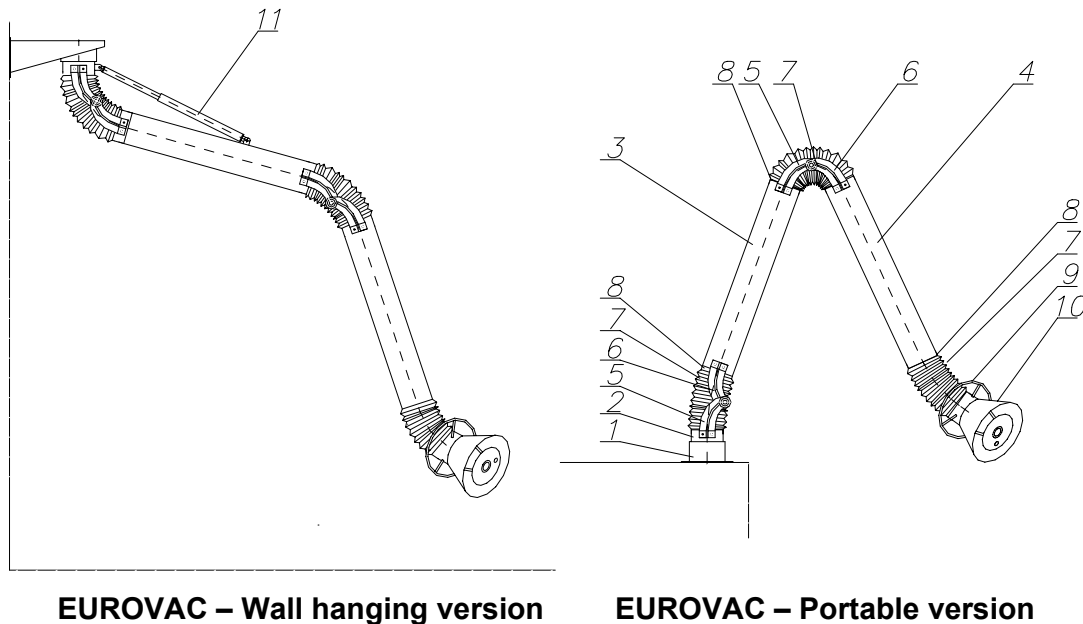

Drawing 2.
Construction of self-supporting suction arm.

- a. The basic components which are in all versions:
- The rotating socket which consists of the outer sleeve (1) (cast aluminium) with the connecting flange and the other inner sleeve (2) (steel). The sleeves for 4", 6", & 8" arms are connected together by means of thread. The rotation of the sleeves in the range of 350° is limited by a stop. Connection 3" arm sleeves doesn't use the thread, and this way it can be rotated around. The Complete Unit is electrostatically powder coated, with "thermo-hardened" paint.
 - The arms I (3) and II (4) - pipes (rolled sheet steel), covered and painted as above.
 - The flat joints inner (5) and outer (6) – For 6" and 8 " versions - Cast Aluminium painted by the electrostatic method (as above), and bolted to the inner sleeve of the rotating socket and to the arm I and II. For 3", 4" version - steel elements also painted and bolted as above.


- The friction joints are separated with the frictional insert and washer. These elements are bolted together.
 - The flexible hose (7) connecting the elements of the self-supporting arm ("bending" of device) is attached by means of gear clamps (8).
 - The hood (10) is fabricated of aluminium sheet with the handle (9), which facilitates easy placement of the unit in the required position. The hood is added according to the version and powder coated with polyestro-epoxide "thermo-hardened" paint.
 - The manual damper installed on the arm tube II (4) near the hood.
- b. Wall mounted (hanging) version:
- Mounted via the flange of the outer sleeve (of rotating socket) to the support structure (bracket) by means of six screws M6 (3/8").
 - To aid the up and down movement of the arm, each 4", 6" and 8" unit is provided with an encapsulated spring (11) and fixed to the inner sleeve of the rotating socket and the tube of arm I.
- c. Portable (standing) version:
- Mounted via the flange of the outer sleeve (of rotating socket) to the support structure by means of bolts M6 (3/8").
 - To aid the up and down movement of the arm, each 4", 6" and 8" unit is provided with a cylinder springs fixed to the inner sleeve of the rotating socket and the tube of arm I. These springs are placed inside the tube.
 - To protect the arm from falling below a certain level, a steel cable is attached parallel to the spring as above (6" and 8" versions).
- d. Optional hood accessories (special order):
- Inlet Hood Grill to prevent rags and large objects from entering the arm.
 - Light Kit with Control Switch for light and/or fan.

VI. MOUNT AND ASSEMBLY INSTRUCTION

Mount instruction:

- The self-supporting suction arm is fixed to the bracket installed on the wall or to the pivoting extension boom that enlarges the working range of the device, or to other element having a connecting flange with dimensions the same as the inner sleeves of the rotating socket.
- **NOTE: THE SOCKET'S AXIS (OF FUME ARM) MUST BE VERTICAL!**
- The rotating socket should be fixed so as the protrusion on the outer sleeve that limits the rotating is opposite the wall, bracket or the pivoting axis of the pivoting extension boom – see Drawing 3 .

Note: In case of the installing the bracket at a height less than 8ft. (2,5m) above the floor, the bracket should be turned up-side-down and replace the standard connector to the welded-high one.

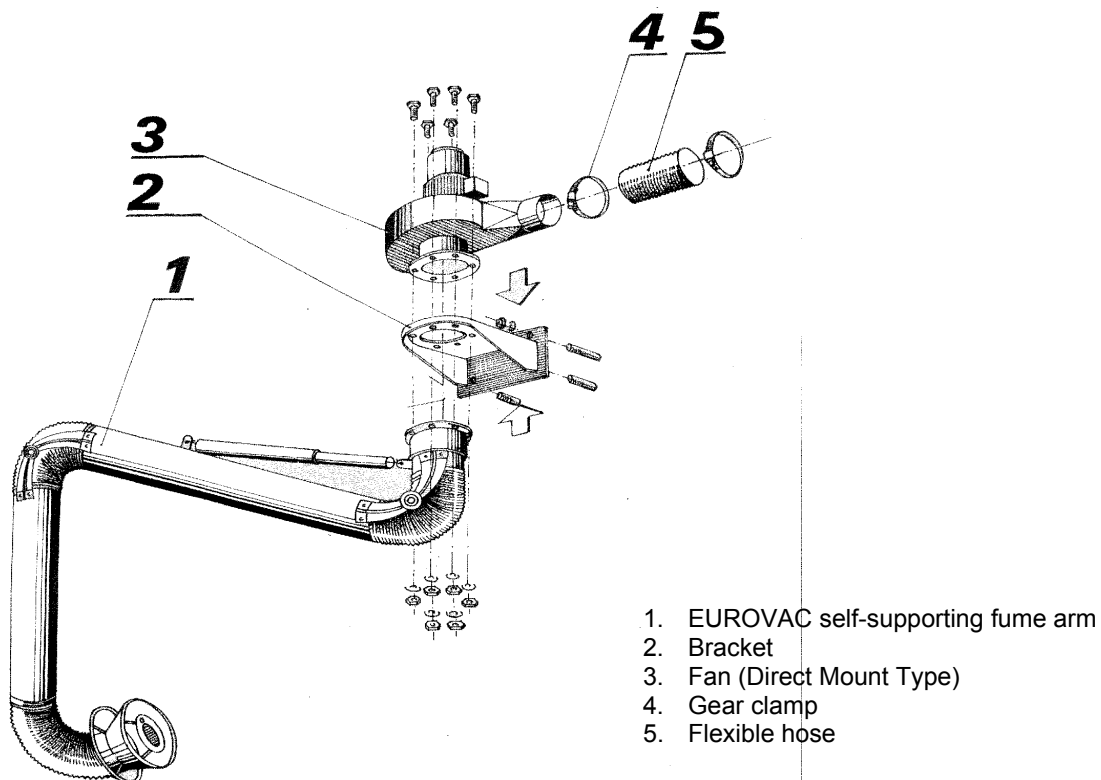


Drawing 3.
Example of the assembly of the self-supporting arm in the ducting.

Eurovac INC.

116 Buttermille Ave, Concord, ON L4K 3X7


Toll Free Ph. 800-265-3878, Fax: 905-738-4603

Email: info@eurovac.com, Website: <http://www.eurovac.com>

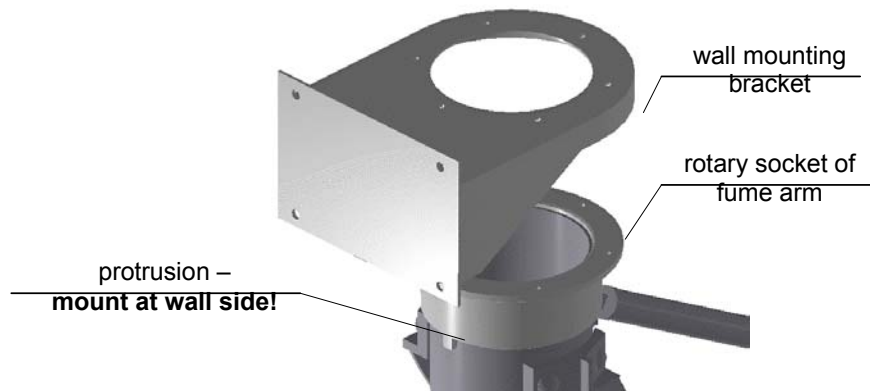

Drawing 4.
Mounting the socket of fume arm.

Mounting optional light kit:

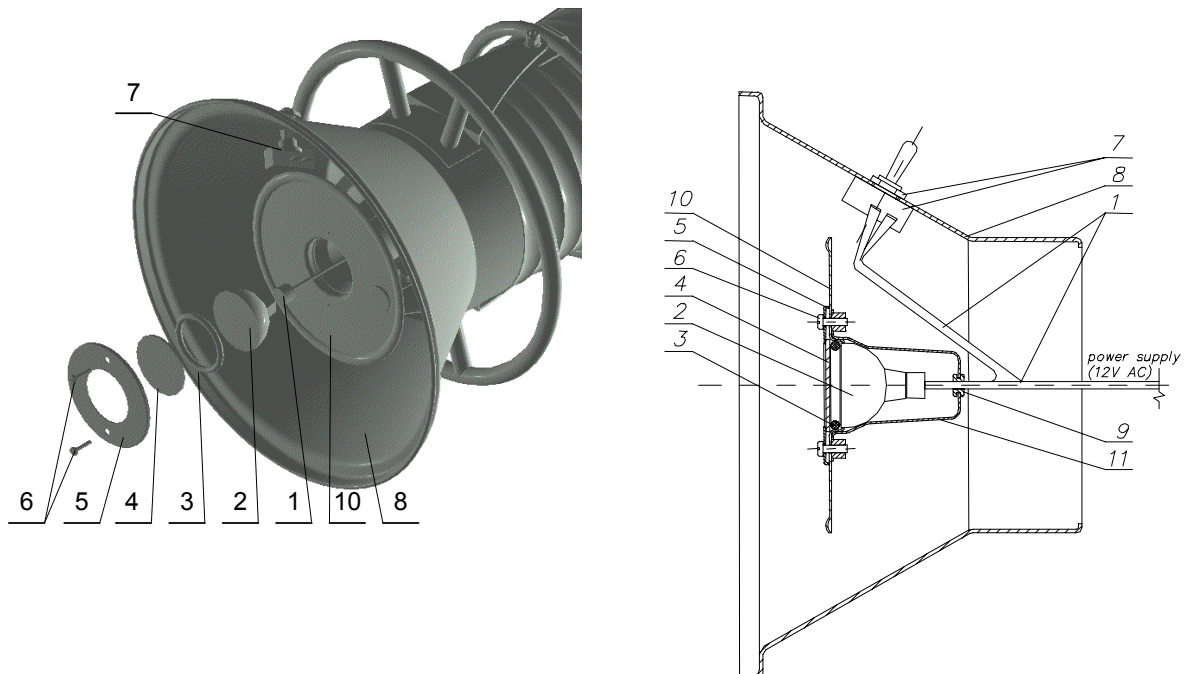

Drawing 5. Light kit mounting.

Before mounting the light kit, remove the plug from the side of the hood (for mounting a control switch) and unscrew the plate at the centre of the hood (for mounting halogen lamp). You need also to remove the hose from the hood joint (4", 6" and 8" versions) or take the hood off (3" version).

After that do as follow:

- place the wire set (1) moving it through the wire seal (9) inside the light kit dome (11)
- 1 wire set
 - 2 halogen lamp („cold type”) 12VAC/35W
 - 3 o-ring seal
 - 4 protecting glass
 - 5 mounting plate
 - 6 bolts
 - 7 control switch
 - 8 hood
 - 9 wire seal
 - 10 shield
 - 11 light kit dome
- connect the control switch (7) to the wire set (1) and mount the switch on the side of hood (8)
 - plug in (connect) the halogen lamp (2) into the wire set socket
 - put halogen lamp (2), o-ring seal (3), protecting glass (4) together and place them inside the hood
 - install the mounting plate (5) with using the bolts (6).

VII. USE AND MAINTENANCE INSTRUCTION AND ARM ADJUSTEMENT

The installed self-supporting arm should be checked for freedom of movement and rotation of the socket. If excessive resistance exists at the joints, adjustment must be carried out. It is recommended to spray the hood (before work, each day) with antispatter preparation. It will make easier cleaning of the device every day.

The maintenance of the device is carried out periodically as follows:


- a) every day
 - Clean inner surface of the hood and outer surface of the arm.
 - Check self-locking of the arms and the hood, and adjust it if it is necessary.
- b) once per month
 - Grease the rotating socket with bearing grease which does not react with aluminium.
 - Check self-locking and adjust if necessary.
- c) once every 3 months
 - Disassemble the flexible hoses; clean up the inside of the self-supporting arm (warm water with detergent).
 - Replace the glass panel in the spotlight.

Adjustment.

For adjustment of any joint You need to use two spanners.

Adjustment is made with arm horizontally levelled.

- Adjust the 1st set of the flat joints between the arms by holding the Bolt and Tightening the self-locking nuts on the joint pairs. With 3" version of arms You need one spanner; knob nuts placed in this version are used for locking the nuts.
- Adjust the 2nd set as above.
 The horizontally positioned arm shouldn't fall down when letting go.
- Adjust the hood joint (3rd) with the same way as described above.

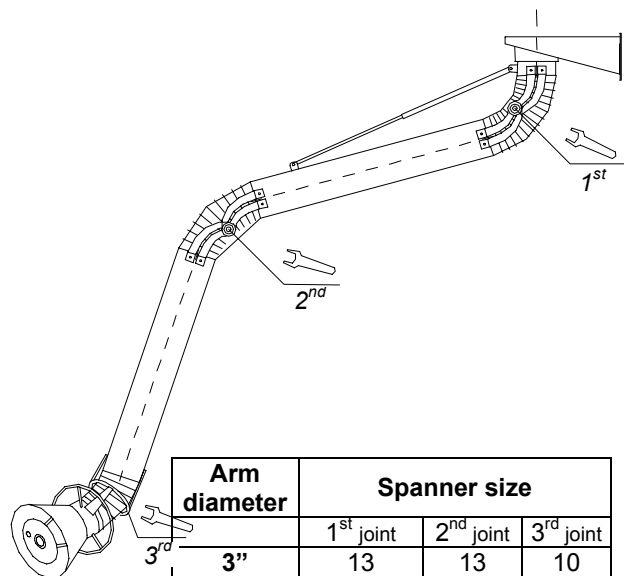

Arm diameter	Spanner size		
	1 st joint	2 nd joint	3 rd joint
3"	13	13	10
4"	17	17	10
6"	21	21	13
8"	21	21	13

VIII. TROUBLESHOOTING.

Symptoms	Possible reasons	Solution
The arm will not stay where it is placed	The joints require adjustment	Adjust the joints (item VIII)
Stronger resistance during rotation of the arm	Lack of grease in the rotating socket	Grease the rotating socket
Decrease in air volume	A/ Hose not properly connected to Arm tubes. B/ The flexible hose is damaged. C/ The Damper is closed	A/Reconnect Hose. B/ Replace Damaged Hoses. C/ Open Arm Damper

IX. SAFETY GUIDELINES.

For the safe operation of the EUROVAC self-supporting fume arms:

- DO NOT rotate the arm beyond the noticeable "resistance" (4", 6" and 8" versions).
- DO NOT bend it beyond vertical axis of the rotating socket.

X. ACCESSORIES AVAILABLE.

- **Light kit** – Complete set of halogen lamp with control switch, set of wires and mounting elements, destined to be placed in the hood.
- **Hoods** – it's possible to get hoods with diameter $\phi 14"$ for 6" arm diameter, $\phi 20"$ for 8" arm diameter. Also a gap hoods are available.
- **Mounting brackets** – the brackets are destined to mount the arm on the wall – see Drawing 2. There are brackets for all types of EUROVAC arms.
- **Fans** – centrifugal units which can be mounted on the brackets together with arm or in the ducting (e.g. Drawing 2).
- **Pivoting booms** – devices which enlarge the working range of arm.

XI. PARTS LIST.

Parts list (refer to Drawings 6÷14):

φ6" hanging version

No	Description	Quantity	Arm model					
			607	610	614	S607	S610	S614
			Art. no					
1	Joint 1	1	1620-1	1630-1	1640-1	S1620-1	S1630-1	S1640-1
2	Joint 2	1	1620-2	1630-2	1640-2	S1620-2	S1630-2	S1640-2
3	Joint 3	1	1620-3	1630-3	1640-3	S1620-3	S1630-3	S1640-3
4	Joint 4	1	1620-4	1630-4	1640-4	S1620-4	S1630-4	S1640-4
5	Joint 5	1	1620-5	1630-5	1640-5	S1620-5	S1630-5	S1640-5
6	Joint 6	1	1620-6	1630-6	1640-6	S1620-6	S1630-6	S1640-6
7	Joint 7	1	1620-7	1630-7	1640-7	S1620-7	S1630-7	S1640-7
8	Joint 8	1	1620-8	1630-8	1640-8	S1620-8	S1630-8	S1640-8
9	Friction insert I 70	2	1620-9	1630-9	1640-9	S1620-9	S1630-9	S1640-9
10	Friction insert II 60	2	1620-10	1630-10	1640-10	S1620-10	S1630-10	S1640-10
12	Tube I 160	1	1620-12	1630-12	1640-12	S1620-12	S1630-12	S1640-12
13	Tube II 160	1	1620-13	1630-13	1640-13	S1620-13	S1630-13	S1640-13
14	Reinforcing element I 160	3	1620-14	1630-14	1640-14	S1620-14	S1630-14	S1640-14
16	Reinforcing element III 160	1	-	-	1640-16	-	-	S1640-16
17	Catch 1 36	1	1620-17	1630-17	1640-17	S1620-17	S1630-17	S1640-17
18	Catch 2 32	1	1620-18	1630-18	1640-18	S1620-18	S1630-18	S1640-18
19	Bracket I 160	1	1620-19	1630-19	1640-19	S1620-19	S1630-19	S1640-19
19a	Bracket II 160	1	1620-19a	1630-19a	1640-19a	S1620-19a	S1630-19a	S1640-19a
20	Spring I, l=600	1	1620-20	1630-20	1640-20	S1620-20	S1630-20	S1640-20
21	Spring II, l=190	-	-	-	-	-	-	-
22	Outer sleeve 160	1	1620-22	1630-22	1640-22	S1620-22	S1630-22	S1640-22
24	Inner sleeve 160	1	1620-24	1630-24	1640-24	S1620-24	S1630-24	S1640-24
25	Orifice 160	1	1620-25	1630-25	1640-25	S1620-25	S1630-25	S1640-25
26	Axle I	1	1620-26	1630-26	1640-26	S1620-26	S1630-26	S1640-26
27	Axle II	1	1620-27	1630-27	1640-27	S1620-27	S1630-27	S1640-27
28	Lever	1	1620-28	1630-28	1640-28	S1620-28	S1630-28	S1640-28
29	Sleeve	2	1620-29	1630-29	1640-29	S1620-29	S1630-29	S1640-29
30	Support plate	1	1620-30	1630-30	1640-30	S1620-30	S1630-30	S1640-30
31	Screw with mushroom head M10x30-4.8	8	1620-31	1630-31	1640-31	S1620-31	S1630-31	S1640-31
32	Nut M10-5-C	8	1620-32	1630-32	1640-32	S1620-32	S1630-32	S1640-32
33a	Regular washer 10.5	2	1620-33a	1630-33a	1640-33a	S1620-33a	S1630-33a	S1640-33a
34	Spring washer Z10.2	8	1620-34	1630-34	1640-34	S1620-34	S1630-34	S1640-34
35	Screw with mushroom head M8x30-4.8	8	1620-35	1630-35	1640-35	S1620-35	S1630-35	S1640-35
36	Nut M8-5-C	9	1620-36	1630-36	1640-36	S1620-36	S1630-36	S1640-36
38	Spring washer Z8.2	9	1620-38	1630-38	1640-38	S1620-38	S1630-38	S1640-38
39	Screw M6x20-3.6-C	6 for 14ft, 4 for other	1620-39	1630-39	1640-39	S1620-39	S1630-39	S1640-39
40	Regular washer 6.4	8 for 14ft, 6 for other	1620-40	1630-40	1640-40	S1620-40	S1630-40	S1640-40

Eurovac INC.

116 Buttermille Ave, Concord, ON L4K 3X7
Toll Free Ph. 800-265-3878, Fax: 905-738-4603

Email: info@eurovac.com, Website: <http://www.eurovac.com>

41	Spring washer Z6.1	9 for 14ft, 7 for other	1620-41	1630-41	1640-41	S1620-41	S1630-41	S1640-41
42	Nut M6-5-C	8 for 14ft, 6 for other	1620-42	1630-42	1640-42	S1620-42	S1630-42	S1640-42
43	Screw M6x25	2	1620-43	1630-43	1640-43	S1620-43	S1630-43	S1640-43
44	Regular washer 6.4	2	1620-44	1630-44	1640-44	S1620-44	S1630-44	S1640-44
44a	Regular washer 6.4	2	1620-44a	1630-44a	1640-44a	S1620-44a	S1630-44a	S1640-44a
45	Self-locking nut M6-5-C	2	1620-45	1630-45	1640-45	S1620-45	16-45	S1640-45
46	Self-locking nut M14x1.5-5-B	4	1620-46	1630-46	1640-46	S1620-46	S1630-46	S1640-46
47	Disk spring DI 60x14.5x3	4	1620-47	1630-47	1640-47	S1620-47	S1630-47	S1640-47
48	Disk spring DI 50x14.5x2.2	4	1620-48	1630-48	1640-48	S1620-48	S1630-48	S1640-48
49	Aluminium pipe □36x1, l=600	1	1620-49	1630-49	1640-49	S1620-49	S1630-49	S1640-49
50	Aluminium pipe □32x1, l=600	1	1620-50	1630-50	1640-50	S1620-50	S1630-50	S1640-50
57	Screw M14x1.5x60-8.8-B	2	1620-57	1630-57	1640-57	S1620-57	S1630-57	S1640-57
58	Screw M14x1.5x55-8.8-B	2	1620-58	1630-58	1640-58	S1620-58	S1630-58	S1640-58
60	Hood φ315/160	1	1620-60	1630-60	1640-60	S1620-60	S1630-60	S1640-60
61	Handle 160	1	1620-61	1630-61	1640-61	S1620-61	S1630-61	S1640-61
62	Light kit dome	1	1620-62	1630-62	1640-62	S1620-62	S1630-62	S1640-62
63	Shutter of inlet 160	1	1620-63	1630-63	1640-63	S1620-63	S1630-63	S1640-63
64	Wire seal GH6	1	1620-64	1630-64	1640-64	S1620-64	S1630-64	S1640-64
65	Protecting plate	1	1620-65	1630-65	1640-65	S1620-65	S1630-65	S1640-65
66	Screw WP M4x16	2	1620-66	1630-66	1640-66	S1620-66	S1630-66	S1640-66
67	Plug I	1	1620-67	1630-67	1640-67	S1620-67	S1630-67	S1640-67
68	Plug II	1	1620-68	1630-68	1640-68	S1620-68	S1630-68	S1640-68
69	Regular washer 15 (for wood construction)	6	1620-69	1630-69	1640-69	S1620-69	S1630-69	S1640-69
70	Screw with mushroom head M6x16-4.8	2	1620-70	1630-70	1640-70	S1620-70	S1630-70	S1640-70
73	Lubricating nipple C M8x1	1	1620-73	1630-73	1640-73	S1620-73	S1630-73	S1640-73
74	Wing nut M6	1	1620-74	1630-74	1640-74	S1620-74	S1630-74	S1640-74
75	Internal wrenching screw M8x20-8.8	1	1620-75	1630-75	1640-75	S1620-75	S1630-75	S1640-75
79	Steel rivet □3.2x8	4	1620-79	1630-79	1640-79	S1620-79	S1630-79	S1640-79
79a	Steel rivet □3.2x8	8	1620-79	1630-79	1640-79	S1620-79	S1630-79	S1640-79
79b	Steel rivet □3.2x8	4	1620-79	1630-79	1640-79	S1620-79	S1630-79	S1640-79
80	Handle	1	1620-80	1630-80	1640-80	S1620-80	S1630-80	S1640-80
81	Flexible hose ST-160, l=535mm (21")	1	1620-81	1630-81	1640-81	S1620-81	S1630-81	S1640-81
82	Gear clamp OST-160	6	1620-82	1630-82	1640-82	S1620-82	S1630-82	S1640-82
84	Flexible hose ST-160 l=640mm (25")	1	1620-84	1630-84	1640-84	S1620-84	S1630-84	S1640-84
85	Flexible hose ST-160 l=430mm (17")	1	1620-85	1630-85	1640-85	S1620-85	S1630-85	S1640-85
86	Telescope clamp	1	1620-86	1630-86	1640-86	S1620-86	S1630-86	S1640-86
P1	Joint's wheel 160	1	1620-P1	1630-P1	1640-P1	S1620-P1	S1630-P1	S1640-P1
P2	Connector I	4	1620-P2	1630-P2	1640-P2	S1620-P2	S1630-P2	S1640-P2
P3	Screw M8x20	12	1620-P3	1630-P3	1640-P3	S1620-P3	S1630-P3	S1640-P3
P4	Self-locking nut M8	12	1620-P4	1630-P4	1640-P4	S1620-P4	S1630-P4	S1640-P4

Eurovac INC.

116 Buttermille Ave, Concord, ON L4K 3X7

Toll Free Ph. 800-265-3878, Fax: 905-738-4603

Email: info@eurovac.com, Website: <http://www.eurovac.com>

P5	Regular washer 8.4 C	12	1620-P5	1630-P5	1640-P5	S1620-P5	S1630-P5	S1640-P5
P7	Friction insert $\phi 30 \times 8 \times 6$	4	1620-P7	1630-P7	1640-P7	S1620-P7	S1630-P7	S1640-P7
P8	Reinforcing element IV	1	1620-P8	1630-P8	1640-P8	S1620-P8	S1630-P8	S1640-P8
P9	Disk spring 12.5x6.2x1	8	1620-P9	1630-P9	1640-P9	S1620-P9	S1630-P9	S1640-P9

φ6" standing version

No	Description	Quantity	Arm model					
			0607P	0610P	0614P	S607P	S610P	S614P
			Art. no					
1	Joint 1	1	1620P-1	1630P-1	1640P-1	S1620P-1	S1630P-1	S1640P-1
2	Joint 2	1	1620P-2	1630P-2	1640P-2	S1620P-2	S1630P-2	S1640P-2
3	Joint 3	1	1620P-3	1630P-3	1640P-3	S1620P-3	S1630P-3	S1640P-3
4	Joint 4	1	1620P-4	1630P-4	1640P-4	S1620P-4	S1630P-4	S1640P-4
5	Joint 5	1	1620P-5	1630P-5	1640P-5	S1620P-5	S1630P-5	S1640P-5
6	Joint 6	1	1620P-6	1630P-6	1640P-6	S1620P-6	S1630P-6	S1640P-6
7	Joint 7	1	1620P-7	1630P-7	1640P-7	S1620P-7	S1630P-7	S1640P-7
8	Joint 8	1	1620P-8	1630P-8	1640P-8	S1620P-8	S1630P-8	S1640P-8
9	Friction insert I 70	2	1620P-9	1630P-9	1640P-9	S1620P-9	S1630P-9	S1640P-9
10	Friction insert II 60	2	1620P-10	1630P-10	1640P-10	S1620P-10	S1630P-10	S1640P-10
12	Tube I 160	1	1620P-12	1630P-12	1640P-12	S1620P-12	S1630P-12	S1640P-12
13	Tube II 160	1	1620P-13	1630P-13	1640P-13	S1620P-13	S1630P-13	S1640P-13
14	Reinforcing element I 160	2	1620P-14	1630P-14	1640P-14	S1620P-14	S1630P-14	S1640P-14
15	Reinforcing element II 160	1	1620P-15	1630P-15	1640P-15	S1620P-15	S1630P-15	S1640P-15
21	Spring II, l=190	2	1620P-21	1630P-21	1640P-21	S1620P-21	S1630P-21	S1640P-21
22	Outer sleeve 160	1	1620P-22	1630P-22	1640P-22	S1620P-22	S1630P-22	S1640P-22
23	Inner sleeve 160	1	1620P-23	1630P-23	1640P-23	S1620P-23	S1630P-23	S1640P-23
25	Orifice 160	1	1620P-25	1630P-25	1640P-25	S1620P-25	S1630P-25	S1640P-25
26	Axis I	1	1620P-26	1630P-26	1640P-26	S1620P-26	S1630P-26	S1640P-26
27	Axis II	1	1620P-27	1630P-27	1640P-27	S1620P-27	S1630P-27	S1640P-27
28	Lever	1	1620P-28	1630P-28	1640P-28	S1620P-28	S1630P-28	S1640P-28
29	Sleeve	2	1620P-29	1630P-29	1640P-29	S1620P-29	S1630P-29	S1640P-29
30	Support plate	1	1620P-30	1630P-30	1640P-30	S1620P-30	S1630P-30	S1640P-30
31	Screw with mushroom head M10x30-4.8	8	1620P-31	1630P-31	1640P-31	S1620P-31	S1630P-31	S1640P-31
32	Nut M10-5-C	8	1620P-32	1630P-32	1640P-32	S1620P-32	S1630P-32	S1640P-32
33a	Regular washer 10.5	10	1620P-33a	1630P-33a	1640P-33a	S1620P-33a	S1630P-33a	S1640P-33a
34	Spring washer Z10.2	8	1620P-34	1630P-34	1640P-34	S1620P-34	S1630P-34	S1640P-34
35	Screw with mushroom head M8x30-4.8	8	1620P-45	1630P-45	1640P-45	S1620P-45	S1630P-45	S1640P-45
36	Nut M8-5-C	9	1620P-36	1630P-36	1640P-36	S1620P-36	S1630P-36	S1640P-36

37	Regular washer 8.2	1	1620P-37	1630P-37	1640P-37	S1620P-37	S1630P-37	S1640P-37
38	Spring washer Z8.2	9	1620P-38	1630P-38	1640P-38	S1620P-38	S1630P-38	S1640P-38
41	Spring washer Z6.1	2	1620P-41	1630P-41	1640P-41	S1620P-41	S1630P-41	S1640P-41
42	Nut M6-5-C	2	1620P-42	1630P-42	1640P-42	S1620P-42	S1630P-42	S1640P-42
46	Self-locking nut M14x1.5-5-B	4	1620P-46	1630P-46	1640P-46	S1620P-46	S1630P-46	S1640P-46
47	Disk spring DI 60x14.5x3	4	1620P-47	1630P-47	1640P-47	S1620P-47	S1630P-47	S1640P-47
48	Disk spring DI 50x14.5x2.2	4	1620P-48	1630P-48	1640P-48	S1620P-48	S1630P-48	S1640P-48
51	Steel cable □3.5, l=450	1	1620P-51	1630P-51	1640P-51	S1620P-51	S1630P-51	S1640P-51
52	Bow rope clamp 5	1	1620P-52	1630P-52	1640P-52	S1620P-52	S1630P-52	S1640P-52
53	Screw M8x25-3.6-C	1	1620P-53	1630P-53	1640P-53	S1620P-53	S1630P-53	S1640P-53
54	Self-locking nut M8-5-B	1	1620P-54	1630P-54	1640P-54	S1620P-54	S1630P-54	S1640P-54
55	Clamping eye □10.5	1	1620P-55	1630P-55	1640P-55	S1620P-55	S1630P-55	S1640P-55
57	Screw M14x1.5x60-8.8-B	2	1620P-57	1630P-57	1640P-57	S1620P-57	S1630P-57	S1640P-57
58	Screw M14x1.5x55-8.8-B	2	1620P-58	1630P-58	1640P-58	S1620P-58	S1630P-58	S1640P-58
60	Hood φ315/160	1	1620P-60	1630P-60	1640P-60	S1620P-60	S1630P-60	S1640P-60
61	Handle 160	1	1620P-61	1630P-61	1640P-61	S1620P-61	S1630P-61	S1640P-61
62	Light kit dome	1	1620P-62	1630P-62	1640P-62	S1620P-62	S1630P-62	S1640P-62
63	Shutter of inlet 160	1	1620P-63	1630P-63	1640P-63	S1620P-63	S1630P-63	S1640P-63
64	Wire seal GH6	1	1620P-64	1630P-64	1640P-64	S1620P-64	S1630P-64	S1640P-64
65	Protecting plate	1	1620P-65	1630P-65	1640P-65	S1620P-65	S1630P-65	S1640P-65
66	Screw WP M4x16	2	1620P-66	1630P-66	1640P-66	S1620P-66	S1630P-66	S1640P-66
67	Plug I	1	1620P-67	1630P-67	1640P-67	S1620P-67	S1630P-67	S1640P-67
68	Plug II	1	1620P-68	1630P-68	1640P-68	S1620P-68	S1630P-68	S1640P-68
69	Regular washer 15 (for wood construction)	6	1620P-69	1630P-69	1640P-69	S1620P-69	S1630P-69	S1640P-69
70	Screw with mushroom head M6x16-4.8	2	1620P-70	1630P-70	1640P-70	S1620P-70	S1630P-70	S1640P-70
73	Lubricating nipple C M8x1	1	1620P-73	1630P-73	1640P-73	S1620P-73	S1630P-73	S1640P-73
74	Wing nut M6	1	1620P-74	1630P-74	1640P-74	S1620P-74	S1630P-74	S1640P-74
75	Internal wrenching screw M8x20-8.8	1	1620P-75	1630P-75	1640P-75	S1620P-75	S1630P-75	S1640P-75

Eurovac INC.

116 Buttermilk Ave, Concord, ON L4K 3X7
Toll Free Ph. 800-265-3878, Fax: 905-738-4603

Email: info@eurovac.com, Website: <http://www.eurovac.com>

79	Steel rivet □3.2x8	4	1620P-79	1630P-79	1640P-79	S1620P-79	S1630P-79	S1640P-79
79b	Steel rivet □3.2x8	4	1620P-79	1630P-79	1640P-79	S1620P-79	S1630P-79	S1640P-79
80	Handle	1	1620P-80	1630P-80	1640P-80	S1620P-80	S1630P-80	S1640P-80
81	Flexible hose ST-160, l=535mm (21")	1	1620P-81	1630P-81	1640P-81	S1620P-81	S1630P-81	S1640P-81
82	Gear clamp OST-160	6	1620P-82	1630P-82	1640P-82	S1620P-82	S1630P-82	S1640P-82
84	Flexible hose ST-160 l=640mm (25")	1	1620P-84	1630P-84	1640P-84	S1620P-84	S1630P-84	S1640P-84
85	Flexible hose ST-160 l=430mm (17")	1	1620P-85	1630P-85	1640P-85	S1620P-85	S1630P-85	S1640P-85
P1	Joint's wheel 160	1	1620P-P1	1630P-P1	1640P-P1	S1620P-P1	S1630P-P1	S1640P-P1
P2	Connector I	4	1620P-P2	1630P-P2	1640P-P2	S1620P-P2	S1630P-P2	S1640P-P2
P3	Screw M8x20	12	1620P-P3	1630P-P3	1640P-P3	S1620P-P3	S1630P-P3	S1640P-P3
P4	Self-locking nut M8	12	1620P-P4	1630P-P4	1640P-P4	S1620P-P4	S1630P-P4	S1640P-P4
P5	Regular washer 8.4 C	12	1620P-P5	1630P-P5	1640P-P5	S1620P-P5	S1630P-P5	S1640P-P5
P7	Friction insert φ30x8x6	4	1620P-P7	1630P-P7	1640P-P7	S1620P-P7	S1630P-P7	S1640P-P7
P8	Reinforcing element IV	1	1620P-P8	1630P-P8	1640P-P8	S1620P-P8	S1630P-P8	S1640P-P8
P9	Disk spring 12.5x6.2x1	8	1620P-P9	1630P-P9	1640P-P9	S1620P-P9	S1630P-P9	S1640P-P9

φ8" – hanging version

No	Description	Quantity	Arm model					
			0807	0810	0814	S807	S810	S814
			Art. no					
1	Joint 13	1	2020-1	2030-1	2040-1	S2020-1	S2030-1	S2040-1
2	Joint 14	1	2020-2	2030-2	2040-2	S2020-2	S2030-2	S2040-2
3	Joint 15	1	2020-3	2030-3	2040-3	S2020-3	S2030-3	S2040-3
4	Joint 16	1	2020-4	2030-4	2040-4	S2020-4	S2030-4	S2040-4
5	Joint 13	1	2020-5	2030-5	2040-5	S2020-5	S2030-5	S2040-5
6	Joint 14	1	2020-6	2030-6	2040-6	S2020-6	S2030-6	S2040-6
7	Joint 15	1	2020-7	2030-7	2040-7	S2020-7	S2030-7	S2040-7
8	Joint 16	1	2020-8	2030-8	2040-8	S2020-8	S2030-8	S2040-8
9	Friction insert I 70	2	2020-9	2030-9	2040-9	S2020-9	S2030-9	S2040-9
10	Friction insert II 60	2	2020-10	2030-10	2040-10	S2020-10	S2030-10	S2040-10
12	Tube I 200	1	2020-10	2030-10	2040-10	S2020-10	S2030-10	S2040-10
13	Tube II 200	1	2020-13	2030-13	2040-13	S2020-13	S2030-13	S2040-13
14	Reinforcing element I 200	3	2020-14	2030-14	2040-14	S2020-14	S2030-14	S2040-14
16	Reinforcing element III 200 (telescope)	1	-	-	2040-16	-	-	S2040-16
17	Catch 1 36	1	2020-17	2030-17	2040-17	S2020-17	S2030-17	S2040-17
18	Catch 2 32	1	2020-18	2030-18	2040-18	S2020-18	S2030-18	S2040-18
19	Bracket I 200	1	2020-19	2030-19	2040-19	S2020-19	S2030-19	S2040-19
19a	Bracket II 200	1	2020-19a	2030-19a	2040-19a	S2020-19a	S2030-19a	S2040-19a
20	Spring I, I=900	1	2020-20	2030-20	2040-20	S2020-20	S2030-20	S2040-20
22	Outer sleeve 200	1	2020-22	2030-22	2040-22	S2020-22	S2030-22	S2040-22
24	Inner sleeve 200	1	2020-24	2030-24	2040-24	S2020-24	S2030-24	S2040-24
25	Orifice 200	1	2020-25	2030-25	2040-25	S2020-25	S2030-25	S2040-25
26	Axle I	1	2020-26	2030-26	2040-26	S2020-26	S2030-26	S2040-26
27	Axle II	1	2020-27	2030-27	2040-27	S2020-27	S2030-27	S2040-27
28	Lever	1	2020-28	2030-28	2040-28	S2020-28	S2030-28	S2040-28
29	Sleeve	2	2020-29	2030-29	2040-29	S2020-29	S2030-29	S2040-29
30	Support plate	1	2020-30	2030-30	2040-30	S2020-30	S2030-30	S2040-30
31	Screw with mushroom head M10x30-4.8	8	2020-31	2030-31	2040-31	S2020-31	S2030-31	S2040-31
32	Nut M10-5-C	8	2020-32	2030-32	2040-32	S2020-32	S2030-32	S2040-32
33a	Regular washer 10.5	2	2020-33a	2030-33a	2040-33a	S2020-33a	S2030-33a	S2040-33a
34	Spring washer Z10.2	8	2020-34	2030-34	2040-34	S2020-34	S2030-34	S2040-34
35	Screw with mushroom head M10x30-4.8	8	2020-35	2030-35	2040-35	S2020-35	S2030-35	S2040-35
36	Nut M10-5-C	9	2020-36	2030-36	2040-36	S2020-36	S2030-36	S2040-36
38	Spring washer Z10.2	9	2020-38	2030-38	2040-38	S2020-38	S2030-38	S2040-38
39	Screw M6x20-3.6-C	6	2020-39	2030-39	2040-39	S2020-39	S2030-39	S2040-39
40	Regular washer 6.4	8	2020-40	2030-40	2040-40	S2020-40	S2030-40	S2040-40
41	Spring washer Z6.1	9	2020-41	2030-41	2040-41	S2020-41	S2030-41	S2040-41
42	Nut M6-5-C	8	2020-42	2030-42	2040-42	S2020-42	S2030-42	S2040-42
43	Screw M6x25	2	2020-43	2030-43	2040-43	S2020-43	S2030-43	S2040-43
44	Regular washer 6.4	2	2020-44	2030-44	2040-44	S2020-44	S2030-44	S2040-44

44a	Regular washer 6.4	2	2020-44a	2030-44a	2040-44a	S2020-44a	S2030-44a	S2040-44a
45	Self-locking nut M6-5-C	2	2020-45	2030-45	2040-45	S2020-45	S2030-45	S2040-45
46	Self-locking nut M14x1.5-5-B	4	2020-46	2030-46	2040-46	S2020-46	S2030-46	S2040-46
47	Disk spring DI 60x14.5x3	4	2020-47	2030-47	2040-47	S2020-47	S2030-47	S2040-47
48	Disk spring DI 50x14.5x2.2	4	2020-48	2030-48	2040-48	S2020-48	S2030-48	S2040-48
49	Aluminium pipe □36x1, l=900	1	2020-49	2030-49	2040-49	S2020-49	S2030-49	S2040-49
50	Aluminium pipe □32x1, l=900	1	2020-50	2030-50	2040-50	S2020-50	S2030-50	S2040-50
57	Screw M14x1.5x60-8.8-B	2	2020-57	2030-57	2040-57	S2020-57	S2030-57	S2040-57
58	Screw M14x1.5x55-8.8-B	2	2020-58	2030-58	2040-58	S2020-58	S2030-58	S2040-58
60	Hood φ350/200	1	2020-60	2030-60	2040-60	S2020-60	S2030-60	S2040-60
61	Handle 200	1	2020-61	2030-61	2040-61	S2020-61	S2030-61	S2040-61
62	Light kit dome	1	2020-62	2030-62	2040-62	S2020-62	S2030-62	S2040-62
63	Shutter of inlet	1	2020-63	2030-63	2040-63	S2020-63	S2030-63	S2040-63
64	Wire seal GH6	1	2020-64	2030-64	2040-64	S2020-64	S2030-64	S2040-64
65	Protecting plate	1	2020-65	2030-65	2040-65	S2020-65	S2030-65	S2040-65
66	Screw WP M4x16	2	2020-66	2030-66	2040-66	S2020-66	S2030-66	S2040-66
67	Plug I	1	2020-67	2030-67	2040-67	S2020-67	S2030-67	S2040-67
68	Plug II	1	2020-68	2030-68	2040-68	S2020-68	S2030-68	S2040-68
69	Regular washer 15 (for wood construction)	6	2020-69	2030-69	2040-69	S2020-69	S2030-69	S2040-69
70	Screw with mushroom head M6x16-4.8	2	2020-70	2030-70	2040-70	S2020-70	S2030-70	S2040-70
71	Regular washer 6.4	1	2020-71	2030-71	2040-71	S2020-71	S2030-71	S2040-71
72	Self-locking nut M6	1	2020-72	2030-72	2040-72	S2020-72	S2030-72	S2040-72
73	Lubricating nipple C M8x1	1	2020-73	2030-73	2040-73	S2020-73	S2030-73	S2040-73
74	Wing nut M6	1	2020-74	2030-74	2040-74	S2020-74	S2030-74	S2040-74
75	Internal wrenching screw M8x20-8.8	1	2020-75	2030-75	2040-75	S2020-75	S2030-75	S2040-75
79	Steel rivet □3.2x8	4	2020-79	2030-79	2040-79	S2020-79	S2030-79	S2040-79
79a	Steel rivet □3.2x8	8	2020-79	2030-79	2040-79	S2020-79	S2030-79	S2040-79
79b	Steel rivet □3.2x8	4	2020-79	2030-79	2040-79	S2020-79	S2030-79	S2040-79
80	Handle	1	2020-80	2030-80	2040-80	S2020-80	S2030-80	S2040-80
81	Flexible hose ST-200, l=610mm (24")	1	2020-81	2030-81	2040-81	S2020-81	S2030-81	S2040-81
82	Gear clamp OST-200	6	2020-82	2030-82	2040-82	S2020-82	S2030-82	S2040-82
84	Flexible hose ST-200 l=720mm (28")	1	2020-84	2030-84	2040-84	S2020-84	S2030-84	S2040-84
85	Flexible hose ST-200 l=465mm (18")	1	2020-85	2030-85	2040-85	S2020-85	S2030-85	S2040-85
86	Clamp – part I	1	2020-86	2030-86	2040-86	S2020-86	S2030-86	S2040-86
87	Clamp – part II	1	2020-87	2030-87	2040-87	S2020-87	S2030-87	S2040-87
88	Bolt M6x16	2	2020-88	2030-88	2040-88	S2020-88	S2030-88	S2040-88
89	Bolt M8x6	1	2020-89	2030-89	2040-89	S2020-89	S2030-89	S2040-89
P1	Joint's wheel 200	1	2020-P1	2030-P1	2040-P1	S2020-P1	S2030-P1	S2040-P1
P2	Connector I	4	2020-P2	2030-P2	2040-P2	S2020-P2	S2030-P2	S2040-P2
P3	Screw M8x20	12	2020-P3	2030-P3	2040-P3	S2020-P3	S2030-P3	S2040-P3
P4	Self-locking nut M8	12	2020-P4	2030-P4	2040-P4	S2020-P4	S2030-P4	S2040-P4

Eurovac INC.

116 Buttermille Ave, Concord, ON L4K 3X7

Toll Free Ph. 800-265-3878, Fax: 905-738-4603

Email: info@eurovac.com, Website: <http://www.eurovac.com>

P5	Regular washer 8.4 C	12	2020-P5	2030-P5	2040-P5	S2020-P5	S2030-P5	S2040-P5
P7	Friction insert $\phi 30 \times 8 \times 6$	4	2020-P7	2030-P7	2040-P7	S2020-P7	S2030-P7	S2040-P7
P8	Reinforcing element IV	1	2020-P8	2030-P8	2040-P8	S2020-P8	S2030-P8	S2040-P8
P9	Disk spring 20x8x1.2	8	2020-P9	2030-P9	2040-P9	S2020-P9	S2030-P9	S2040-P9

8" standing version

No	Description	Quantity	Arm model					
			0807P	0810P	0814P	S807P	S810P	S814P
			Art. no					
1	Joint 13	1	2020P-1	2030P-1	2040P-1	S2020P-1	S2030P-1	S2040P-1
2	Joint 14	1	2020P-2	2030P-2	2040P-2	S2020P-2	S2030P-2	S2040P-2
3	Joint 15	1	2020P-3	2030P-3	2040P-3	S2020P-3	S2030P-3	S2040P-3
4	Joint 16	1	2020P-4	2030P-4	2040P-4	S2020P-4	S2030P-4	S2040P-4
5	Joint 13	1	2020P-5	2030P-5	2040P-5	S2020P-5	S2030P-5	S2040P-5
6	Joint 14	1	2020P-6	2030P-6	2040P-6	S2020P-6	S2030P-6	S2040P-6
7	Joint 15	1	2020P-7	2030P-7	2040P-7	S2020P-7	S2030P-7	S2040P-7
8	Joint 16	1	2020P-8	2030P-8	2040P-8	S2020P-8	S2030P-8	S2040P-8
9	Friction insert I 70	2	2020P-9	2030P-9	2040P-9	S2020P-9	S2030P-9	S2040P-9
10	Friction insert II 60	2	2020P-10	2030P-10	2040P-10	S2020P-10	S2030P-10	S2040P-10
12	Tube I 200	1	2020P-12	2030P-12	2040P-12	S2020P-12	S2030P-12	S2040P-12
13	Tube II 200	1	2020P-13	2030P-13	2040P-13	S2020P-13	S2030P-13	S2040P-13
14	Reinforcing element I 200	2	2020P-14	2030P-14	2040P-14	S2020P-14	S2030P-14	S2040P-14
15	Reinforcing element II 200	1	2020P-15	2030P-15	2040P-15	S2020P-15	S2030P-15	S2040P-15
21	Spring II l=190	2	2020P-21	2030P-21	2040P-21	S2020P-21	S2030P-21	S2040P-21
22	Outer sleeve 200	1	2020P-22	2030P-22	2040P-22	S2020P-22	S2030P-22	S2040P-22
23	Inner sleeve 200	1	2020P-23	2030P-23	2040P-23	S2020P-23	S2030P-23	S2040P-23
25	Orifice 200	1	2020P-25	2030P-25	2040P-25	S2020P-25	S2030P-25	S2040P-25
26	Axis I	1	2020P-26	2030P-26	2040P-26	S2020P-26	S2030P-26	S2040P-26
27	Axis II	1	2020P-27	2030P-27	2040P-27	S2020P-27	S2030P-27	S2040P-27
28	Lever	1	2020P-28	2030P-28	2040P-28	S2020P-28	S2030P-28	S2040P-28
29	Sleeve	2	2020P-29	2030P-29	2040P-29	S2020P-29	S2030P-29	S2040P-29
30	Support plate	1	2020P-30	2030P-30	2040P-30	S2020P-30	S2030P-30	S2040P-30
31	Screw with mushroom head M10x30-4.8	8	2020P-31	2030P-31	2040P-31	S2020P-31	S2030P-31	S2040P-31
32	Nut M10-5-C	8	2020P-32	2030P-32	2040P-32	S2020P-32	S2030P-32	S2040P-32
33a	Regular washer 10.5	10	2020P-33a	2030P-33a	2040P-33a	S2020P-33a	S2030P-33a	S2040P-33a
34	Spring washer Z10.2	8	2020P-34	2030P-34	2040P-34	S2020P-34	S2030P-34	S2040P-34

35	Screw with mushroom head M10x30-4.8	8	2020P-45	2030P-45	2040P-45	S2020P-45	S2030P-45	S2040P-45
36	Nut M10-5-C	9	2020P-36	2030P-36	2040P-36	S2020P-36	S2030P-36	S2040P-36
37	Regular washer 10.5	1	2020P-37	2030P-37	2040P-37	S2020P-37	S2030P-37	S2040P-37
38	Spring washer Z10.2	9	2020P-38	2030P-38	2040P-38	S2020P-38	S2030P-38	S2040P-38
41	Spring washer Z6.1	2	2020P-41	2030P-41	2040P-41	S2020P-41	S2030P-41	S2040P-41
42	Nut M6-5-C	2	2020P-42	2030P-42	2040P-42	S2020P-42	S2030P-42	S2040P-42
46	Self-locking nut M14x1.5-5-B	4	2020P-46	2030P-46	2040P-46	S2020P-46	S2030P-46	S2040P-46
47	Disk spring DI 60x14.5x3	4	2020P-47	2030P-47	2040P-47	S2020P-47	S2030P-47	S2040P-47
48	Disk spring DI 50x14.5x2.2	4	2020P-48	2030P-48	2040P-48	S2020P-48	S2030P-48	S2040P-48
51	Steel cable □3.5, l=450	1	2020P-51	2030P-51	2040P-51	S2020P-51	S2030P-51	S2040P-51
52	Bow rope clamp 5	1	2020P-52	2030P-52	2040P-52	S2020P-52	S2030P-52	S2040P-52
53	Screw M8x25-3.6-C	1	2020P-53	2030P-53	2040P-53	S2020P-53	S2030P-53	S2040P-53
54	Self-locking nut M8-5-B	1	2020P-54	2030P-54	2040P-54	S2020P-54	S2030P-54	S2040P-54
55	Clamping eye □10.5	1	2020P-55	2030P-55	2040P-55	S2020P-55	S2030P-55	S2040P-55
57	Screw M14x1.5x60-8.8-B	2	2020P-57	2030P-57	2040P-57	S2020P-57	S2030P-57	S2040P-57
58	Screw M14x1.5x55-8.8-B	2	2020P-58	2030P-58	2040P-58	S2020P-58	S2030P-58	S2040P-58
60	Hood φ350/200	1	2020P-60	2030P-60	2040P-60	S2020P-60	S2030P-60	S2040P-60
61	Handle 200	1	2020P-61	2030P-61	2040P-61	S2020P-61	S2030P-61	S2040P-61
62	Light kit dome	1	2020P-62	2030P-62	2040P-62	S2020P-62	S2030P-62	S2040P-62
63	Shutter of inlet 200	1	2020P-63	2030P-63	2040P-63	S2020P-63	S2030P-63	S2040P-63
64	Wire seal GH6	1	2020P-64	2030P-64	2040P-64	S2020P-64	S2030P-64	S2040P-64
65	Protecting plate	1	2020P-65	2030P-65	2040P-65	S2020P-65	S2030P-65	S2040P-65
66	Screw WP M4x16	2	2020P-66	2030P-66	2040P-66	S2020P-66	S2030P-66	S2040P-66
67	Plug I	1	2020P-67	2030P-67	2040P-67	S2020P-67	S2030P-67	S2040P-67
68	Plug II	1	2020P-68	2030P-68	2040P-68	S2020P-68	S2030P-68	S2040P-68
69	Regular washer 15 (for wood construction)	6	2020P-69	2030P-69	2040P-69	S2020P-69	S2030P-69	S2040P-69
70	Screw with mushroom head M6x16-4.8	2	2020P-70	2030P-70	2040P-70	S2020P-70	S2030P-70	S2040P-70
73	Lubricating nipple C M8x1	1	2020P-73	2030P-73	2040P-73	S2020P-73	S2030P-73	S2040P-73

74	Wing nut M6	1	2020P-74	2030P-74	2040P-74	S2020P-74	S2030P-74	S2040P-74
75	Internal wrenching screw M8x20-8.8	1	2020P-75	2030P-75	2040P-75	S2020P-75	S2030P-75	S2040P-75
79	Steel rivet □3.2x8	4	2020P-79	2030P-79	2040P-79	S2020P-79	S2030P-79	S2040P-79
79b	Steel rivet □3.2x8	4	2020P-79	2030P-79	2040P-79	S2020P-79	S2030P-79	S2040P-79
80	Handle	1	2020P-80	2030P-80	2040P-80	S2020P-80	S2030P-80	S2040P-80
81	Flexible hose ST-200, l=610mm (24")	1	2020P-81	2030P-81	2040P-81	S2020P-81	S2030P-81	S2040P-81
82	Gear clamp OST-200	6	2020P-82	2030P-82	2040P-82	S2020P-82	S2030P-82	S2040P-82
84	Flexible hose ST-200 l=720mm (28")	1	2020P-84	2030P-84	2040P-84	S2020P-84	S2030P-84	S2040P-84
85	Flexible hose ST-200 l=465mm (18")	1	2020P-85	2030P-85	2040P-85	S2020P-85	S2030P-85	S2040P-85
P1	Joint's wheel 200	1	2020P-P1	2030P-P1	2040P-P1	S2020P-P1	S2030P-P1	S2040P-P1
P2	Connector I	4	2020P-P2	2030P-P2	2040P-P2	S2020P-P2	S2030P-P2	S2040P-P2
P3	Screw M8x20	12	2020P-P3	2030P-P3	2040P-P3	S2020P-P3	S2030P-P3	S2040P-P3
P4	Self-locking nut M8	12	2020P-P4	2030P-P4	2040P-P4	S2020P-P4	S2030P-P4	S2040P-P4
P5	Regular washer 8.4 C	12	2020P-P5	2030P-P5	2040P-P5	S2020P-P5	S2030P-P5	S2040P-P5
P7	Friction insertφ30x8x6	4	2020P-P7	2030P-P7	2040P-P7	S2020P-P7	S2030P-P7	S2040P-P7
P8	Reinforcing element IV	1	2020P-P8	2030P-P8	2040P-P8	S2020P-P8	S2030P-P8	S2040P-P8
P9	Disk spring 20x8x1.2	8	2020P-P9	2030P-P9	2040P-P9	S2020P-P9	S2030P-P9	S2040P-P9

φ4" hanging version

No	Description	Quantity	Arm model					
			0405	0407	0408	S405	S407	S408
			Art. no					
1	Joint 17	1	1015-1	1020-1	1025-1	S1015-1	S1020-1	S1025-1
2	Joint 18	1	1015-2	1020-2	1025-2	S1015-2	S1020-2	S1025-2
3	Joint 19	1	1015-3	1020-3	1025-3	S1015-3	S1020-3	S1025-3
4	Joint 20	1	1015-4	1020-4	1025-4	S1015-4	S1020-4	S1025-4
5	Joint 17	1	1015-5	1020-5	1025-5	S1015-5	S1020-5	S1025-5
6	Joint 18	1	1015-6	1020-6	1025-6	S1015-6	S1020-6	S1025-6
7	Joint 19	1	1015-7	1020-7	1025-7	S1015-7	S1020-7	S1025-7
8	Joint 20	1	1015-8	1020-8	1025-8	S1015-8	S1020-8	S1025-8
9	Friction insert 36x8	2	1015-9	1020-9	1025-9	S1015-9	S1020-9	S1025-9
10	Friction insert 36x8	2	1015-10	1020-10	1025-10	S1015-10	S1020-10	S1025-10
12	Tube I 100	1	1015-12	1020-12	1025-12	S1015-12	S1020-12	S1025-12
13	Tube II 100	1	1015-13	1020-13	1025-13	S1015-13	S1020-13	S1025-13
15	Reinforcing element II 100	-	-	-	-	-	-	-
16	Reinforcing element III 100	1	1015-16	1020-16	1025-16	S1015-16	S1020-16	S1025-16
17	Catch 1 100	1	1015-17	1020-17	1025-17	S1015-17	S1020-17	S1025-17
18	Catch 2 100	1	1015-18	1020-18	1025-18	S1015-18	S1020-18	S1025-18
19	Bracket	2	1015-19	1020-19	1025-19	S1015-19	S1020-19	S1025-19
20	Spring I	1	1015-20	1020-20	1025-20	S1015-20	S1020-20	S1025-20
21	Spring II	-	-	-	-	-	-	-
22	Outer sleeve 100	1	1015-22	1020-22	1025-22	S1015-22	S1020-22	S1025-22
23	Inner sleeve 100	-	-	-	-	-	-	-
24	Inner sleeve 100	1	1015-24	1020-24	1025-24	S1015-24	S1020-24	S1025-24
25	Orifice 100	1	1015-25	1020-25	1025-25	S1015-25	S1020-25	S1025-25
26	Axle I	1	1015-26	1020-26	1025-26	S1015-26	S1020-26	S1025-26
27	Axle II	1	1015-27	1020-27	1025-27	S1015-27	S1020-27	S1025-27
28	Lever	1	1015-28	1020-28	1025-28	S1015-28	S1020-28	S1025-28
29	Sleeve	2	1015-29	1020-29	1025-29	S1015-29	S1020-29	S1025-29
30	Support plate	1	1015-30	1020-30	1025-30	S1015-30	S1020-30	S1025-30
31	Screw with mushroom head M6x16-5.8	8	1015-31	1020-31	1025-31	S1015-31	S1020-31	S1025-31
32	Nut M6-5-C	8	1015-32	1020-32	1025-32	S1015-32	S1020-32	S1025-32
33	Regular washer 6.4	8	1015-33	1020-33	1025-33	S1015-33	S1020-33	S1025-33
33a	Regular washer 10.5	2	1015-33a	1020-33a	1025-33a	S1015-33a	S1020-33a	S1025-33a
34	Spring washer Z6.1	8	1015-34	1020-34	1025-34	S1015-34	S1020-34	S1025-34
35	Screw with mushroom head M6x16-5.8	8	1015-35	1020-35	1025-35	S1015-35	S1020-35	S1025-35
36	Nut M6-5-C	9	1015-36	1020-36	1025-36	S1015-36	S1020-36	S1025-36
37	Regular washer 6.4	9	1015-37	1020-37	1025-37	S1015-37	S1020-37	S1025-37
38	Spring washer Z6.1	9	1015-38	1020-38	1025-38	S1015-38	S1020-38	S1025-38
39	Screw M6x16-5.8-C	4	1015-39	1020-39	1025-39	S1015-39	S1020-39	S1025-39
40	Regular washer 6.4	6	1015-40	1020-40	1025-40	S1015-40	S1020-40	S1025-40
41	Spring washer Z6.1	5	1015-41	1020-41	1025-41	S1015-41	S1020-41	S1025-41
42	Nut M6-5-C	4	1015-42	1020-42	1025-42	S1015-42	S1020-42	S1025-42
43	Bolt M6x25	2	1015-43	1020-43	1025-43	S1015-43	S1020-43	S1025-43
44a	Regular washer 6.4	2	1015-44a	1020-44a	1025-44a	S1015-44a	S1020-44a	S1025-44a
45	Self-locking nut M6	2	1015-45	1020-45	1025-45	S1015-45	S1020-45	S1025-45

Eurovac INC.

116 Buttermille Ave, Concord, ON L4K 3X7
Toll Free Ph. 800-265-3878, Fax: 905-738-4603

Email: info@eurovac.com, Website: <http://www.eurovac.com>

46	Self-locking nut M10	4	1015-46	1020-46	1025-46	S1015-46	S1020-46	S1025-46
47	Disk spring DI 20x10.2x1.2	4	1015-47	1020-47	1025-47	S1015-47	S1020-47	S1025-47
48	Disk spring DI 20x10.2x1.2	4	1015-48	1020-48	1025-48	S1015-48	S1020-48	S1025-48
49	Aluminium pipe □□□x1	1	1015-49	1020-49	1025-49	S1015-49	S1020-49	S1025-49
50	Aluminium pipe □24x1	1	1015-50	1020-50	1025-50	S1015-50	S1020-50	S1025-50
57	Screw M10x30-5.8	2	1015-57	1020-57	1025-57	S1015-57	S1020-57	S1025-57
58	Screw M10x30-5.8	2	1015-58	1020-58	1025-58	S1015-58	S1020-58	S1025-58
60	Hood φ200/100	1	1015-60	1020-60	1025-60	S1015-60	S1020-60	S1025-60
61	Handle 100	1	1015-61	1020-61	1025-61	S1015-61	S1020-61	S1025-61
62	Light kit dome	1	1015-62	1020-62	1025-62	S1015-62	S1020-62	S1025-62
63	Shutter of inlet 100	1	1015-63	1020-63	1025-63	S1015-63	S1020-63	S1025-63
64	Wire seal GH6	1	1015-64	1020-64	1025-64	S1015-64	S1020-64	S1025-64
65	Protecting plate	1	1015-65	1020-65	1025-65	S1015-65	S1020-65	S1025-65
66	Screw WP M4x16	2	1015-66	1020-66	1025-66	S1015-66	S1020-66	S1025-66
68	Plug II	1	1015-68	1020-68	1025-68	S1015-68	S1020-68	S1025-68
69	Regular washer 10.5	8	1015-69	1020-69	1025-69	S1015-69	S1020-69	S1025-69
73	Lubricating nipple C M8x1	1	1015-73	1020-73	1025-73	S1015-73	S1020-73	S1025-73
74	Wing nut M6	1	1015-74	1020-74	1025-74	S1015-74	S1020-74	S1025-74
75	Internal wrenching screw M6x12	1	1015-75	1020-75	1025-75	S1015-75	S1020-75	S1025-75
76	Regular washer 6.4	1	1015-76	1020-76	1025-76	S1015-76	S1020-76	S1025-76
79a	Steel rivet □3.2x8	6	1015-79	1020-79	1025-79	S1015-79	S1020-79	S1025-79
79b	Steel rivet □3.2x8	4	1015-79	1020-79	1025-79	S1015-79	S1020-79	S1025-79
81	Flexible hose ST-100, l=390	1	1015-81	1020-81	1025-81	S1015-81	S1020-81	S1025-81
82	Band clip OST-100	6	1015-82	1020-82	1025-82	S1015-82	S1020-82	S1025-82
84	Flexible hose ST-100, l=390	1	1015-84	1020-84	1025-84	S1015-84	S1020-84	S1025-84
85	Flexible hose ST-100, l=320	1	1015-85	1020-85	1025-85	S1015-85	S1020-85	S1025-85
86	Telescope clamp	1	1015-86	1020-86	1025-86	S1015-86	S1020-86	S1025-86
P1	Joint's wheel 100	1	1015-P1	1020-P1	1025-P1	S1015-P1	S1020-P1	S1025-P1
P2	Connector III	4	1015-P2	1020-P2	1025-P2	S1015-P2	S1020-P2	S1025-P2
P3	Screw M6x16	12	1015-P3	1020-P3	1025-P3	S1015-P3	S1020-P3	S1025-P3
P4	Self-locking nut M6	12	1015-P4	1020-P4	1025-P4	S1015-P4	S1020-P4	S1025-P4
P5	Regular washer 6.4 C	12	1015-P5	1020-P5	1025-P5	S1015-P5	S1020-P5	S1025-P5
P7	Friction insert 22x6x6	4	1015-P7	1020-P7	1025-P7	S1015-P7	S1020-P7	S1025-P7
P8	Reinforcing element IV	1	1015-P8	1020-P8	1025-P8	S1015-P8	S1020-P8	S1025-P8
P9	Disk spring 12.5x6.2x1	8	1015-P9	1020-P9	1025-P9	S1015-P9	S1020-P9	S1025-P9

φ4" standing version

No	Description	Quantity	Arm model					
			0405P	0407P	0408P	S405P	S407P	S408P
			Art. no					
1	Joint 17	1	1015P-1	1020P-1	1025P-1	S1015P-1	S1020P-1	S1025P-1
2	Joint 18	1	1015P-2	1020P-2	1025P-2	S1015P-2	S1020P-2	S1025P-2
3	Joint 19	1	1015P-3	1020P-3	1025P-3	S1015P-3	S1020P-3	S1025P-3
4	Joint 20	1	1015P-4	1020P-4	1025P-4	S1015P-4	S1020P-4	S1025P-4
5	Joint 17	1	1015P-5	1020P-5	1025P-5	S1015P-5	S1020P-5	S1025P-5
6	Joint 18	1	1015P-6	1020P-6	1025P-6	S1015P-6	S1020P-6	S1025P-6
7	Joint 19	1	1015P-7	1020P-7	1025P-7	S1015P-7	S1020P-7	S1025P-7
8	Joint 20	1	1015P-8	1020P-8	1025P-8	S1015P-8	S1020P-8	S1025P-8
9	Friction insert 36x8	2	1015P-9	1020P-9	1025P-9	S1015P-9	S1020P-9	S1025P-9
10	Friction insert 36x8	2	1015P-10	1020P-10	1025P-10	S1015P-10	S1020P-10	S1025P-10
12	Tube I 100	1	1015P-12	1020P-12	1025P-12	S1015P-12	S1020P-12	S1025P-12
13	Tube II 100	1	1015P-13	1020P-13	1025P-13	S1015P-13	S1020P-13	S1025P-13
15	Reinforcing element II 100	1	1015P-15	1020P-15	1025P-15	S1015P-15	S1020P-15	S1025P-15
21	Spring II	1	1015P-21	1020P-21	1025P-21	S1015P-21	S1020P-21	S1025P-21
22	Outer sleeve 100	1	1015P-22	1020P-22	1025P-22	S1015P-22	S1020P-22	S1025P-22
23	Inner sleeve 100	1	1015P-23	1020P-23	1025P-23	S1015P-23	S1020P-23	S1025P-23
25	Orifice 100	1	1015P-25	1020P-25	1025P-25	S1015P-25	S1020P-25	S1025P-25
26	Axle I	1	1015P-26	1020P-26	1025P-26	S1015P-26	S1020P-26	S1025P-26
27	Axle II	1	1015P-27	1020P-27	1025P-27	S1015P-27	S1020P-27	S1025P-27
28	Lever	1	1015P-28	1020P-28	1025P-28	S1015P-28	S1020P-28	S1025P-28
29	Sleeve	2	1015P-29	1020P-29	1025P-29	S1015P-29	S1020P-29	S1025P-29
30	Support plate	1	1015P-30	1020P-30	1025P-30	S1015P-30	S1020P-30	S1025P-30
31	Screw with mushroom head M6x16-5.8	8	1015P-31	1020P-31	1025P-31	S1015P-31	S1020P-31	S1025P-31
32	Nut M6-5-C	8	1015P-32	1020P-32	1025P-32	S1015P-32	S1020P-32	S1025P-32

33	Regular washer 6.4	8	1015P-33	1020P-33	1025P-33	S1015P-33	S1020P-33	S1025P-33
33a	Regular washer 10.5	2	1015P-33a	1020P-33a	1025P-33a	S1015P-33a	S1020P-33a	S1025P-33a
34	Spring washer Z6.1	8	1015P-34	1020P-34	1025P-34	S1015P-34	S1020P-34	S1025P-34
35	Screw with mushroom head M6x16-5.8	8	1015P-35	1020P-35	1025P-35	S1015P-35	S1020P-35	S1025P-35
36	Nut M6-5-C	9	1015P-36	1020P-36	1025P-36	S1015P-36	S1020P-36	S1025P-36
37	Regular washer 6.4	8	1015P-37	1020P-37	1025P-37	S1015P-37	S1020P-37	S1025P-37
38	Spring washer Z6.1	8	1015P-38	1020P-38	1025P-38	S1015P-38	S1020P-38	S1025P-38
46	Self-locking nut M10	4	1015P-46	1020P-46	1025P-46	S1015P-46	S1020P-46	S1025P-46
47	Disk spring DI 20x10.2x1	4	1015P-47	1020P-47	1025P-47	S1015P-47	S1020P-47	S1025P-47
48	Disk spring DI 20x10.2x1	4	1015P-48	1020P-48	1025P-48	S1015P-48	S1020P-48	S1025P-48
57	Screw M10x30-5.8	2	1015P-57	1020P-57	1025P-57	S1015P-57	S1020P-57	S1025P-57
58	Screw M10x30-5.8	2	1015P-58	1020P-58	1025P-58	S1015P-58	S1020P-58	S1025P-58
60	Hood ϕ 200/100	1	1015P-60	1020P-60	1025P-60	S1015P-60	S1020P-60	S1025P-60
61	Handle 100	1	1015P-61	1020P-61	1025P-61	S1015P-61	S1020P-61	S1025P-61
62	Light kit dome	1	1015P-62	1020P-62	1025P-62	S1015P-62	S1020P-62	S1025P-62
63	Shutter of inlet 100	1	1015P-63	1020P-63	1025P-63	S1015P-63	S1020P-63	S1025P-63
64	Wire seal GH6	1	1015P-64	1020P-64	1025P-64	S1015P-64	S1020P-64	S1025P-64
65	Protecting plate	1	1015P-65	1020P-65	1025P-65	S1015P-65	S1020P-65	S1025P-65
66	Screw WP M4x16	2	1015P-66	1020P-66	1025P-66	S1015P-66	S1020P-66	S1025P-66
68	Plug II	1	1015P-68	1020P-68	1025P-68	S1015P-68	S1020P-68	S1025P-68
69	Regular washer 10.5	8	1015P-69	1020P-69	1025P-69	S1015P-69	S1020P-69	S1025P-69
73	Lubricating nipple C M8x1	1	1015P-73	1020P-73	1025P-73	S1015P-73	S1020P-73	S1025P-73
74	Wing nut M6	1	1015P-74	1020P-74	1025P-74	S1015P-74	S1020P-74	S1025P-74
75	Internal wrenching screw M6x12	1	1015P-75	1020P-75	1025P-75	S1015P-75	S1020P-75	S1025P-75
76	Regular washer 6.4	1	1015P-76	1020P-76	1025P-76	S1015P-76	S1020P-76	S1025P-76
79a	Steel rivet $\square$ 3.2x8	6	1015P-79	1020P-79	1025P-79	S1015P-79	S1020P-79	S1025P-79
81	Flexible hose ST-100, l=390	1	1015P-81	1020P-81	1025P-81	S1015P-81	S1020P-81	S1025P-81
82	Band clip OST-100	6	1015P-82	1020P-82	1025P-82	S1015P-82	S1020P-82	S1025P-82

Eurovac INC.

116 Buttermilk Ave, Concord, ON L4K 3X7
Toll Free Ph. 800-265-3878, Fax: 905-738-4603

Email: info@eurovac.com, Website: <http://www.eurovac.com>

84	Flexible hose ST-100, l=390	1	1015P-84	1020P-84	1025P-84	S1015P-84	S1020P-84	S1025P-84
85	Flexible hose ST-100, l=320	1	1015P-85	1020P-85	1025P-85	S1015P-85	S1020P-85	S1025P-85
P1	Joint's wheel 100	1	1015P-P1	1020P-P1	1025P-P1	S1015P-P1	S1020P-P1	S1025P-P1
P2	Connector III	4	1015P-P2	1020P-P2	1025P-P2	S1015P-P2	S1020P-P2	S1025P-P2
P3	Screw M6x16	12	1015P-P3	1020P-P3	1025P-P3	S1015P-P3	S1020P-P3	S1025P-P3
P4	Self-locking nut M6	12	1015P-P4	1020P-P4	1025P-P4	S1015P-P4	S1020P-P4	S1025P-P4
P5	Regular washer 6.4 C	12	1015P-P5	1020P-P5	1025P-P5	S1015P-P5	S1020P-P5	S1025P-P5
P7	Friction insert 22x6x6	4	1015P-P7	1020P-P7	1025P-P7	S1015P-P7	S1020P-P7	S1025P-P7
P8	Reinforcing element IV	1	1015P-P8	1020P-P8	1025P-P8	S1015P-P8	S1020P-P8	S1025P-P8
P9	Disk spring 12.5x6.2x1	8	1015P-P9	1020P-P9	1025P-P9	S1015P-P9	S1020P-P9	S1025P-P9

3" standing and hanging version


No	Description	Quantity	Arm model					
			0303	0305	0303P	0305P		
			Art. no					
1	Joint 21	1	7510-1	7515-1	7510P-1	7515P-1		
2	Joint 22	1	7510-2	7515-2	7510P-2	7515P-2		
3	Joint 23	1	7510-3	7515-3	7510P-3	7515P-3		
4	Joint 24	1	7510-4	7515-4	7510P-4	7515P-4		
5	Joint 21	1	7510-5	7515-5	7510P-5	7515P-5		
6	Joint 22	1	7510-6	7515-6	7510P-6	7515P-6		
7	Joint 23	1	7510-7	7515-7	7510P-7	7515P-7		
8	Joint 24	1	7510-8	7515-8	7510P-8	7515P-8		
9	Friction insert $\phi 36 \times 8$	2	7510-9	7515-9	7510P-9	7515P-9		
10	Friction insert $\phi 36 \times 8$	2	7510-10	7515-10	7510P-10	7515P-10		
12	Tube I 76	1	7510-12	7515-12	7510P-12	7515P-12		
13	Tube II 76	1	7510-13	7515-13	7510P-13	7515P-13		
14	Reinforcing element I 76	3	7510-14	7515-14	7510P-14	7515P-14		
21	Inner sleeve 76	1	7510-21	7515-21	7510P-21	7515P-21		
22	Outer sleeve 76	1	7510-22	7515-22	7510P-22	7515P-22		
25	Orifice 76	1	7510-25	7515-25	7510P-25	7515P-25		
26	Axle I	1	7510-26	7515-26	7510P-26	7515P-26		
27	Axle II	1	7510-27	7515-27	7510P-27	7515P-27		
28	Lever	1	7510-28	7515-28	7510P-28	7515P-28		
29	Sleeve	2	7510-29	7515-29	7510P-29	7515P-29		
30	Support plate	1	7510-30	7515-30	7510P-30	7515P-30		
31	Screw with mushroom head M6x16	8	7510-31	7515-31	7510P-31	7515P-31		
32	Self-locking nut M6	8	7510-32	7515-32	7510P-32	7515P-32		
33a	Regular washer 10.5	2	7510-33a	7515-33a	7510P-33a	7515P-33a		
34	Regular washer 6.4	8	7510-34	7515-34	7510P-34	7515P-34		
35	Screw with mushroom head M6x16	8	7510-35	7515-35	7510P-35	7515P-35		
36	Self-locking nut M6	8	7510-36	7515-36	7510P-36	7515P-36		
38	Spring washer Z6.1	8	7510-38	7515-38	7510P-38	7515P-38		
46	Nut M8	4	7510-46	7515-46	7510P-46	7515P-46		
47	Disk spring 20x8.2x1.2	2	7510-47	7515-47	7510P-47	7515P-47		
48	Disk spring 20x8.2x1.2	2	7510-48	7515-48	7510P-48	7515P-48		
57	Knobe nut M8	2	7510-57	7515-57	7510P-57	7515P-57		
58	Knobe nut M8	2	7510-58	7515-58	7510P-58	7515P-58		
60	Hood $\phi 160/76$	1	7510-60	7515-60	7510P-60	7515P-60		
61	Handle 76	1	7510-61	7515-61	7510P-61	7515P-61		
62	Light kit dome	1	7510-62	7515-62	7510P-62	7515P-62		
64	Wire seal GH6	1	7510-64	7515-64	7510P-64	7515P-64		
65	Protecting plate	1	7510-65	7515-65	7510P-65	7515P-65		
66	Screw WP M4x16	2	7510-66	7515-66	7510P-66	7515P-66		
68	Plug II	1	7510-68	7515-68	7510P-68	7515P-68		
69	Regular washer 8.4	8	7510-69	7515-69	7510P-69	7515P-69		
73	Lubricating nipple C M8x1	1	7510-73	7515-73	7510P-73	7515P-73		
74	Wing nut M6	1	7510-74	7515-74	7510P-74	7515P-74		
75	Slotted set screw with full dog point M8x1x25	1	7510-75	7515-75	7510P-75	7515P-75		

Eurovac INC.


116 Buttermilk Ave, Concord, ON L4K 3X7
Toll Free Ph. 800-265-3878, Fax: 905-738-4603

Email: info@eurovac.com, Website: <http://www.eurovac.com>

76	Regular washer 6.4	1	7510-76	7515-76	7510P-76	7515P-76		
79a	Steel rivet □3.2x6	2	7510-79a	7515-79a	7510P-79a	7515P-79a		
79b	Steel rivet □3.2x14	2	7510-79b	7515-79b	7510P-79b	7515P-79b		
81	Flexible hose 80, l=200	1	7510-81	7515-81	7510P-81	7515P-81		
82	Band clip OST-80	6	7510-82	7515-82	7510P-82	7515P-82		
84	Flexible hose 80, l=200	1	7510-84	7515-84	7510P-84	7515P-84		
85	Flexible hose 80, l=320	1	7510-85	7515-85	7510P-85	7515P-85		
90	Collar	1	7510-90	7515-90	7510P-90	7515P-90		
91	Screw WP M4x16-KB	1	7510-91	7515-91	7510P-91	7515P-91		
P1	Joint's wheel 76	1	7510-P1	7515-P1	7510P-P1	7515P-P1		
P2	Connector II	4	7510-P2	7515-P2	7510P-P2	7515P-P2		
P3a	Screw M6x16	8	7510-P3a	7515-P3a	7510P-P3a	7515P-P3a		
P3b	Screw M6x22	4	7510-P3b	7515-P3b	7510P-P3b	7515P-P3b		
P4	Self-locking nut M6	12	7510-P4	7515-P4	7510P-P4	7515P-P4		
P5	Regular washer 6.4 C	12	7510-P5	7515-P5	7510P-P5	7515P-P5		
P6	Spring washer 6.1	4	7510-P6	7515-P6	7510P-P6	7515P-P6		
P7	Friction insert 22x6x6	4	7510-P7	7515-P7	7510P-P7	7515P-P7		
P8	Reinforcing element IV	1	7510-P8	7515-P8	7510P-P8	7515P-P8		
P9	Disk spring 12.5x6.2x1	8	7510-P9	7515-P9	7510P-P9	7515P-P9		

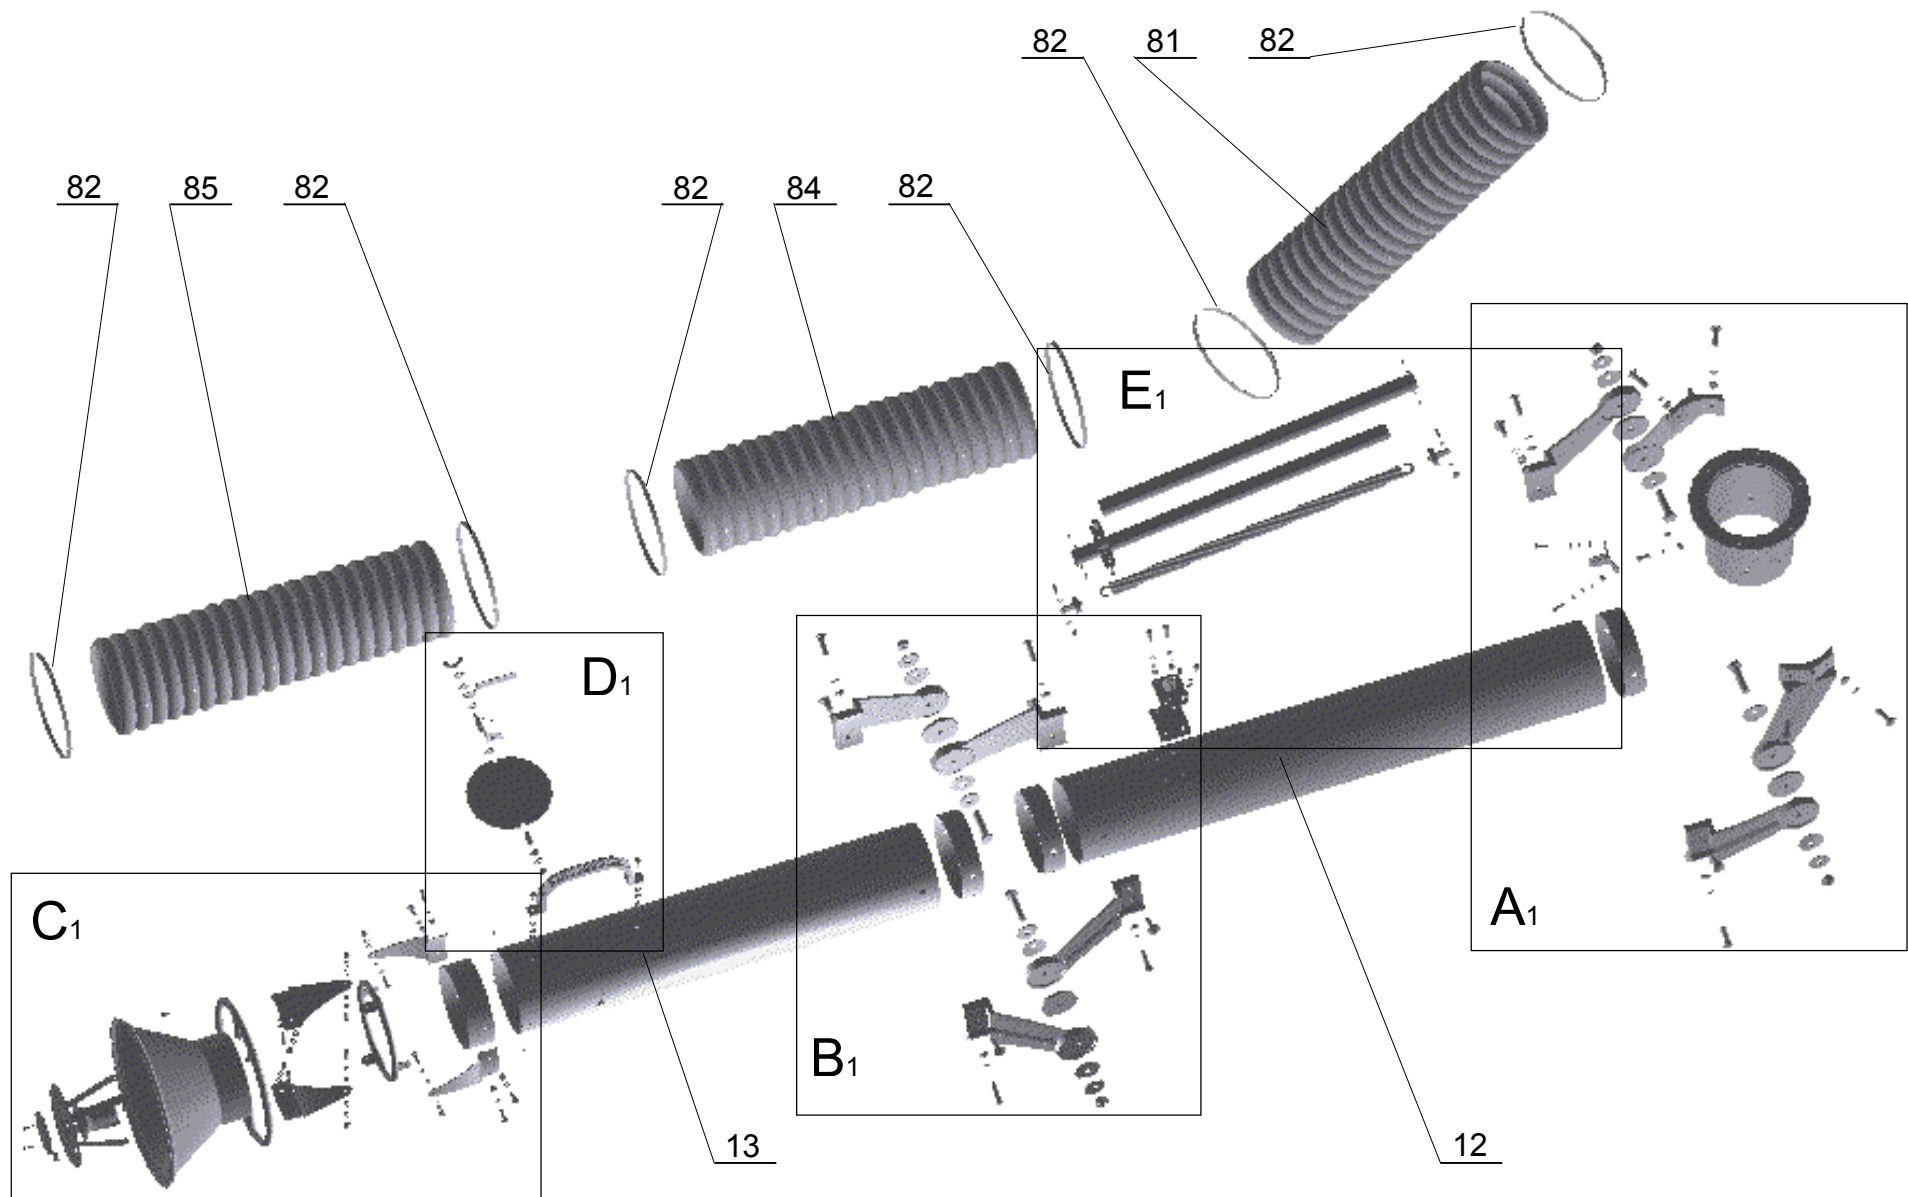


Drawing 6. (6" and 8" arm) EUROVAC arm – Wall mounted version.

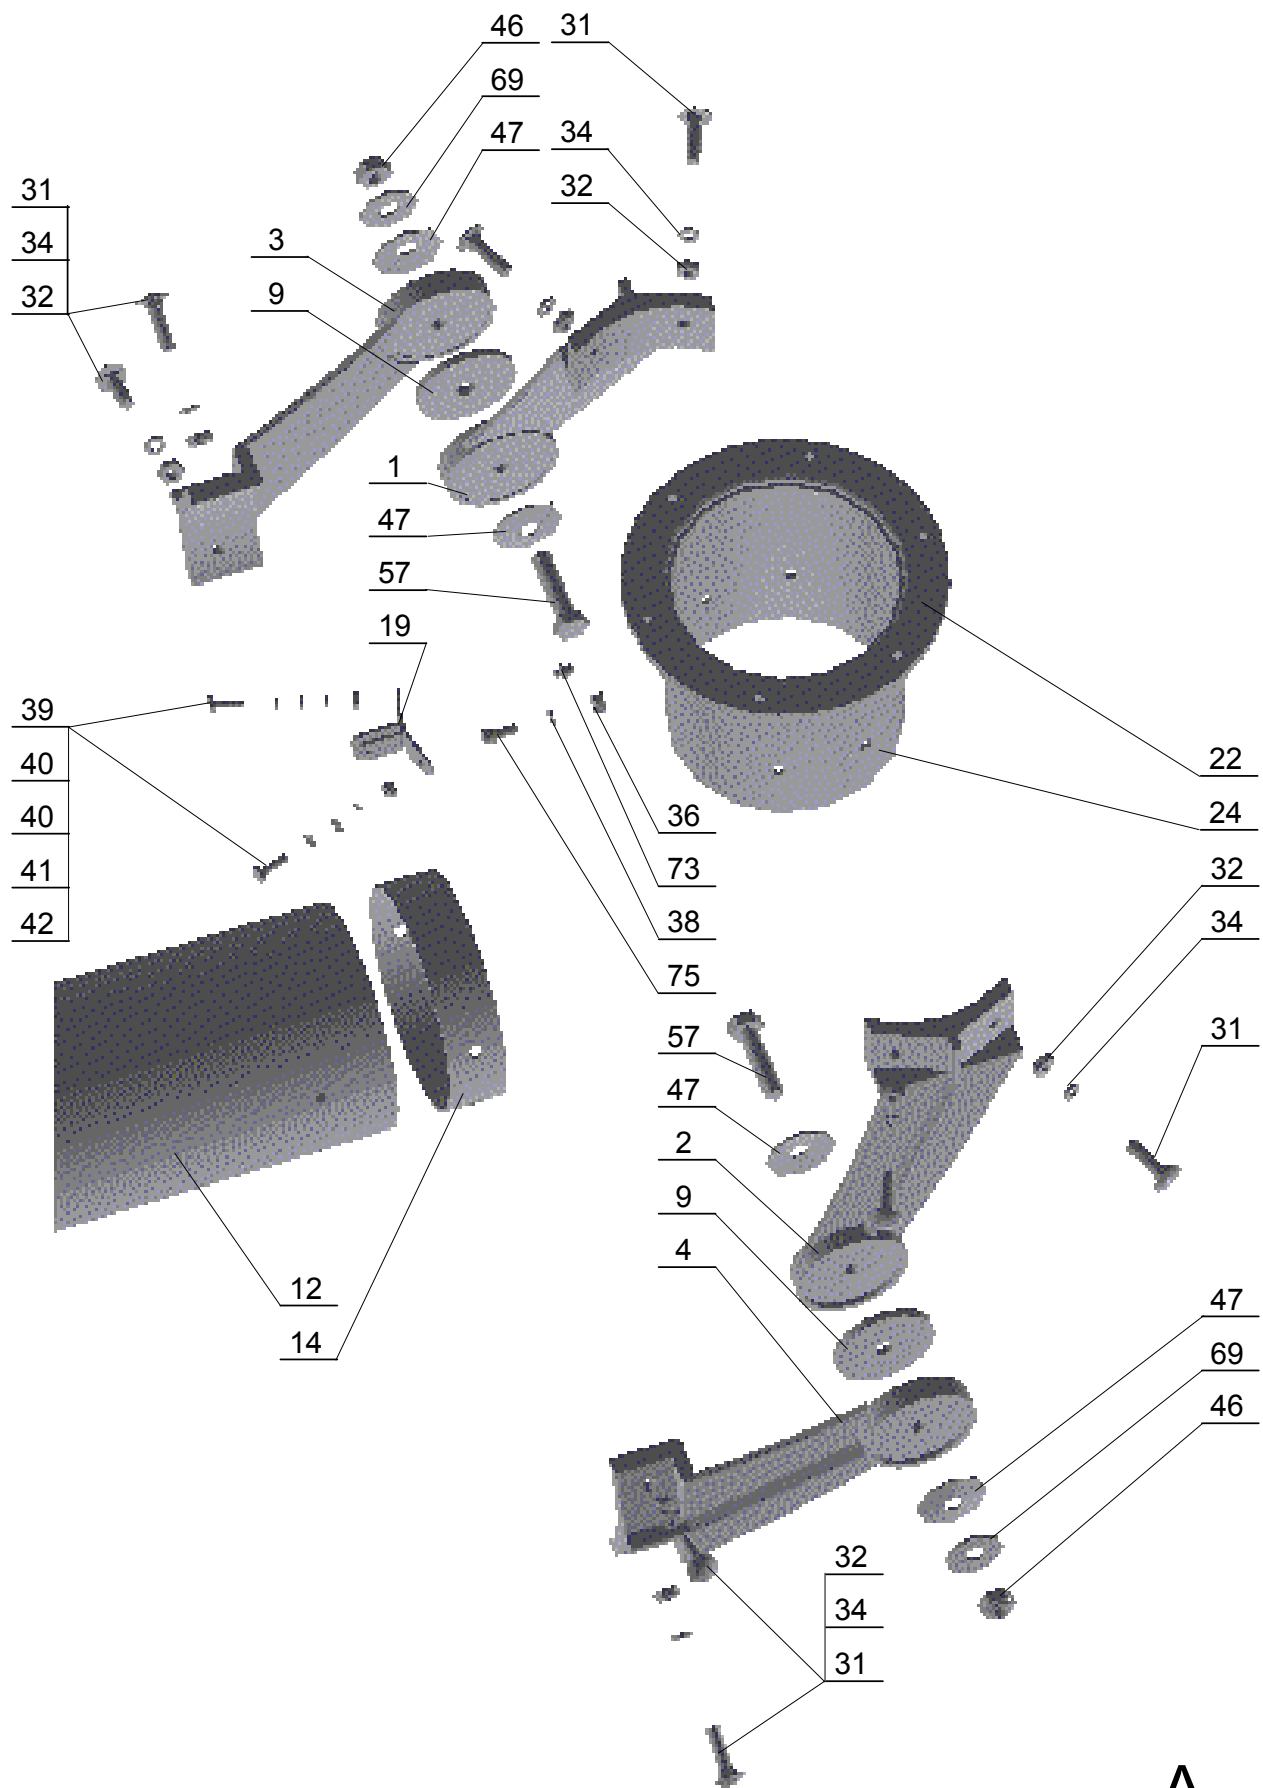


A₁


Drawing 7. (6" and 8" arm) Socket of EUROVAC arm - Wall Mounted version.

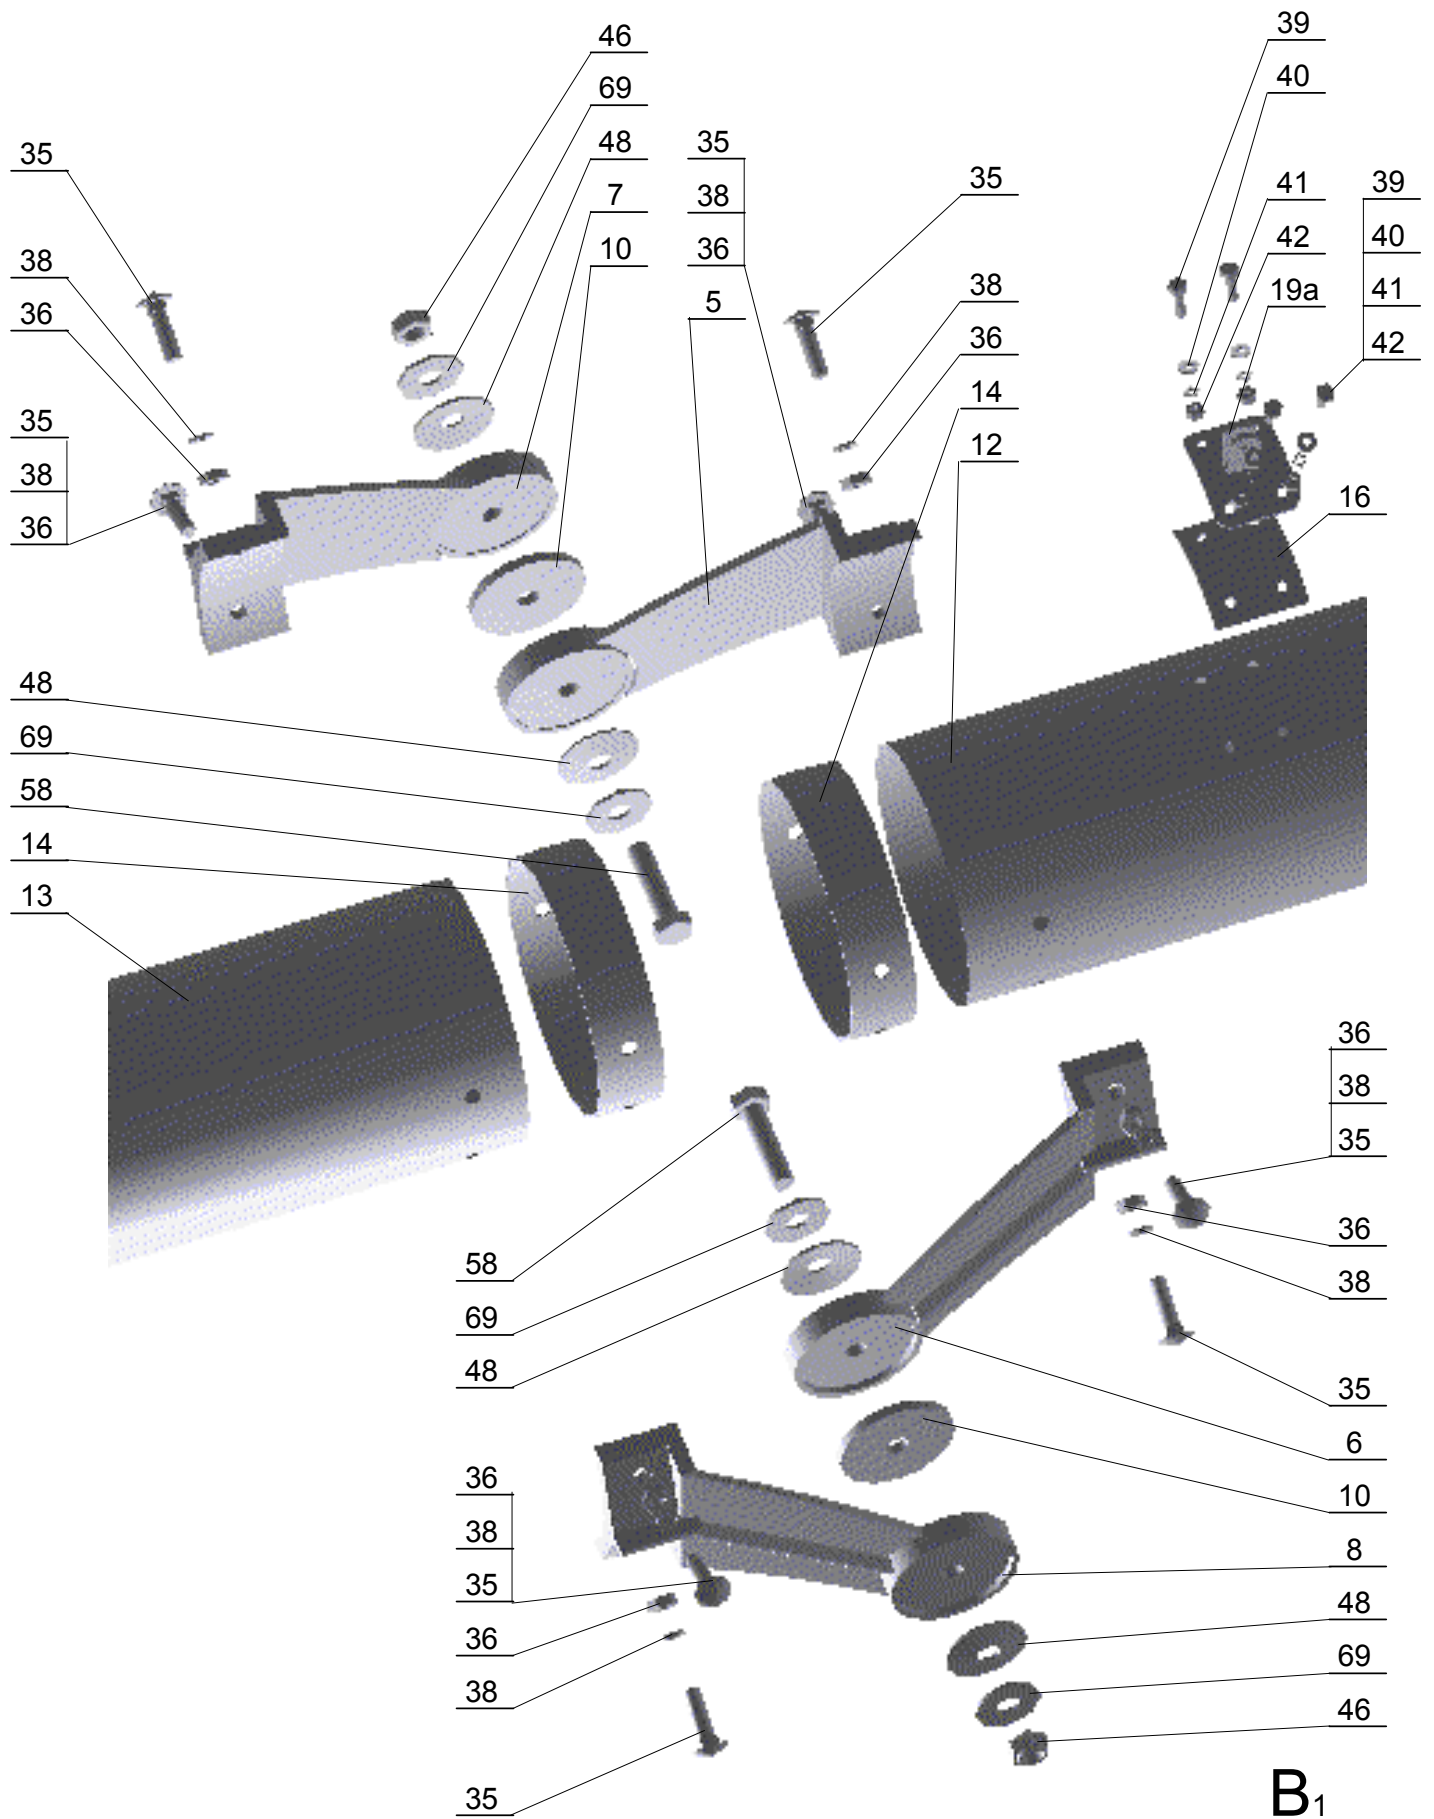

Drawing 8. (6" and 8" arm) Middle joint – Wall Mounted version.

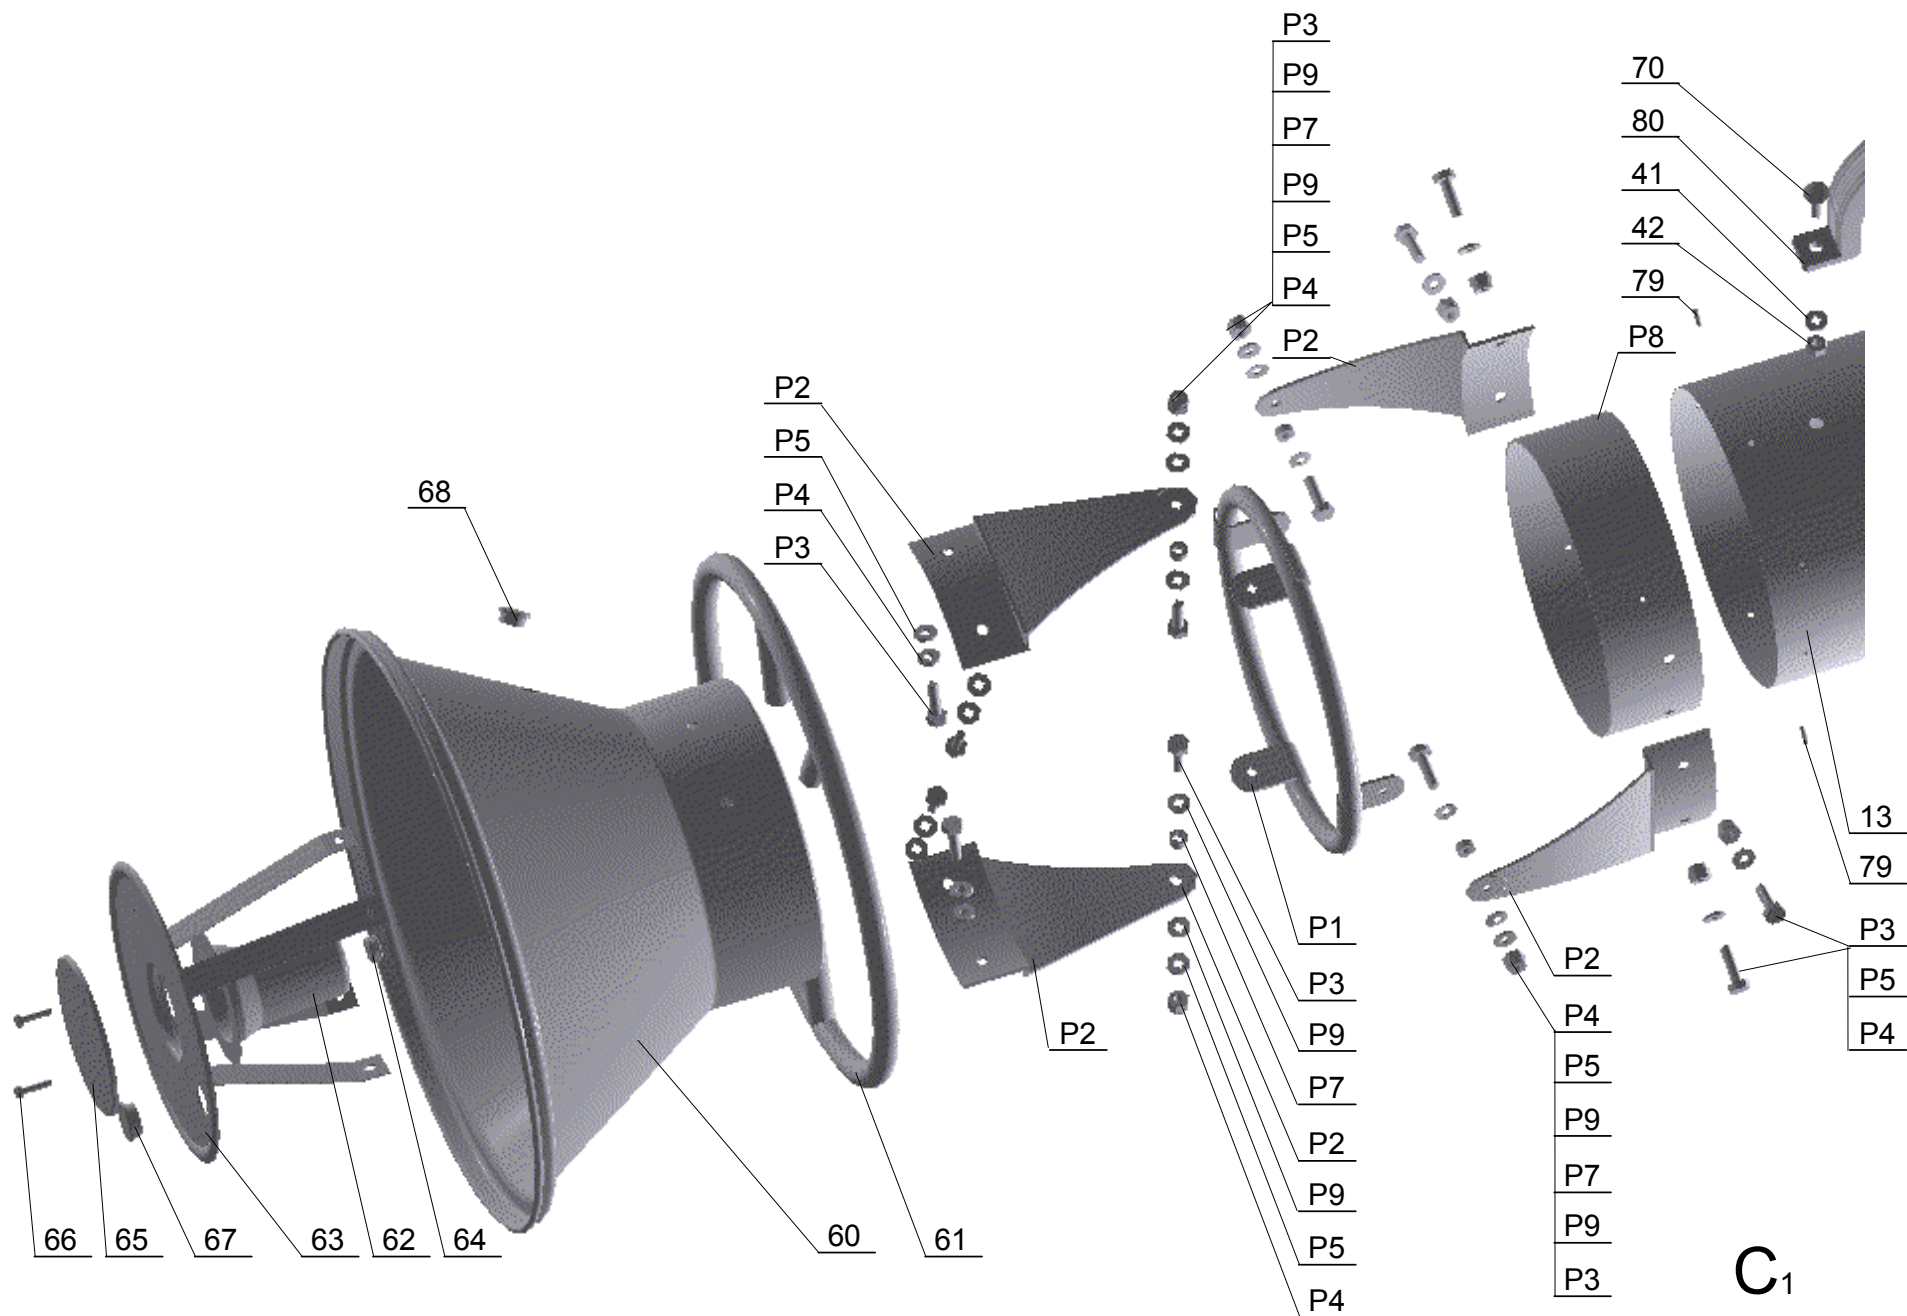


Drawing 9. (6" and 8" arm) Hood joint and hood – both wall Mounted and standing versions.

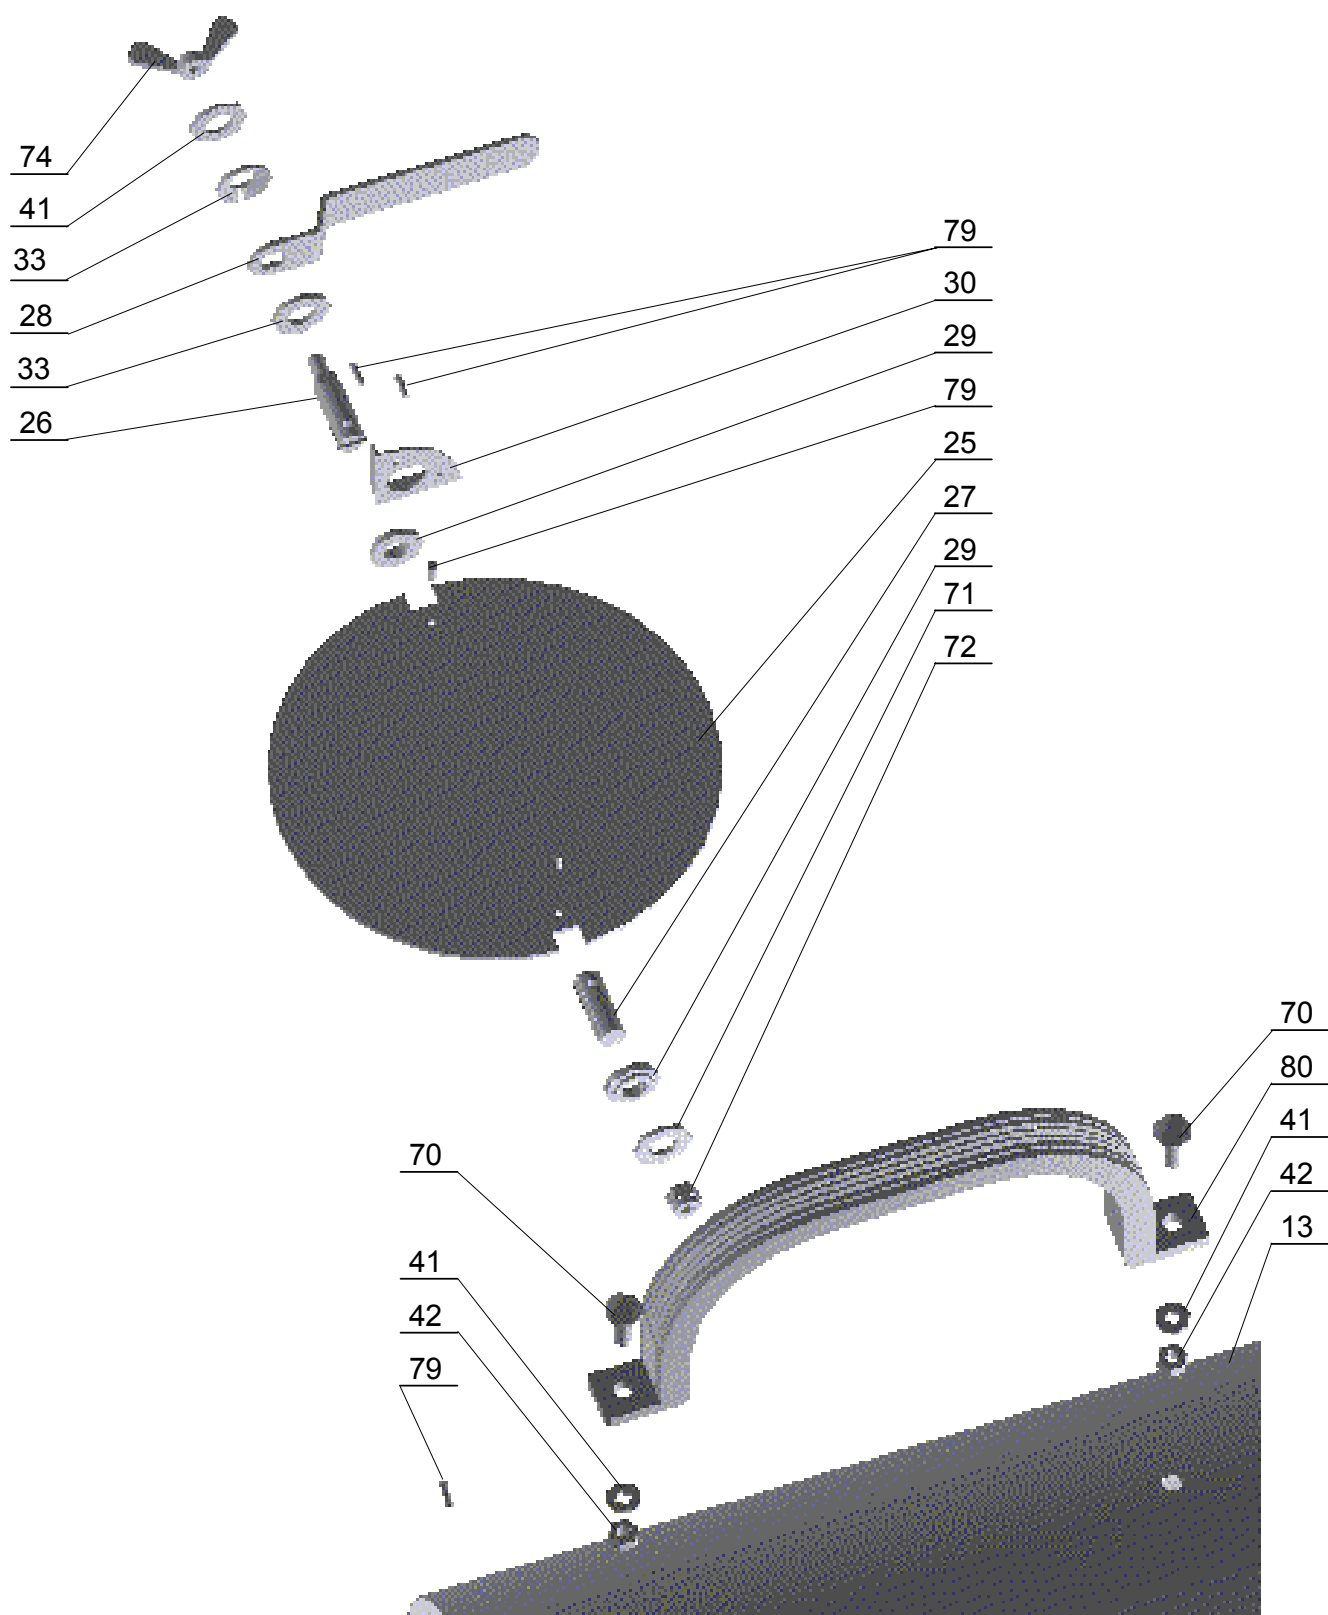


D₁


Drawing 10. (6" and 8" arm) Damper – both wall mounted and standing version.

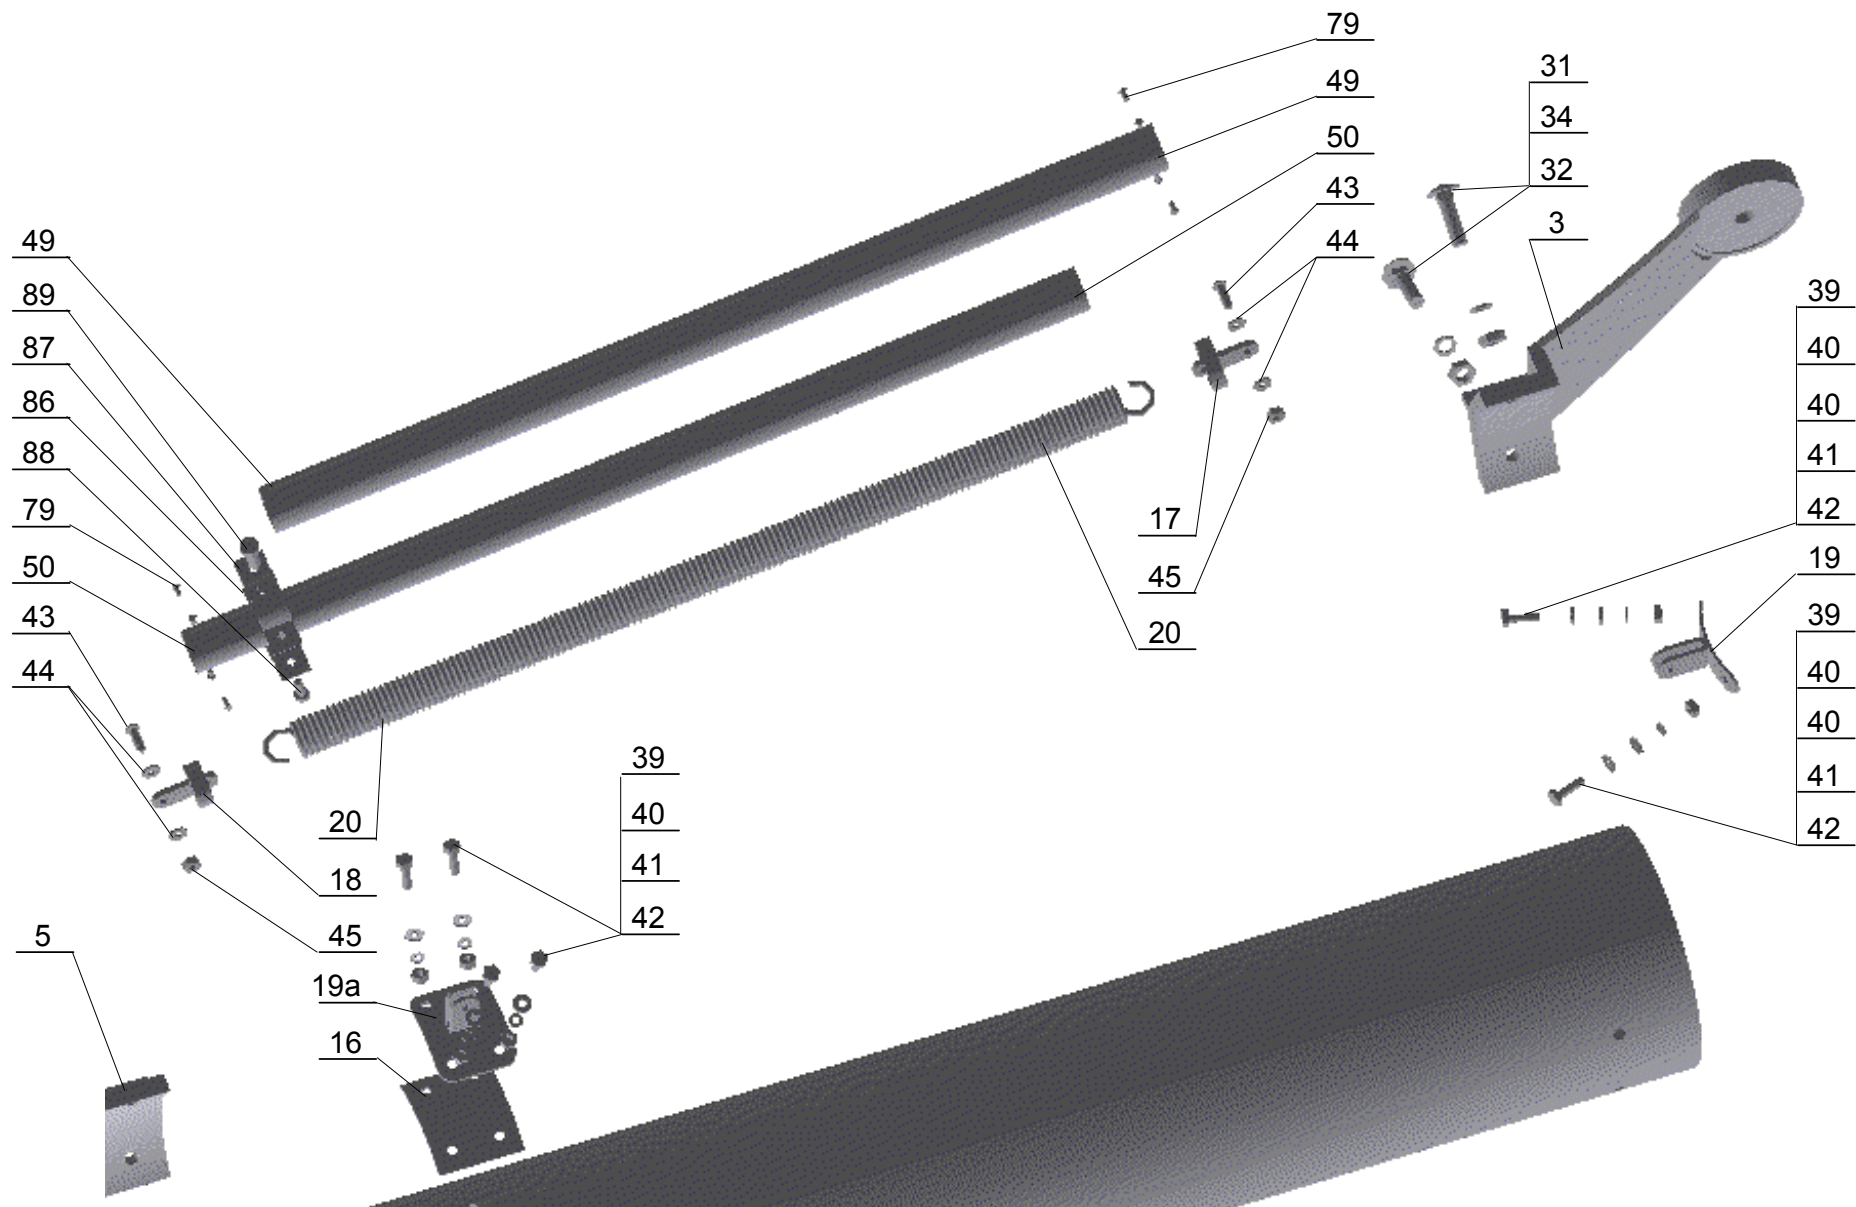

Drawing 11. (6" and 8" arm) Spring – Wall Mounted version.

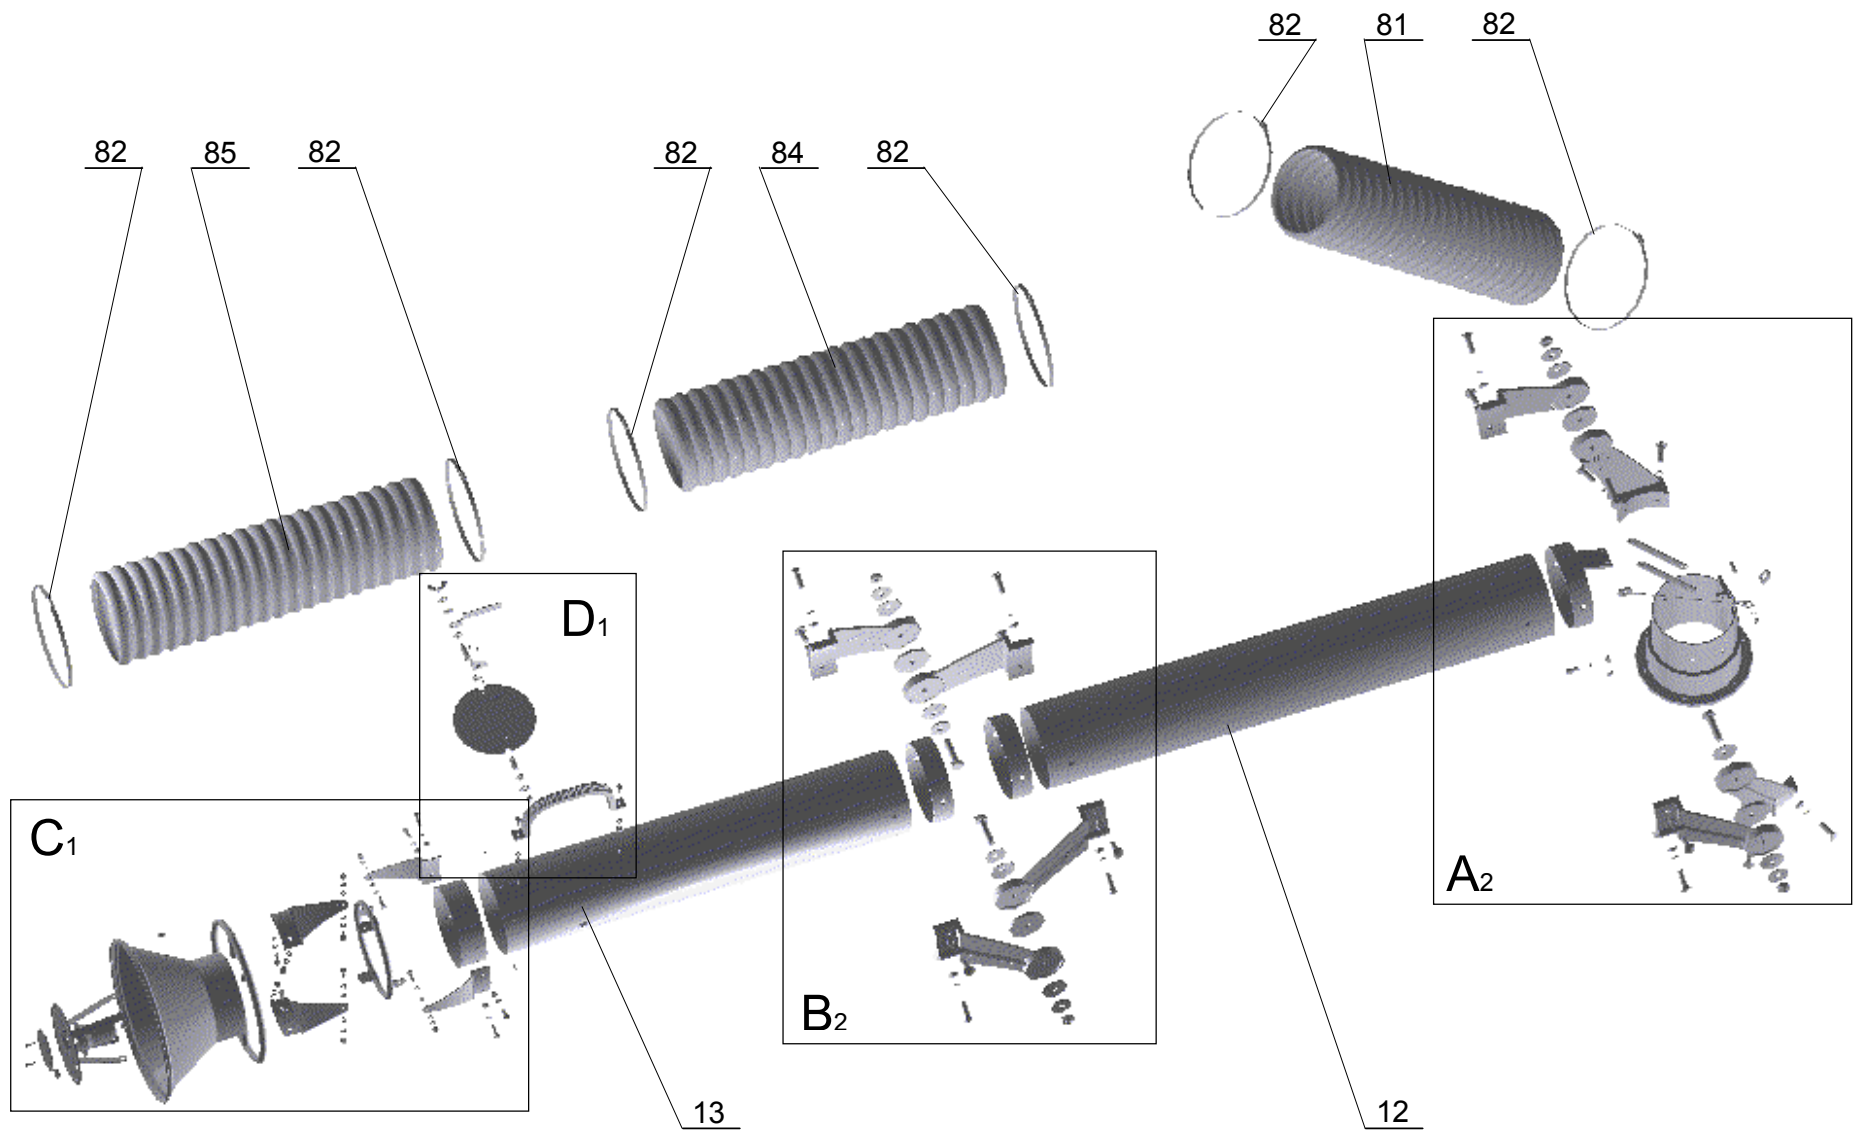


Drawing 12. (6" and 8" arm) EUROVAC arm – standing version.

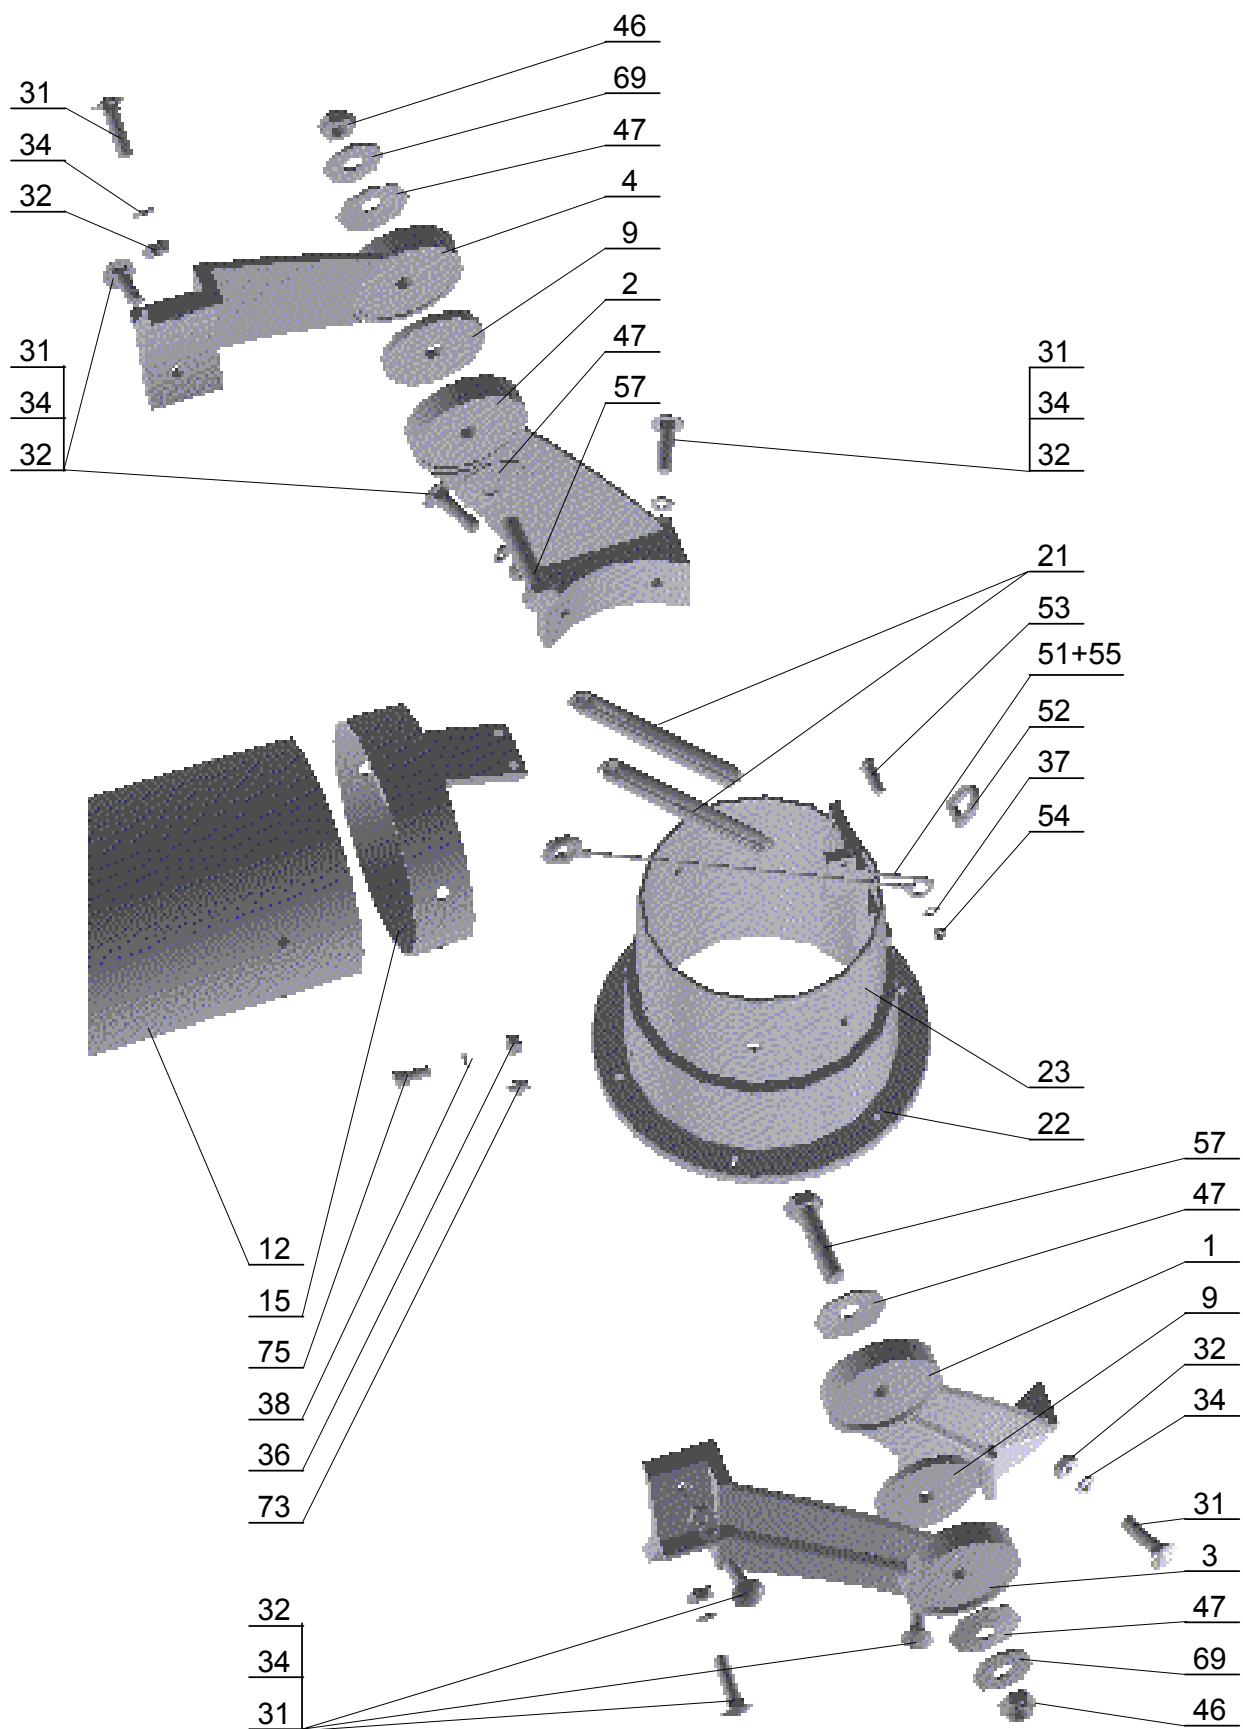


A₂

Drawing 13. (6" and 8" arm) Socket of EUROVAC arm – standing version.

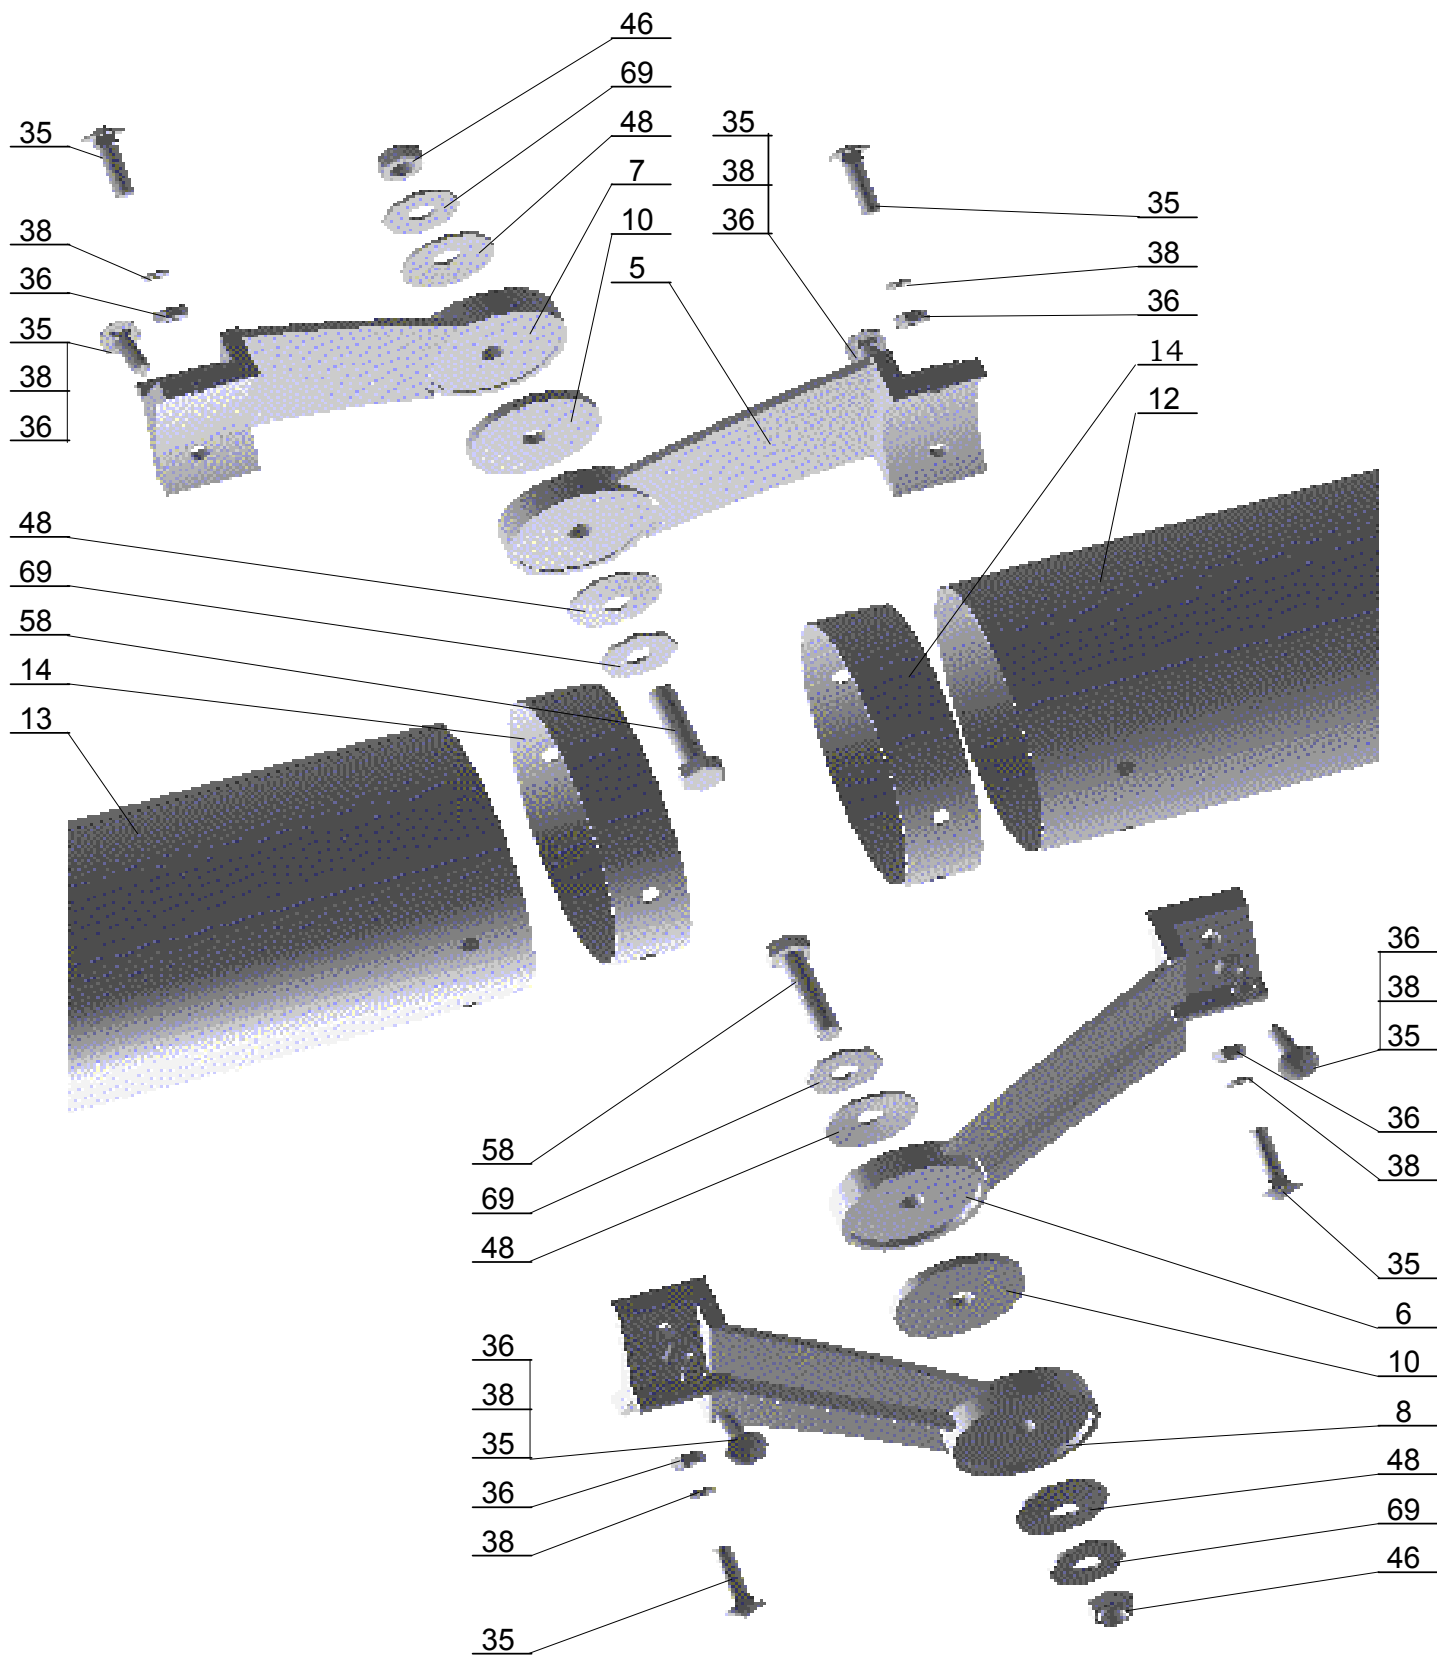


B₂

Drawing 14. (6" and 8" arm) Middle joint – standing version.

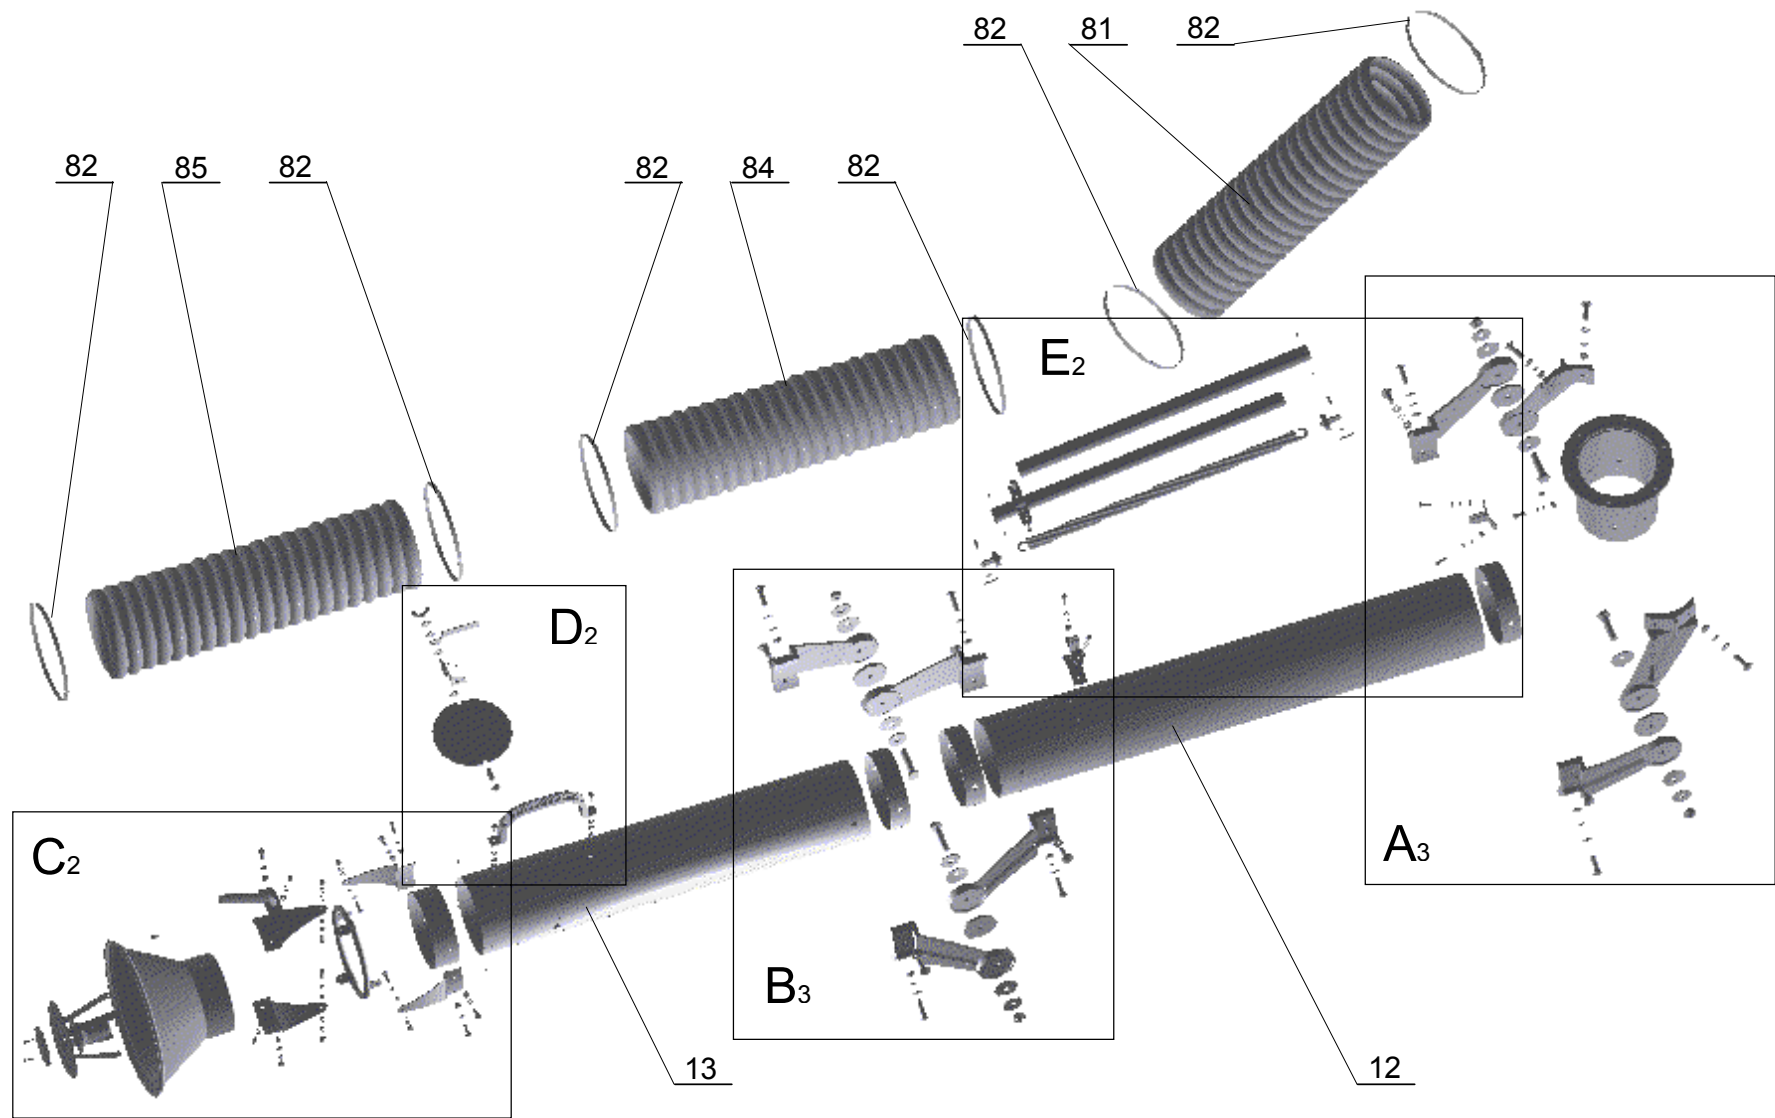


Drawing 15. (4" arm) EUROVAC arm – hanging version.

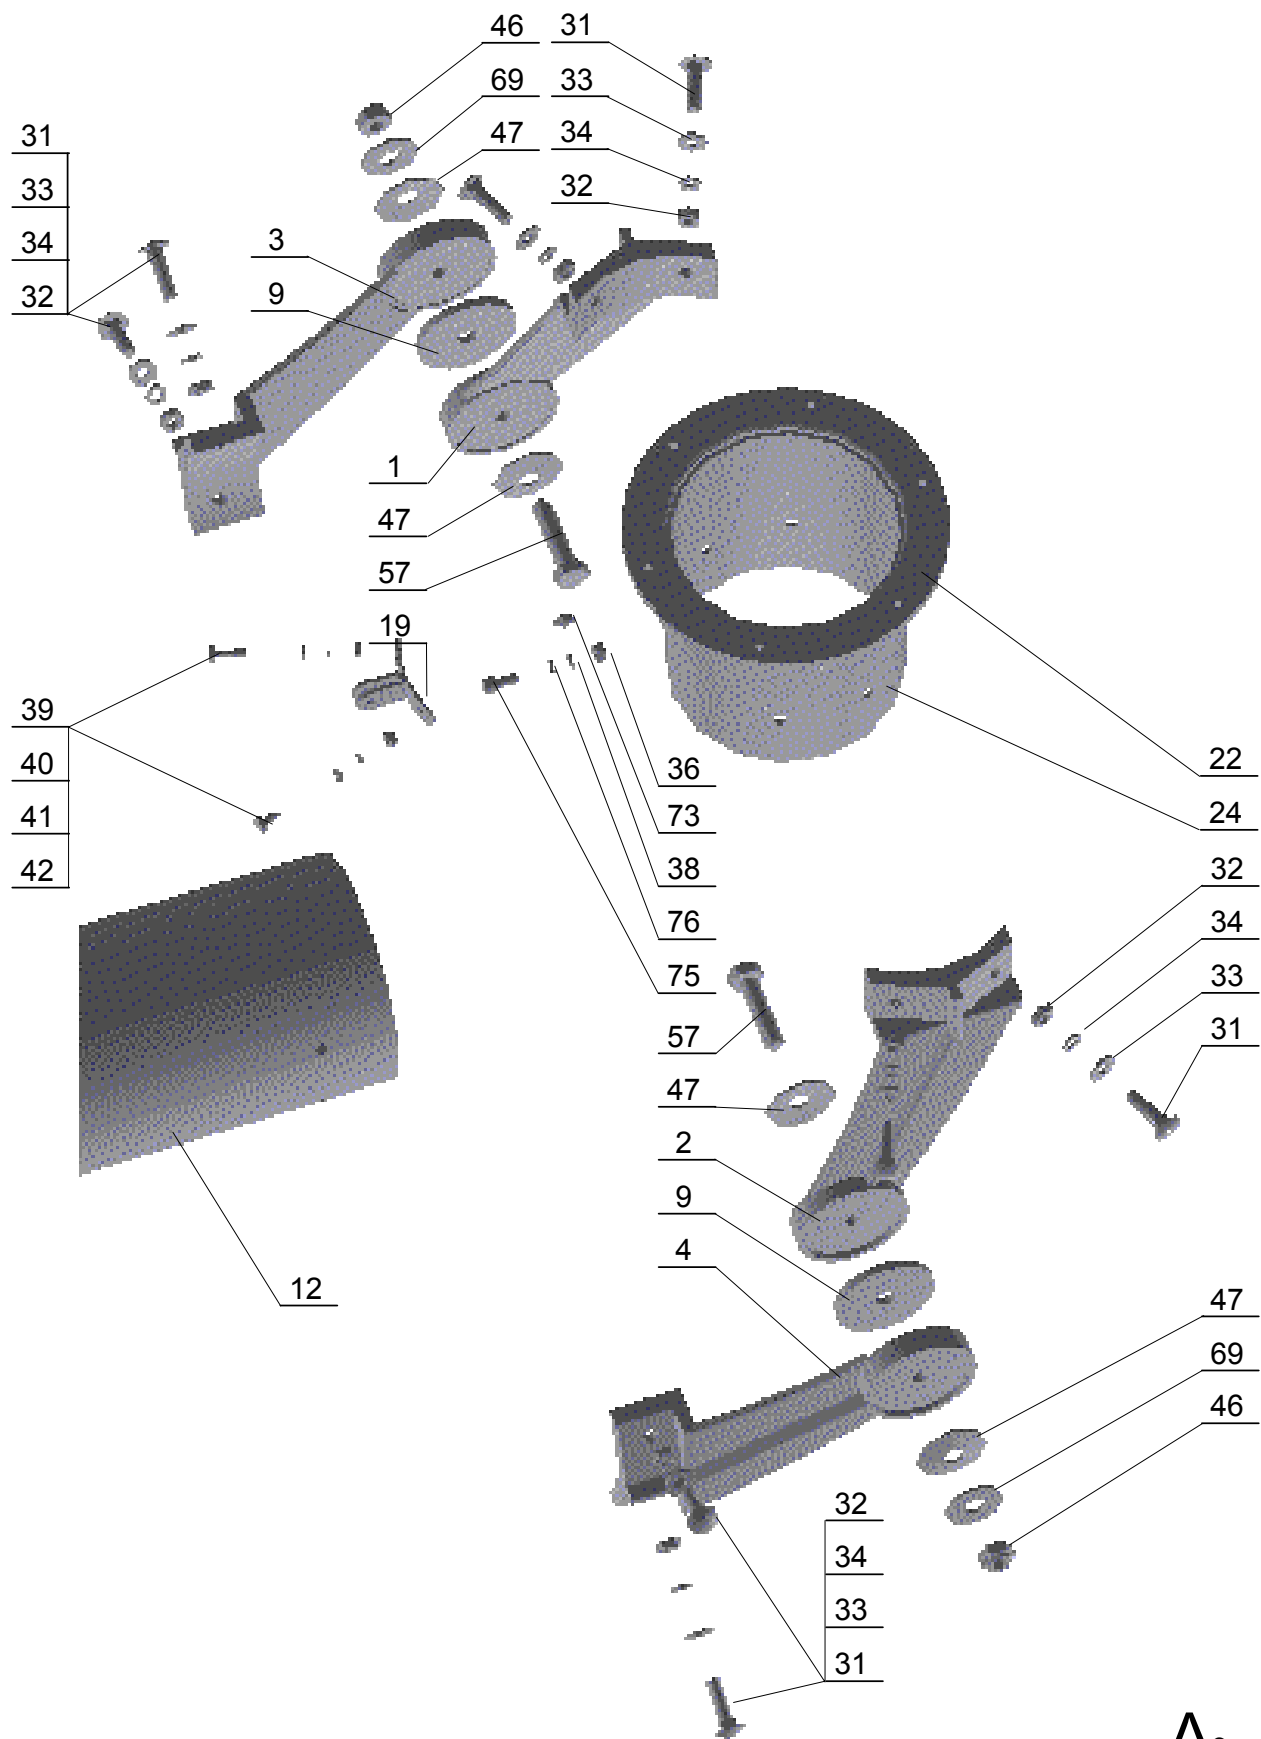


A₃

Drawing 16. (4'' arm) Socket of EUROVAC arm - Wall Mounted version.

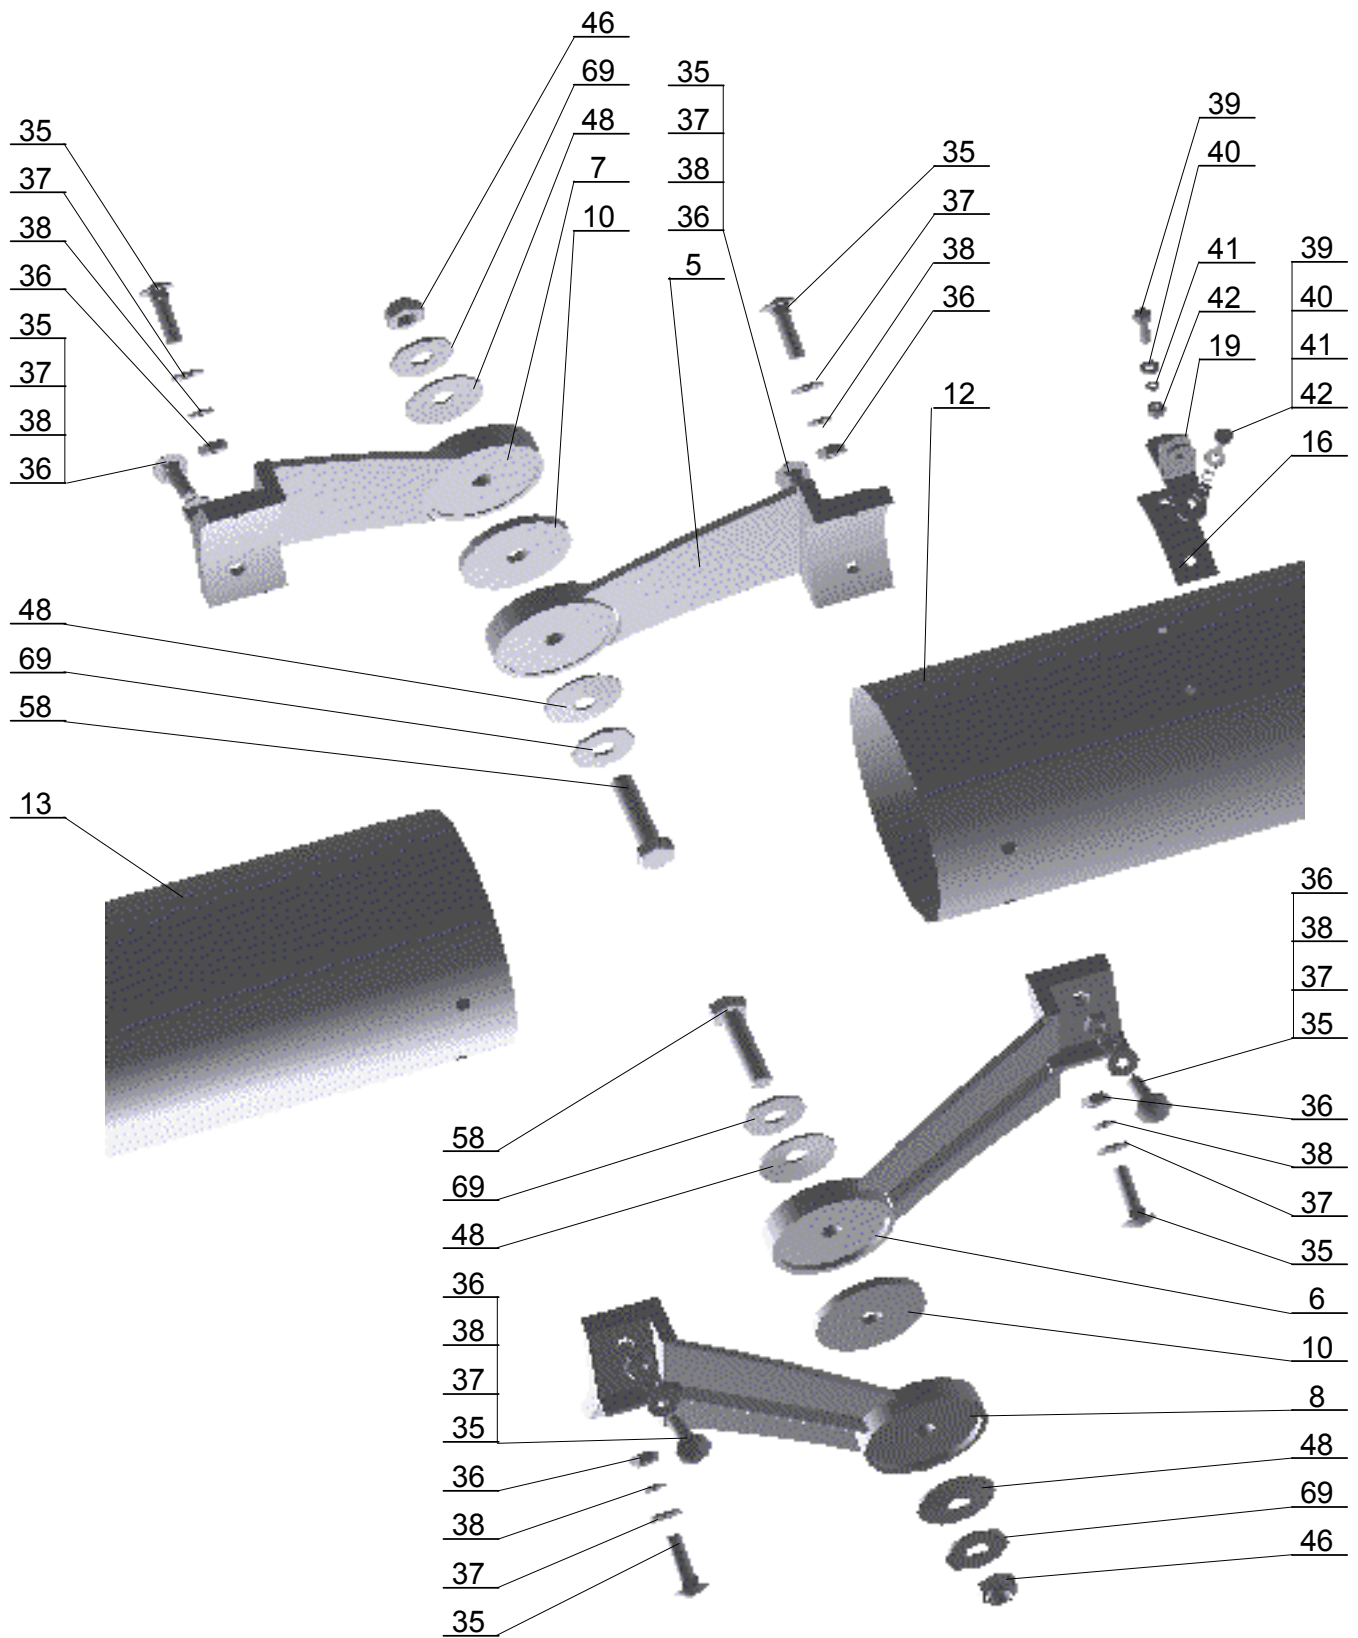


B₃

Drawing 17. (4" arm) Middle joint – Wall Mounted version.

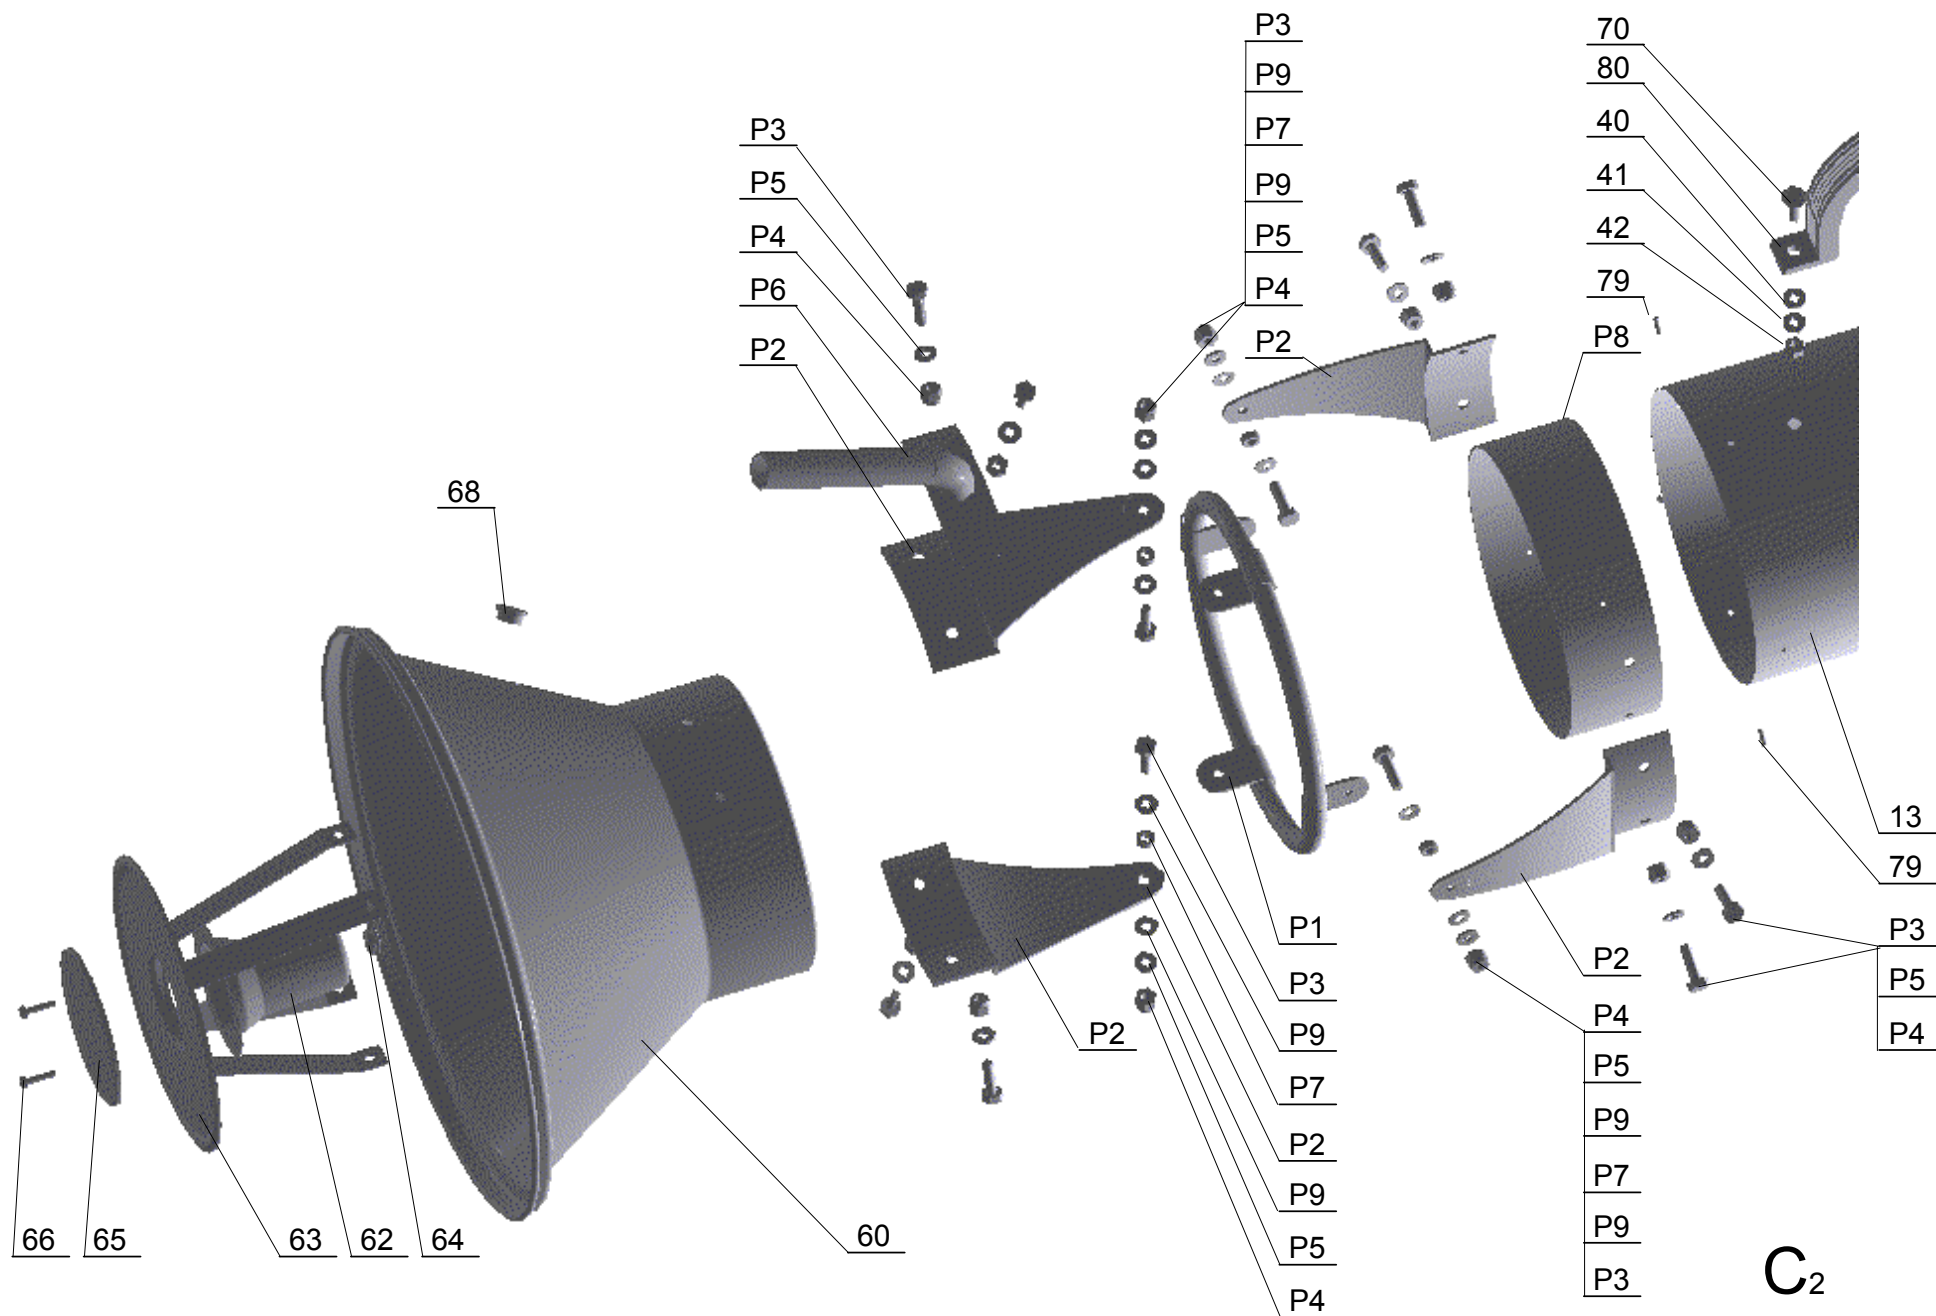


Drawing 18. (4" arm) Hood joint and hood – both Wall Mounted and standing versions.

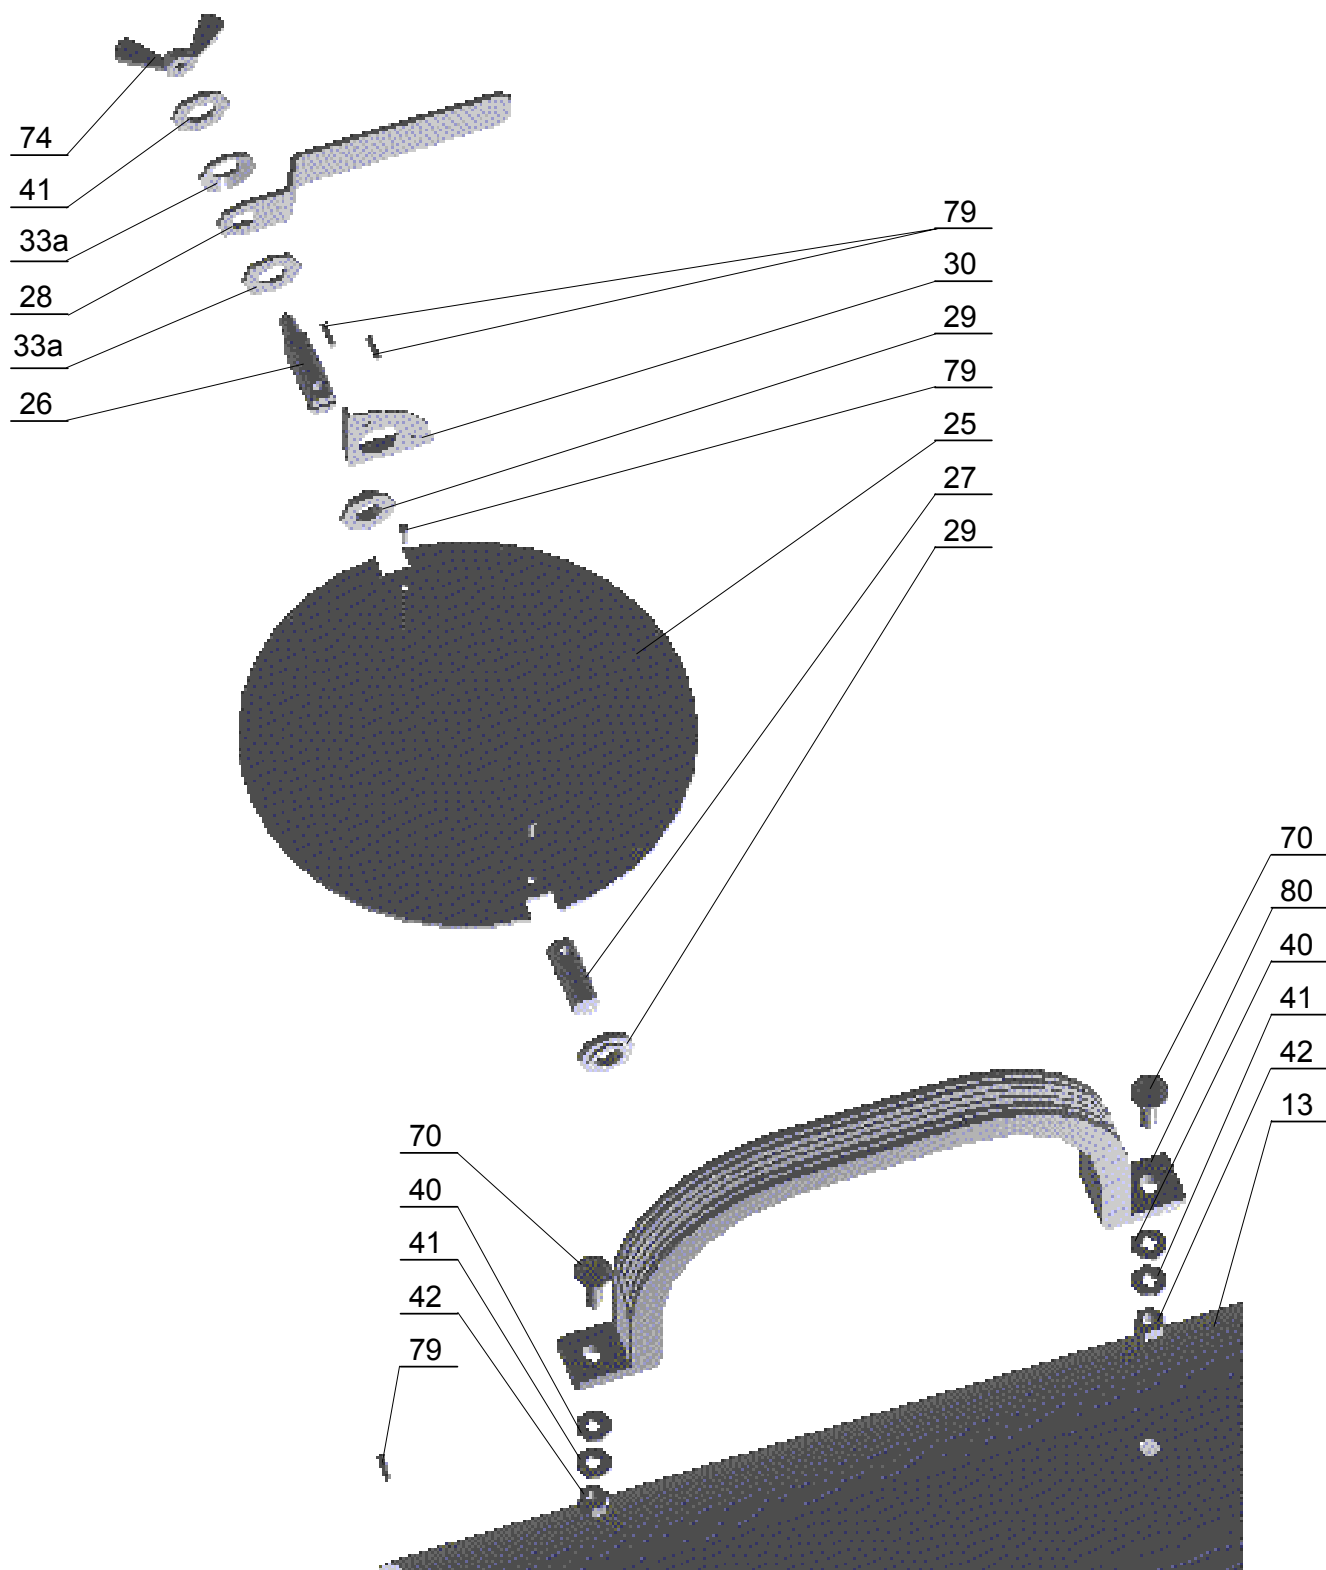


D₂


Drawing 19. (4" arm) Damper – both Wall Mounted and Standing versions.

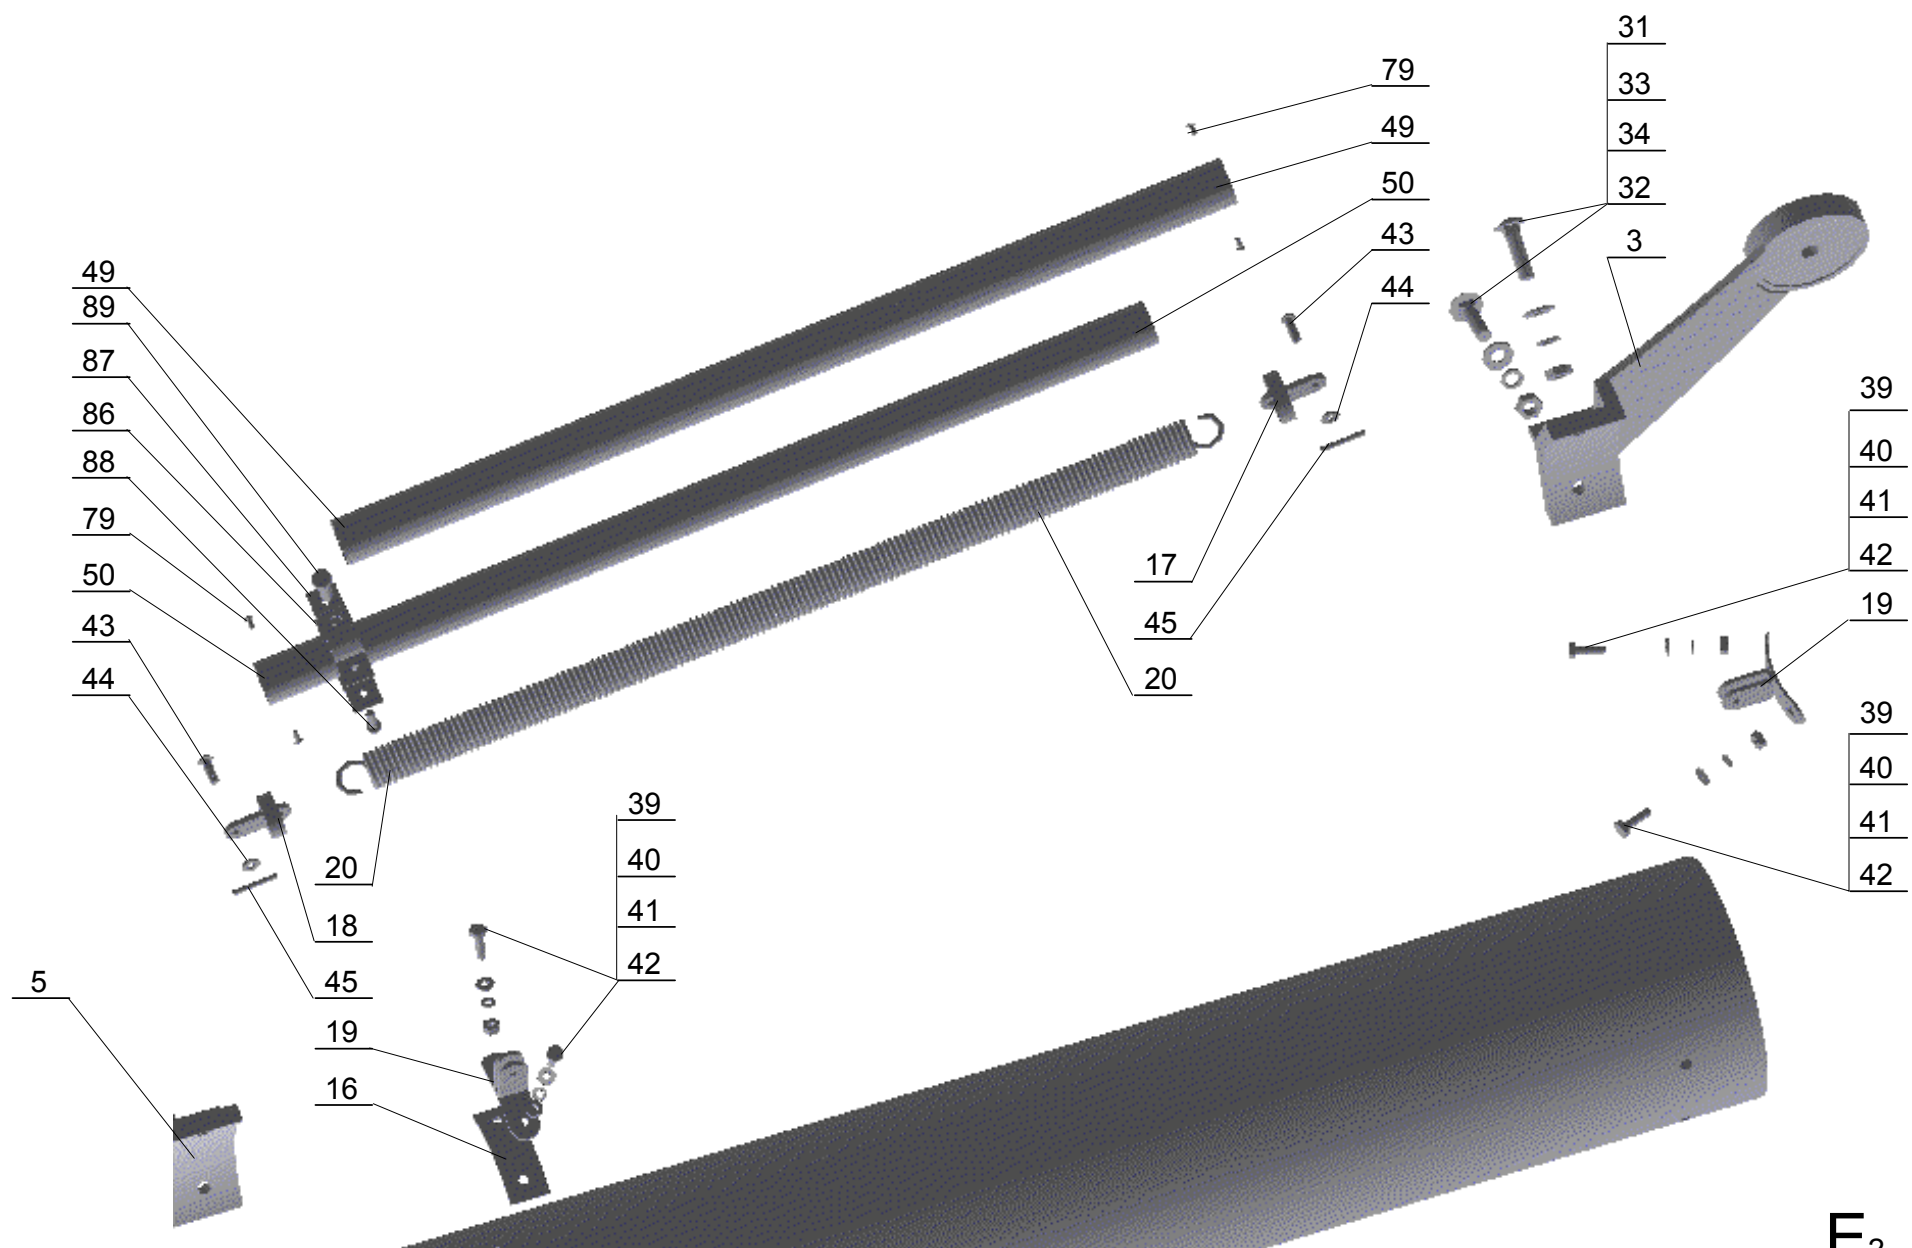

Drawing 20. (4" arm) Pull rod – Wall Mountet version.

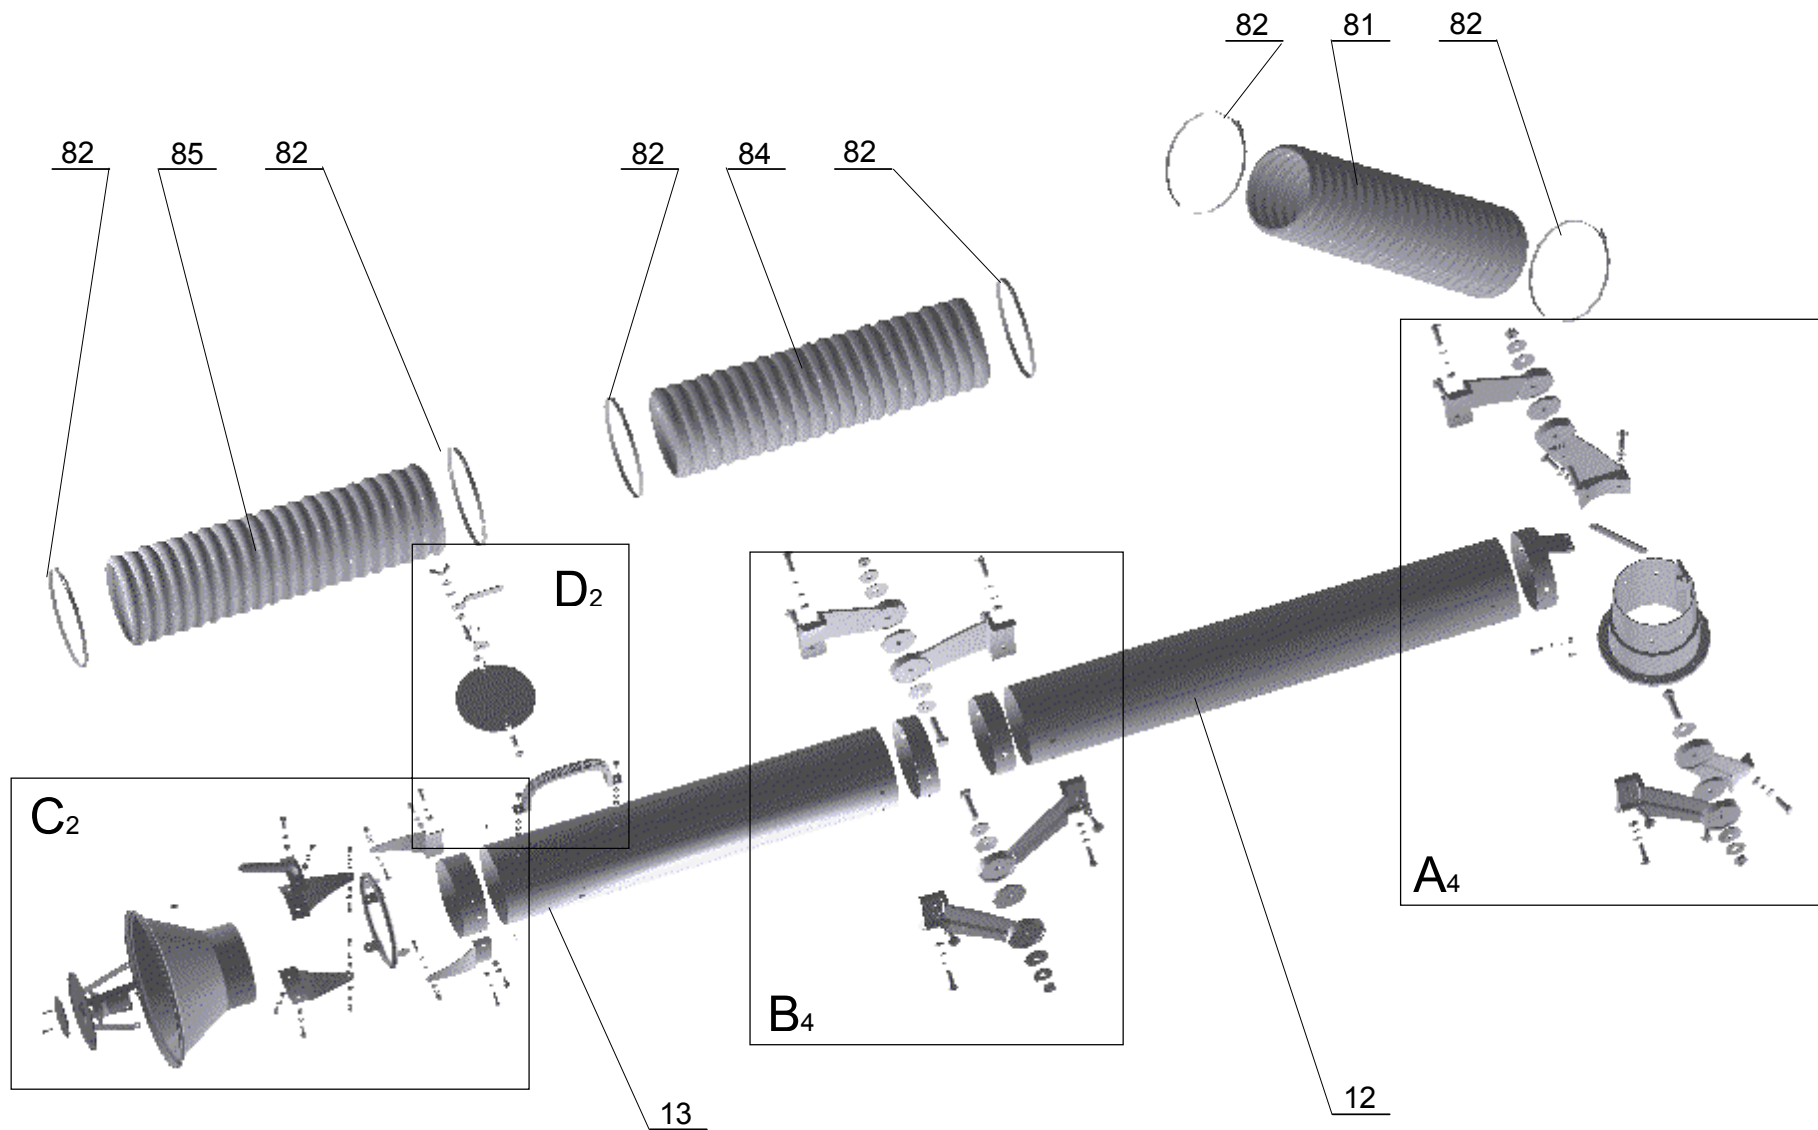


Drawing 21. (4" arm) EUROVAC arm – standing version.

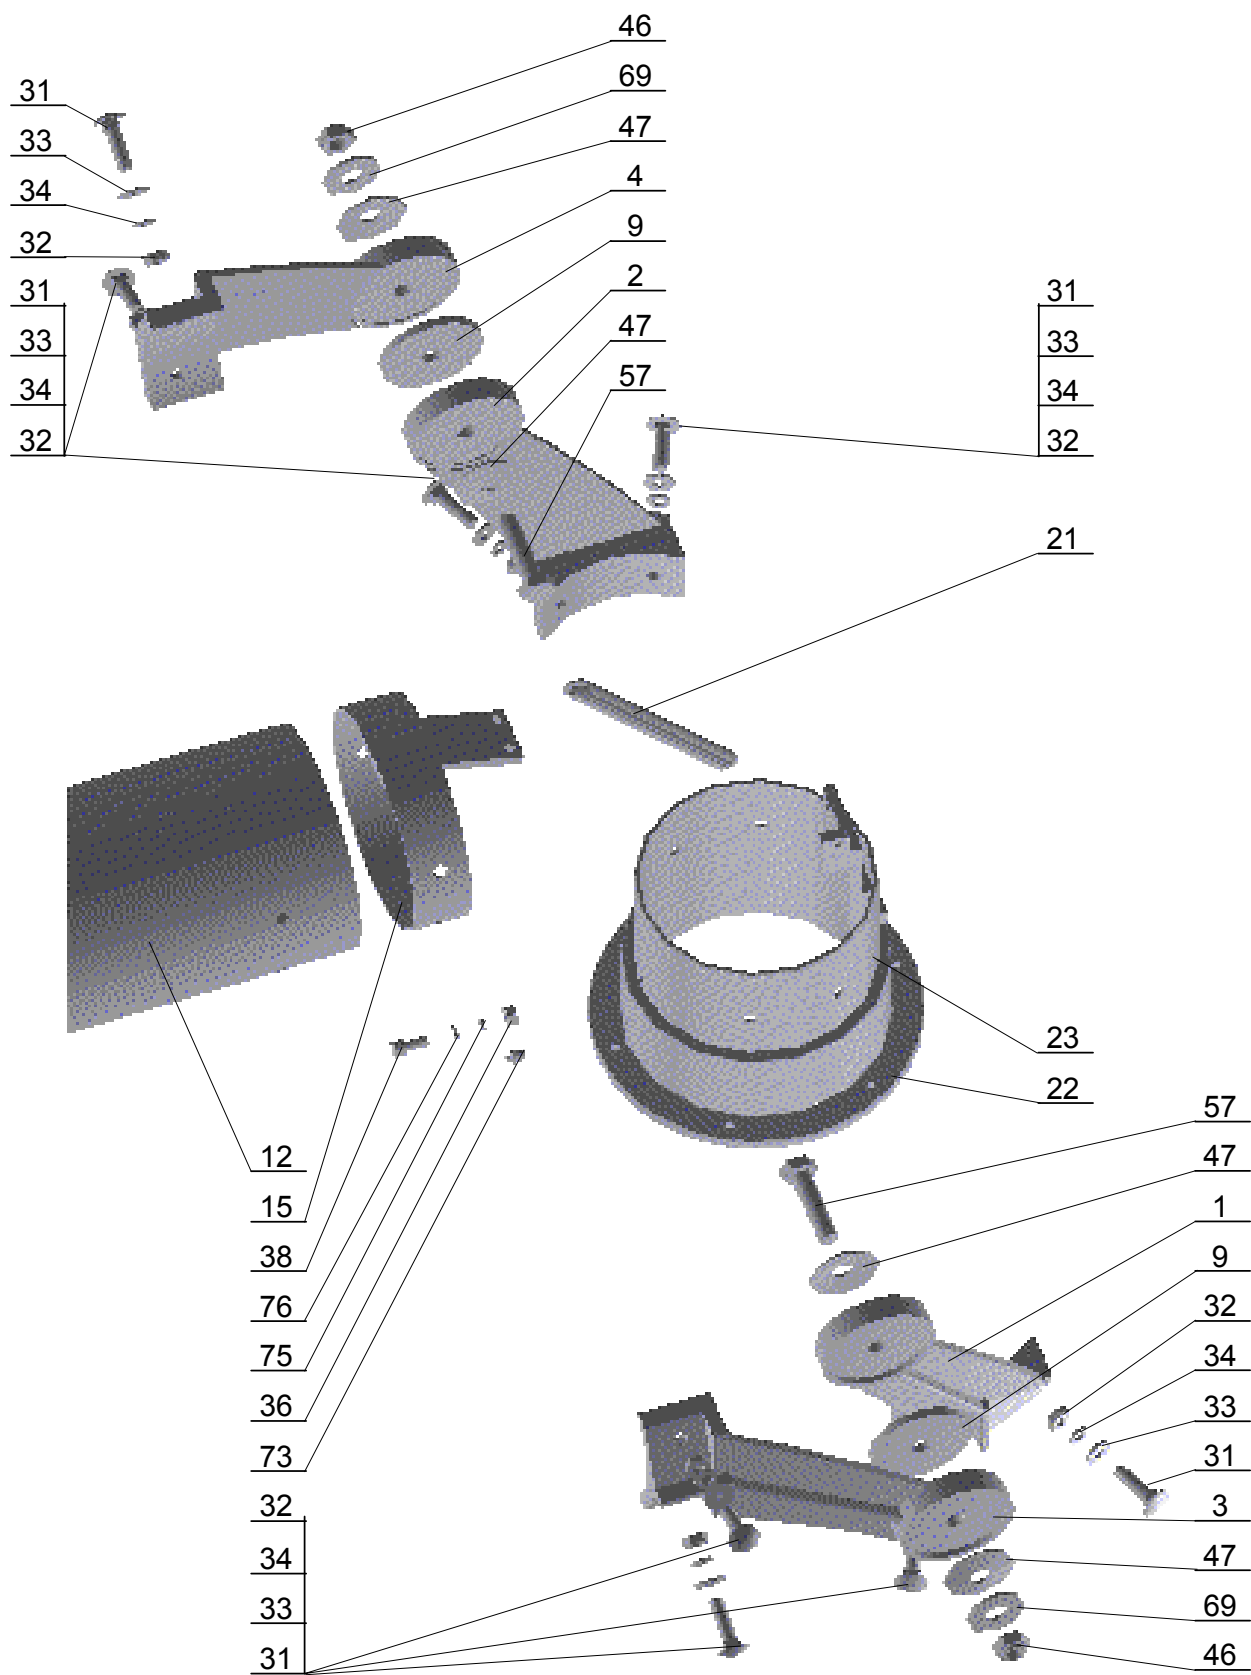

A₄

Drawing 22. (4" arm) Socket of EUROVAC arm – standing version.

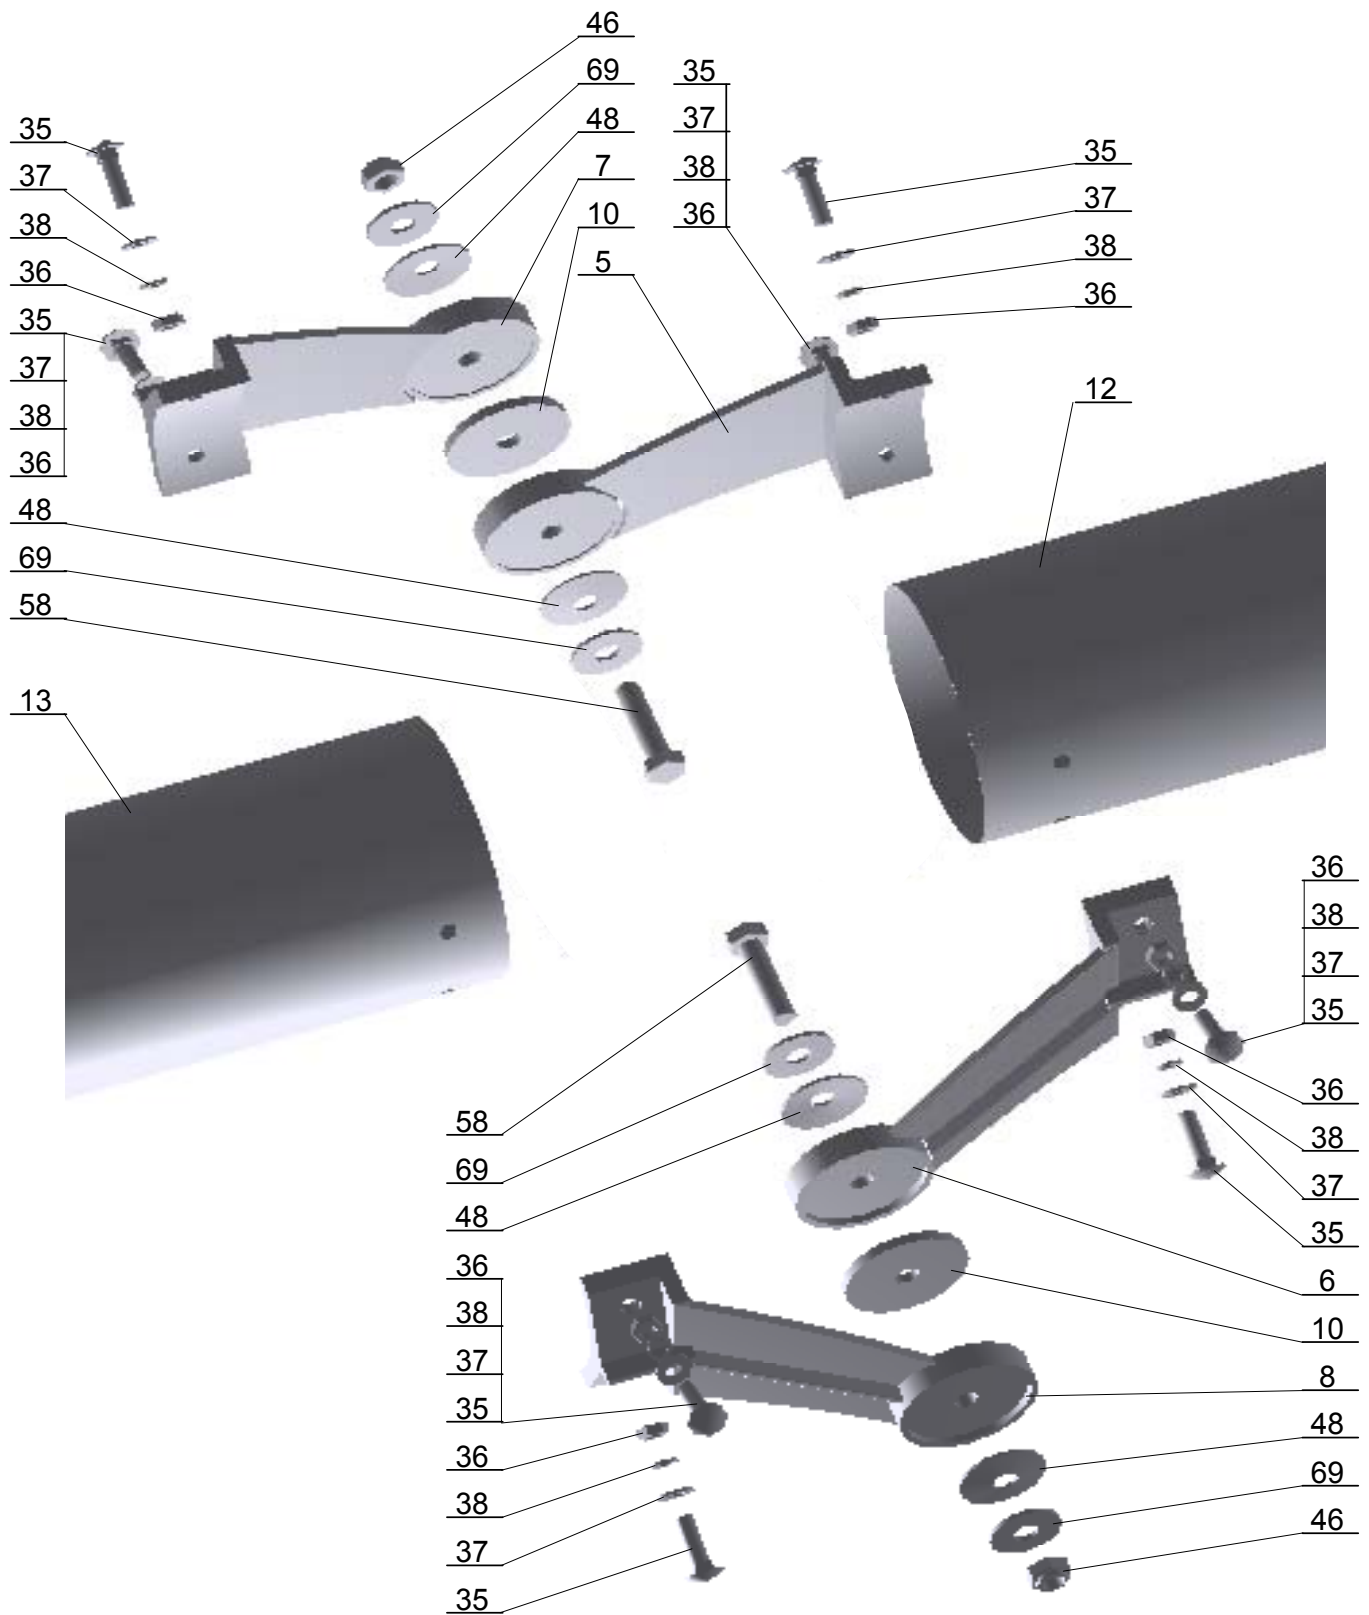

Drawing 23. (4" arm) Middle joint – standing version.